



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832


Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China





Terminal Extractor Tool Instruction Sheet Order No. 63813-1900

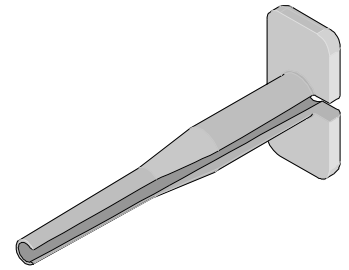

FEATURES

- This Extractor Tool is for the removal of pin and socket terminals from sealed plug and receptacle assemblies.

SCOPE

Products: Contact Pins and Hooded Sockets, 16-18 AWG.

Terminal Series No.	Terminal Order No.			
84590	84590-0020	84590-0025	84590-0026	84590-0031

OPERATION:

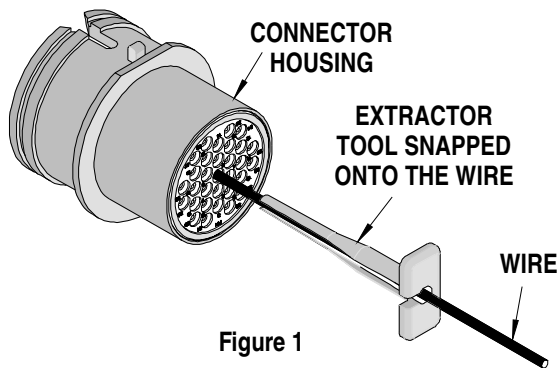


Figure 1

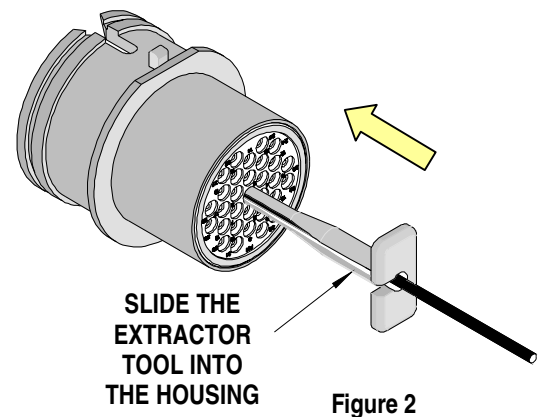


Figure 2

1. Snap the Extractor Tool over the wire of the contact to be removed. See Figure 1.
2. Slide the tool along the wire and into the connector housing. As the tool enters the housing, do not twist the tool or insert it at an angle.
3. Continue to push the tool into the housing until it engages the contact and resistance is felt. See Figure 2.
4. While holding the wire against the Extractor Tool, gently pull the wire, tool, and contact out of the connector. If the contact cannot be pulled back, the Extractor Tool needs to be pushed farther into the connector to fully release the latches. See Figure 3.

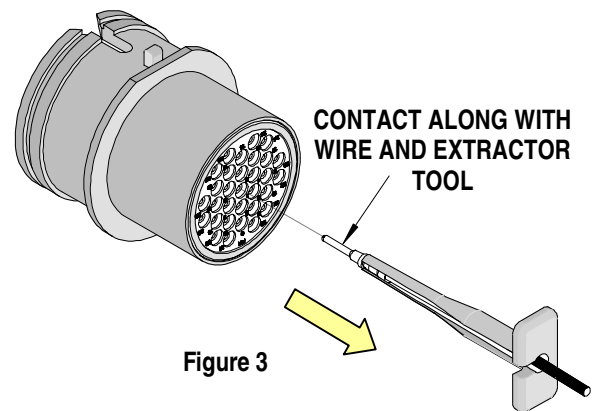


Figure 3

Americas Headquarters
Lisle, Illinois 60532 U.S.A.
1-800-78MOLEX
amerinfo@molex.com

Far East North Headquarters
Yamato, Kanagawa, Japan
81-462-65-2324
feninfo@molex.com

Far East South Headquarters
Jurong, Singapore
65-6-268-6868
fesinfo@molex.com

European Headquarters
Munich, Germany
49-89-413092-0
eurinfo@molex.com

Corporate Headquarters
2222 Wellington Ct.
Lisle, IL 60532 U.S.A.
630-969-4550
Fax: 630-969-1352

Visit our Web site at <http://www.molex.com>