

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China











SPECIFICATION SHEET FineAdjust Applicator 63861-4000 REVISION A

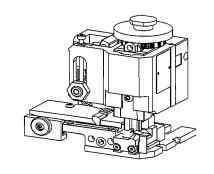

SCOPE

Wir	Wire Size		Insulation Diameter		Strip Length	
Awg	(mm²)	mm	(in)	mm	(in)	
26	(0.12)	0.80-1.45	(.031057)	2.80-3.30	(.110130)	
28	(0.08)	0.80-1.45	(.031057)	2.80-3.30	(.110130)	
	Awg	Awg (mm²) 26 (0.12)	Awg (mm²) mm 26 (0.12) 0.80-1.45	Awg (mm²) mm (in) 26 (0.12) 0.80-1.45 (.031057)	Awg (mm²) mm (in) mm 26 (0.12) 0.80-1.45 (.031057) 2.80-3.30	

DEFINITION OF TERMS

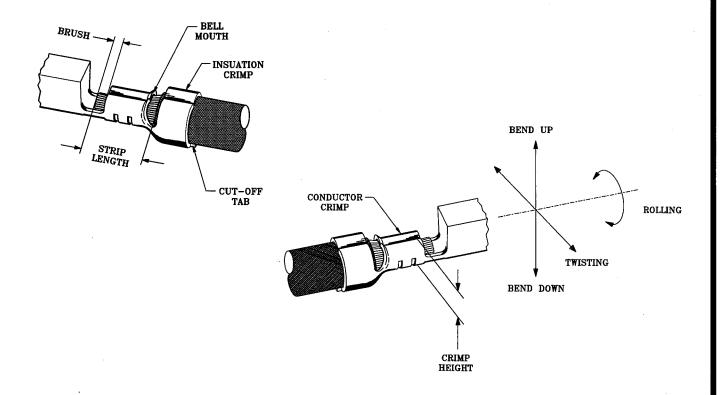

The above terminal drawing is a generic terminal representation. It is not an image of a terminal listed in the scope

Page 1 of 4 UNCONTROLLED COPY

SPECIFICATIONS

Terminal Series No.	Bellı	Bellmouth		Cut-Off Tab Max.		Conductor Brush	
	mm	(in)	Front mm (in)	Rear mm (in)	mm	(in)	
90119-012*	0.20-0.50	(.008020)	0.15 (.006)	0.15 (.006)	0.00-1.00	(.000039)	

Terminal S	Series No.	Bend Up	Bend Down	Twist	Roll	Punch W	idth mm
		De	egree	Deg	ree	Conductor	Insulation
90119-012*		3	3	3	8	1.10	1.40

The above specifications are guidelines to an optimum crimp.

CONDITIONS

After crimping, the conductor profile should measure the following.

Terminal Series	Wire	Wire Size		Crimp Height		Pull Force Min	
	Awg	(mm²)	mm	(in)	N	(lbs)	
90119-012*	26	(0.12)	0.59-0.65	(.023026)	13.3	(3.0)	
90119-012*	28	(0.08)	0.54-0.60	(.021024)	8.9	(2.0)	
				,			

Pull Force measured with no influence from the insulation crimp

Page 2 of 4 UNCONTROLLED COPY

PARTS LIST

Item Number	Order Number	Eng Number	Description	Qty	Kit Part
1	634441116	634441116	Conductor Punch	1	Y
2	634451128	634451128	Conductor Anvil	1	Y
3	634461462	634461462	Insulation Punch	1	Y
4	634451425	634451425	Insulation Anvil	1	Y
5	634430003	634430003	Cut-Off Plunger	2	Y
6	634430012	634430012	Front Plunger Retainer	1	Y
16	634431402	634431402	Cut-off Die Blade	1	Y
20	634431002	634431002	Rear Plunger Retainer	1	Y
7	11-24-1067	4996-4	Cut-Off Plunger Spring	2	
8	11-40-4039	8302-5	Front Plunger Striker	1	
9	634430021	634430021	Lower Tooling Key	1	
10	634436003	634436003	Rear Cover	1	
11	11-18-4083	60707-8	Front Cover	1	
13	11-18-4020	60704-8	Wire Stop	1	
15	638004900	638004900	FineAdjust Applicator	1	
32	634433060	634433060	Rear Plunger Striker	1	
36	634432107	634432107	Front Spacer	1	
37	634432105	634432105	Rear Spacer	1	
38	11-24-1149	4996-37	Shank	1	
39	11-40-4274	8331-8	Hold Down Blade	1	
42	11-17-0022	1739-21	Hold Down Spring	1	<u>-</u>
. 70	638614070	638614070	Tool Kit (All "Y" Items)	0	·-·


NOTES

- 1. We recommend an extra perishable tooling kit be maintained at your facility.
- 2. Verify tooling alignment by manually cycling the press and Applicator before crimping under power.
- 3. Slugs, Terminals, Dirt and Oil should be kept clear of work area.
- 4. This applicator should only be used in a press with a shut height of 135.8 mm (5.346"). Tooling damage could result at a lower setting.
- 5. ** CAUTION** To prevent injury never operate this Applicator without the guarding supplied with the press or wire processing machine in place. Reference the press or wire processing manufacturer's instruction manual.
- 6. Wear safety glasses at all times.

Page 3 of 4 UNCONTROLLED COPY

ASSEMBLY DRAWING

The drawing below is a generic drawing representation. Some detail may not be shown. The FineAdjust applicator assembly and parts list can be found in the FineAdjust manual.

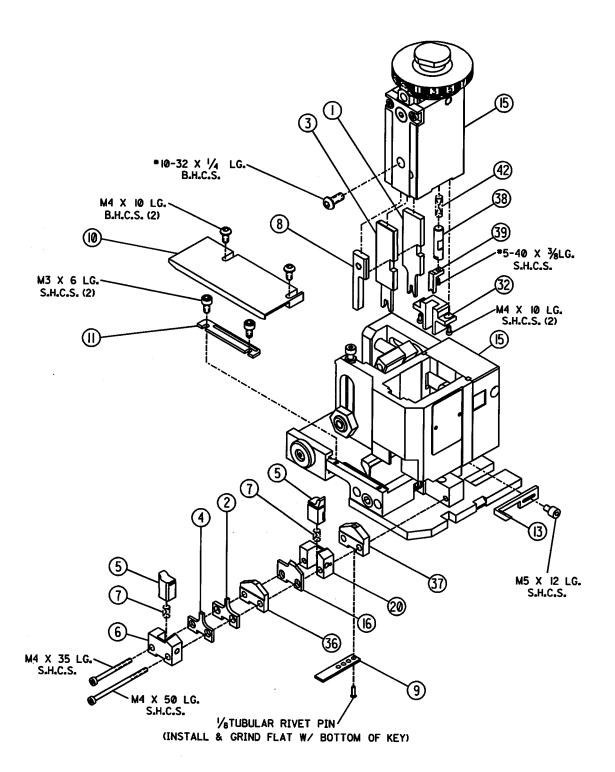

Page 4 of 4 UNCONTROLLED COPY