



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



## Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



# DVMEGA Raspberry PI Radio


## Installation manual

The DVMEGA RPI radio is a modem that fits direct onto the Raspberry PI GPIO connector.

### ***A. Mounting the DVMEGA RPI radio onto the Raspberry PI.***

Step 1.

Place spacer on bottom of PCB. Place the 2 washers between spacer and PCB.

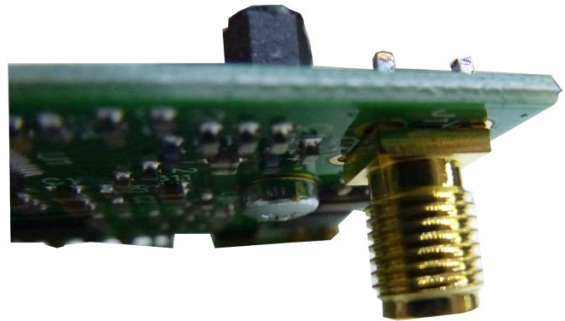


Step 2.

Place DVMEGA board on Raspberry PI.




Singleband Radio

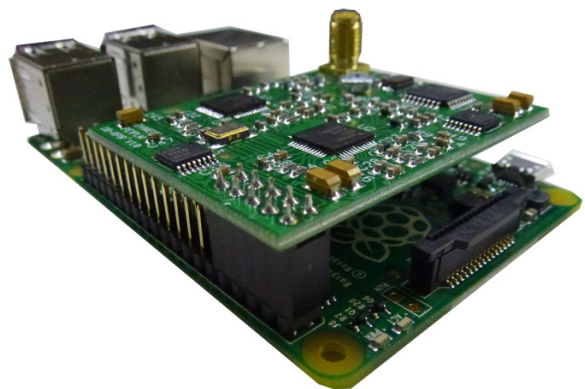

Dualband Radio

Step 3.

Raspberry B+ and later models do not have the hole to fix the DVMEGA on the Raspberry PCB, the spacer has to be fixed with some glue on the Raspberry PCB.

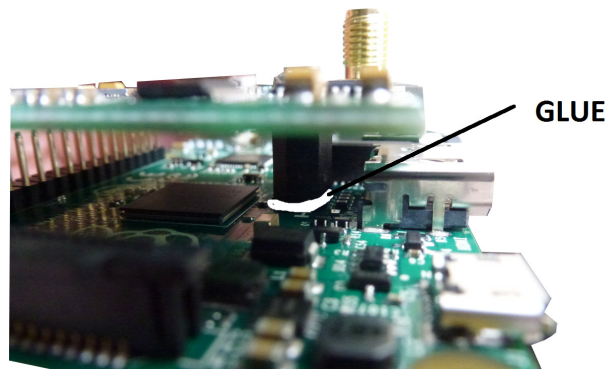

### ***B. Enable serial port.***

Next SD Card images have enabled the serialport by default. For these images you can skip Chapter B.

3Star (Dutch) : <http://wiki.nlreflector.nl/index.php?title=Kzu-distributie>

Western D-Star : <http://www.westerndstar.co.uk/html/downloads.html>

VK4TUX : [dvrptr.net/vk4tux/od\\_vk4tux\\_images/RPI2/tux\\_RPI2\\_KDE\\_FC21\\_ultix.img.zip](http://dvrptr.net/vk4tux/od_vk4tux_images/RPI2/tux_RPI2_KDE_FC21_ultix.img.zip)

Maryland : <http://maryland-dstar.org/html/raspiberry.html>

If your image is not in the above list you have to enable the serial port for your own use first. There are two files that need to be modified.

- First, disable the boot up and diagnostic output to the serial port.

`sudo nano /boot/cmdline.txt`

- and remove the two options referring to the serial port.

So, this:

```
dwc_otg.lpm_enable=0 console=ttyAMA0,115200 kgdboc=ttyAMA0,115200 console=tty1  
root=/dev/mmcblk0p2 rootfstype=ext4 elevator=deadline rootwait
```

becomes this:

```
dwc_otg.lpm_enable=0 console=tty1 root=/dev/mmcblk0p2 rootfstype=ext4  
elevator=deadline rootwait
```

- Press CTRL "X"

- Press "Y"

- Press enter

- Second, disable the login prompt.

`sudo nano /etc/inittab`

- find the line near the end.

```
T0:23:respawn:/sbin/getty -L ttyAMA0 115200 vt100
```

- and delete it or comment it out by putting a # at the start of the line.

```
#T0:23:respawn:/sbin/getty -L ttyAMA0 115200 vt100
```

- Press CTRL "X"

- Press "Y"

- Press enter

- Reboot Raspberry and the serial port will now be free for your exclusive use.

### ***C. Setting Ircddbgateway and D-Star repeater package***

#### Download Ircddbgateway and D-Star repeater image

Software packages are available as an SD card image for Raspberry PI. These are available from next locations :

3Star (Dutch) : <http://wiki.nlreflector.nl/index.php?title=Kzu-distributie>

Western D-Star : <http://www.westerndstar.co.uk/html/downloads.html>


VK4TUX : [dvrptr.net/vk4tux/od\\_vk4tux\\_images/RPI2/tux\\_RPI2\\_KDE\\_FC21\\_ultix.img.zip](http://dvrptr.net/vk4tux/od_vk4tux_images/RPI2/tux_RPI2_KDE_FC21_ultix.img.zip)

Maryland : <http://maryland-dstar.org/html/raspiberry.html>

Use always the latest version and check documentation of particular image for how to update to latest version.


#### Configuration D-Star repeater software..

For proper operation, at least the Callsign and Modem Tab has to be set. The other settings can be done as desired.

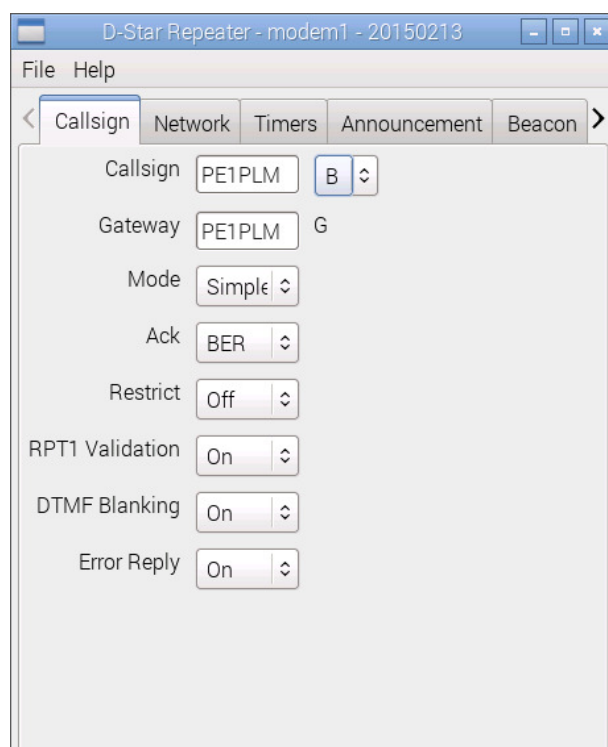


- Callsign and module (B) must be identical in D-Star repeater and ircDDBGateway. Module character depends on the frequency band in use.

- RPT1 Validation must be On.

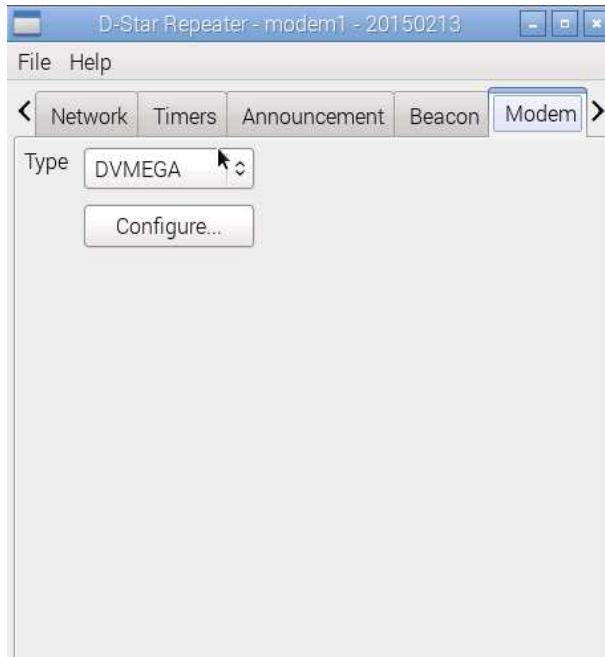

- Select DVMEGA as modem.
- Click the Configure button.

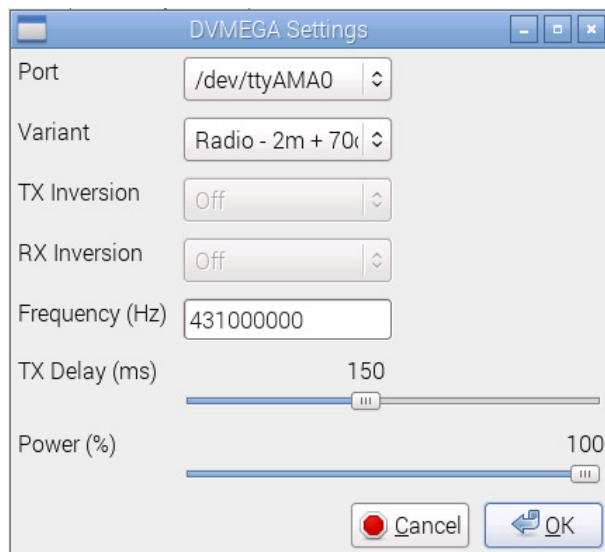


- Select comports AMA0. This is the comports available on the GPIO connector.
- Set Variant to Radio - 2m + 70cm.
- Set desired frequency, in the 2m or 70cm band. In case of a Singleband Radio 2m frequencies will be accepted but will not work since it is a UHF Radio only.
- Set TX delay to approx. 150 ms.

- Make sure that you save the changes before you close the configuration window.  
FILE -> SAVE -> click OK.

- Detailed information related to the other settings can be found at :  
<https://groups.yahoo.com/neo/groups/pcrepeatercontroller/files/Documentation/>

## Configuration ircDDBGateway software.

For proper operation, at least next tabs has to be set. The other settings can be done as desired.

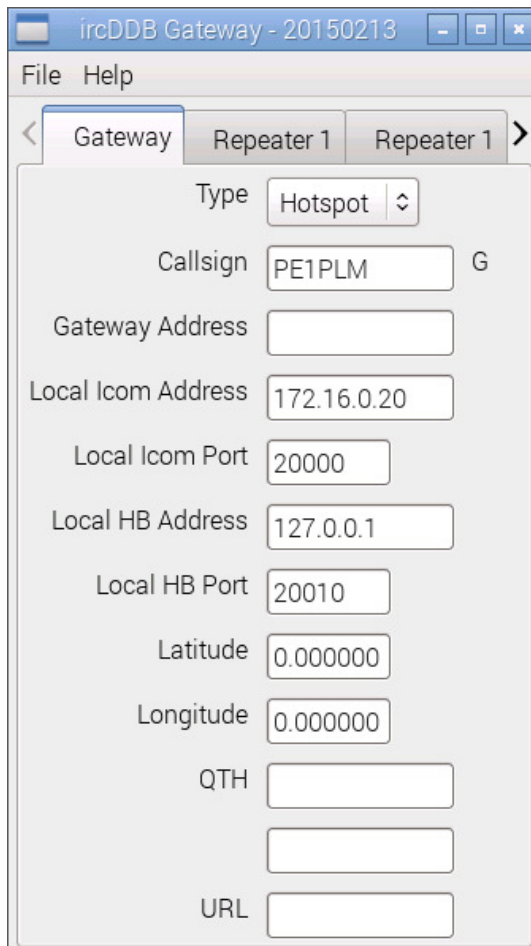

The screenshot shows the 'ircDDB Gateway - 20150213' window with the 'Gateway' tab selected. The configuration fields are as follows:

Field	Value
Type	Hotspot
Callsign	PE1PLM G
Gateway Address	
Local Icom Address	172.16.0.20
Local Icom Port	20000
Local HB Address	127.0.0.1
Local HB Port	20010
Latitude	0.000000
Longitude	0.000000
QTH	
URL	


- At least Type and Callsign have to be set.




The screenshot shows the 'ircDDB Gateway - 20150213' window with the 'Repeater 1' tab selected. The configuration fields are as follows:

Field	Value
Band	B
Type	Homebrew
Address	127.0.0.1
Port	20011
Bands	0 0 0
Reflector	DCS007 B
Startup	Yes
Reconnect	Never

- Band must be set to the same modules as set in the D-Star repeater software.

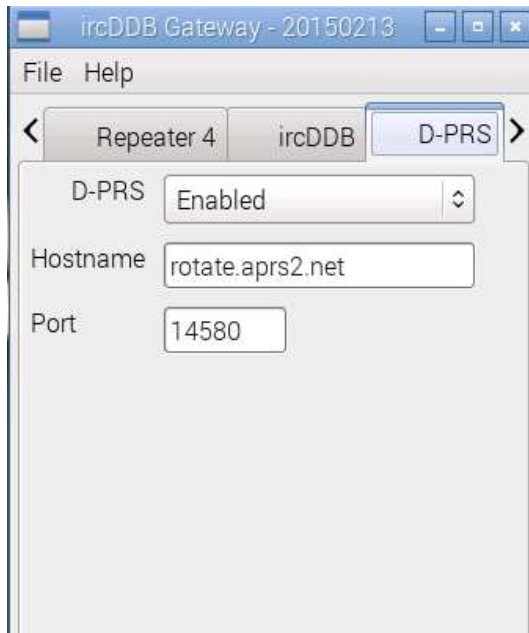

- Enable D-PRS when you like to pass GPS data to [www.aprs.fi](http://www.aprs.fi)

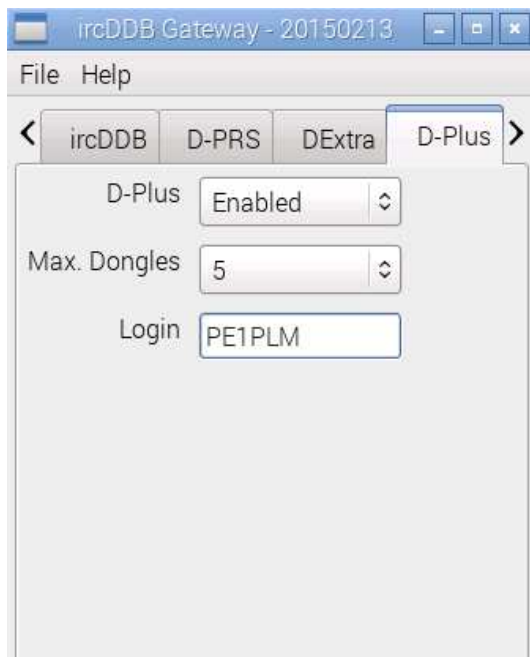

- Enable D-Plus when you make use of REFXXX reflectors.
- Portforwarding of some ports is needed for proper functionality. You can find detailed info on : <http://www.k6jm.com/portforwarding.htm>

- Make sure that you save the changes before you close the configuration window.  
FILE -> SAVE -> click OK.

- Detailed information related to the other settings can be found at :  
<https://groups.yahoo.com/neo/groups/ircDDBGateway/files>

- Reboot the Raspberry.

- The hotspot is now ready to use.