



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts,Customers Priority,Honest Operation,and Considerate Service",our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China





Massive Arcade Button with LED - 100mm Blue

PRODUCT ID: 1189



. Description

OMG WATCH OUT! This 100mm diameter arcade button with a **16mm deep plastic base** is so massive and inviting it may collapse upon itself and form a black hole from which not even light can escape! Until it does, however, it's ready for all sorts of pressing and pushing. Science has shown no one can resist pressing its shiny surface and saying "beep!". We've seen these on some games of skill in arcades, they're easy to mount on nearly any kind of enclosure. They're not waterproof or weatherproof, so best used indoors.

This button has a domed blue plastic cover with a black retaining ring around it. There's an optional LED included that will light up the button. The LED has a built-in resistor so you can run it up to 12V but given the massive size and shallow depth of the button, it doesn't illuminate the entire button face evenly. The button activates a common arcade microswitch (included), the switch contacts are normally open. When the button is pressed, the contacts close.

Technical Details

