# mail

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



## Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832 Email & Skype: info@chipsmall.com Web: www.chipsmall.com Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China





Web Site: www.parallax.com Forums: forums.parallax.com Sales: sales@parallax.com Technical: support@parallax.com Office: (916) 624-8333 Fax: (916) 624-8003 Sales: (888) 512-1024 Tech Support: (888) 997-8267

### 4x4 Matrix Membrane Keypad (#27899)

This 16-button keypad provides a useful human interface component for microcontroller projects. Convenient adhesive backing provides a simple way to mount the keypad in a variety of applications.

#### **Features**

- Ultra-thin design
- Adhesive backing
- Excellent price/performance ratio
- Easy interface to any microcontroller
- Example programs provided for the BASIC Stamp 2 and Propeller P8X32A microcontrollers

#### **Key Specifications**

- Maximum Rating: 24 VDC, 30 mA
- Interface: 8-pin access to 4x4 matrix
- Operating temperature: 32 to 122 °F (0 to 50°C)
- Dimensions: Keypad, 2.7 x 3.0 in (6.9 x 7.6 cm) Cable: 0.78 x 3.5 in (2.0 x 8.8 cm)

#### **Application Ideas**

- Security systems
- Menu selection
- Data entry for embedded systems





#### How it Works

Matrix keypads use a combination of four rows and four columns to provide button states to the host device, typically a microcontroller. Underneath each key is a pushbutton, with one end connected to one row, and the other end connected to one column. These connections are shown in Figure 1.



Figure 1: Matrix Keypad Connections

In order for the microcontroller to determine which button is pressed, it first needs to pull each of the four columns (pins 1-4) either low or high one at a time, and then poll the states of the four rows (pins 5-8). Depending on the states of the columns, the microcontroller can tell which button is pressed.

For example, say your program pulls all four columns low and then pulls the first row high. It then reads the input states of each column, and reads pin 1 high. This means that a contact has been made between column 4 and row 1, so button 'A' has been pressed.

#### **Connection Diagrams**

#### Figure 2

For use with the BASIC Stamp example program listed below.



#### **BASIC Stamp<sup>®</sup> Example Code**

The example code below displays the button states of the 4x4 Matrix Membrane Keypad. It uses the Debug Terminal, which is built into the BASIC Stamp Editor software. The software is a free download from www.parallax.com/basicstampsoftware.

```
' 4x4MatrixKeypad_Demo.bs2
' Display buttons pressed on the 4x4 Matrix Membrane Keypad
' Author: Parallax HK Engineering
' {$STAMP BS2}
' {$PBASIC 2.5}
           VAR Nib
                                          ' Variable space for row counting
row
column
           VAR Nib
                                           ' Variable space for column counting
           VAR Word
                                           ' Variable space to store keypad output
keypad
keypadOld VAR Word
                                           ' Variable space to store old keypad output
temp
           VAR Nib
                                           ' Variable space for polling column states
                                           ' Clear Debug Terminal
DEBUG CLS
GOSUB Update
                                           ' Display keypad graphic
DO
  GOSUB ReadKeypad
                                          ' Read keypad button states
  DEBUG HOME, BIN16 keypad, CR, CR,
                                          ' Display 16-bit keypad value
             BIN4 keypad >> 12,CR,
                                          ' Display 1st row 4-bit keypad value
                                          ' Display 2nd row 4-bit keypad value
              BIN4 keypad >> 8, CR,
              BIN4 keypad >> 4, CR,
                                          ' Display 3rd row 4-bit keypad value
              BIN4 keypad
                                           ' Display 4th row 4-bit keypad value
```

```
IF keypad <> keypadOld THEN
                                            ' If different button is pressed,
   GOSUB Update
                                             ' update the keypad graphic to clear
 ENDIF
                                             ' old display
 IF keypad THEN
                                            ' Display button pressed in graphic
  GOSUB display
 ENDIF
                                            ' Store keypad value in variable keypadOld
 keypadOld = keypad
LOOP
' -----[ Subroutine - ReadKeypad ]-----
' Read keypad button states
ReadKeypad:
 keypad = 0
 OUTL = %0000000
                                             ' Initialize IO
 DIRL = %00000000
 FOR row = 0 TO 3
   DIRB = %1111
                                            ' Set columns (P7-P4) as outputs
   OUTB = %0000
                                            ' Pull columns low (act as pull down)
   OUTA = 1 << row
                                             ' Set rows high one by one
   DIRA = 1 << row
   temp = 0
                                            ' Reset temp variable to 0
   FOR column = 0 TO 3
                                             ' Set columns as inputs
     INPUT (column + 4)
     temp = temp | (INB & (1 << column)) ' Poll column state and store in temp
   NEXT
   keypad = keypad << 4 | (Temp REV 4) ' Store keypad value
 NEXT
RETURN
' -----[ Subroutine - Update ]------
                                         _____
' Graphical depiction of keypad
Update:
 DEBUG CRSRXY,0,7,
    "+---+", CR,
    "
             | | ,CR,
    "+--
                    -+",CR,
    "
                 | |", CR,
                    -+",CR,
    "+
    "
                 | |",CR,
    " -
                    -+",CR,
    "
                     |", CR,
    "+
                  ---+"
RETURN
' -----[ Subroutine - Display ]-----
' Display button pressed in keypad graphic
Display:
 IF KeyPad.BIT15 THEN DEBUG CRSRXY, 02,08,"1"
IF Keypad.BIT14 THEN DEBUG CRSRXY, 06,08,"2"
IF KeyPad.BIT13 THEN DEBUG CRSRXY, 10,08,"3"
IF Keypad.BIT12 THEN DEBUG CRSRXY, 14,08,"A"
 IF KeyPad.BIT11 THEN DEBUG CRSRXY, 02,10,"4"
 IF Keypad.BIT10 THEN DEBUG CRSRXY, 06,10,"5"
 IF KeyPad.BIT9 THEN DEBUG CRSRXY, 10,10,"6"
 IF Keypad.BIT8 THEN DEBUG CRSRXY, 14,10,"B"
 IF KeyPad.BIT7 THEN DEBUG CRSRXY, 02,12,"7"
 IF Keypad.BIT6 THEN DEBUG CRSRXY, 06,12,"8"
 IF KeyPad.BIT5 THEN DEBUG CRSRXY, 10,12,"9"
```

```
IF Keypad.BIT4 THEN DEBUG CRSRXY, 14,12,"C"
IF KeyPad.BIT3 THEN DEBUG CRSRXY, 02,14,"*"
IF Keypad.BIT2 THEN DEBUG CRSRXY, 06,14,"0"
IF KeyPad.BIT1 THEN DEBUG CRSRXY, 10,14,"#"
IF Keypad.BIT0 THEN DEBUG CRSRXY, 14,14,"D"
RETURN
```

### Propeller<sup>™</sup> P8X32A Example Code

The example code below displays the button states of the 4x4 Matrix Membrane Keypad, and is a modified version of the 4x4 Keypad Reader DEMO object by Beau Schwabe.

Note: This application uses the 4x4 Keypad Reader.spin object. It also uses the Parallax Serial Terminal to display the device output. Both objects and the Parallax Serial Terminal itself are included with the with the Propeller Tool v1.2.7 or higher, which is available from the Downloads link at www.parallax.com/Propeller.

```
{{ 4x4 Keypad Reader PST.spin
Returns the entire 4x4 keypad matrix into a single WORD variable indicating which buttons are
pressed. }}
CON
  _clkmode = xtal1 + pll16x
  NR.I
  text : "Parallax Serial Terminal"
KP : "4x4 Keypad Reader"
VAR
  word keypad
PUB start
  'start term
  text.start(115200)
  text.str(string(13,"4x4 Keypad Demo..."))
  text.position(1, 7)
  text.str(string(13,"RAW keypad value 'word'"))
  text.position(1, 13)
  text.str(string(13, "Note: Try pressing multiple keys"))
  repeat
   keypad := KP.ReadKeyPad
                                 '<-- One line command to read the 4x4 keypad</pre>
   text.position(5, 2)
   text.bin(keypad>>0, 4)
                                'Display 1st ROW
   text.position(5,3)
   text.bin(keypad>>4, 4)
                               'Display 2nd ROW
   text.position(5, 4)
                                'Display 3rd ROW
    text.bin(keypad>>8, 4)
    text.position(5, 5)
                                'Display 4th ROW
    text.bin(keypad>>12, 4)
    text.position(5, 9)
    text.bin(keypad, 16)
                                 'Display RAW keypad value
```

#### **Revision History**

v1.0: original document

v1.1: Updated Figure 1 on page 2

v1.2: Updated Figure 1 on page 2 (again); updated BS2 comments