

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



# Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China









## **Discovery BNC™ Reference Manual**

Revised January 9, 2013 This manual applies to the Discovery BNC rev. B

### **Overview**

The Discovery BNC adapter board is intended to be used with the Analog Discovery™ tool to enable the use of standard BNC terminated test leads and probes. The adapter board enables the user to AC couple or DC couple signals to the oscilloscope in the Analog Discovery.



The Discovery BNC Adapter Board.

#### Features include:

- Standard BNC interface to BNC terminated test leads and oscilloscope probes.
- Selectable AC and DC coupling to oscilloscope probes.
- Selectable 50-ohm or 0-ohm output impedance on Arbitrary Waveform Generator (AWG) channels.

### **Functional Description**

The Discovery BNC adapter board has BNC terminations to each of the two oscilloscope channels on the Analog Discovery. Each channel of the oscilloscope can be selected as AC or DC coupled by adjusting the jumper that is located behind that channel's BNC input connector.

The two AWG channels are equipped with BNC terminations for use with BNC style test leads. Each of the two channels can have either the  $50\Omega$  or the  $0\Omega$  termination selected. This enables the user to match the Analog Discovery's output impedance with either standard 50-ohm test leads or to be directly tied to the lead.

All the remaining signals from the Analog Discovery pass through the adaptor to a female header located on the outer edge of the board.