



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts,Customers Priority,Honest Operation,and Considerate Service",our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



## Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China





Molex Japan Co., Ltd.

INSTRUCTION MANUAL NO.	
IS-0022E	
ISSUED	1985-11-26
REVISED	2005-01-28
REV.	B

# OPERATING MANUAL

## INSERTION EXTRACTION TOOL: 5480, 51024 Housing Series

### Tool Number :57005-6000


### 1. Introduction

This document is prepared so that the tool is properly used.

Please take the time to read this manual, making sure you understand the operating procedures described herein before attempting to operate the tool.

### 2. Specifications

Applicable housing number	5480, 51024
Applicable terminal number	5479

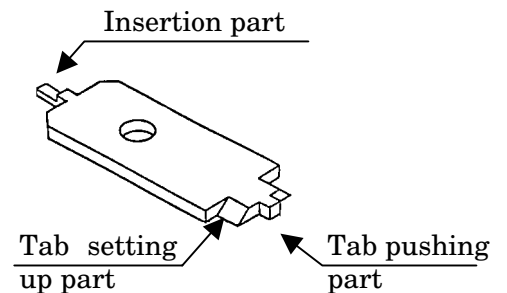

### 3. Operation steps

No	Operation steps	Explanation figure
1	<p><b>“Insertion”</b></p> <p>The contacting part of a terminal is pushed for the right figure with “the insertion part of a tool.”</p>	
2	<p><b>“Pulling out”</b></p> <p>After “the tab pushing part of a tool” is inserted in the tab window of a housing, the wire is lightly pulled.</p>	
3	<p><b>“Setting up the tab”</b></p> <p>“The tab setting up part of a tool” is pushed between contacting and the tab, and the tab is set up lightly.</p>	

**“Note”** Please insert the terminal pulled out once again after setting up the tab by this tool.