



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts,Customers Priority,Honest Operation,and Considerate Service",our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



Extraction Tool 58113-[]


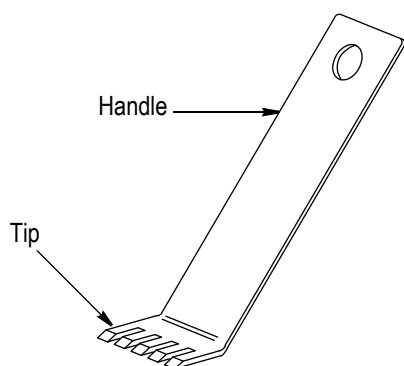 


Figure 1

1. INTRODUCTION

 Extraction Tool 58113-[] is used to extract a pin grid array (PGA) substrate package (device) from a low insertion force (LIF) PGA socket installed onto a printed circuit (pc) board. Read these instructions thoroughly before extracting any devices.



Dimensions in this instruction sheet are in millimeters [with inches in brackets]. Figures are not drawn to scale.

Reasons for reissue of this instruction sheet are provided in Section 6, REVISION SUMMARY.

2. DESCRIPTION

Each tool features a handle and a tip with blades. See Figure 1.

3. USING THE TOOL (Refer to Figure 2)



Make sure that all power to the system is "OFF" before using the tool.

1. Insert the tip of the extraction tool (with the end of the handle above the socket) between the device and socket, then gently lift the handle until that side of the device is raised from the socket.

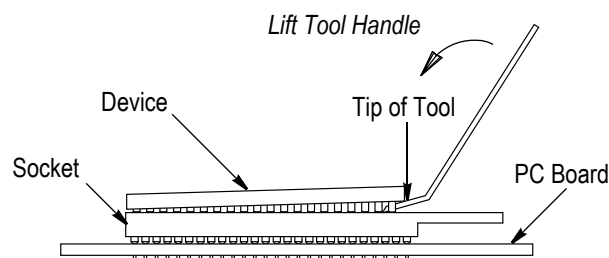 



Figure 2

2. Remove the extraction tool, then insert the tip (as previously described) into the opposite side of the assembly, then gently lift the handle until that side of the device is raised from the socket.

3. Repeat this process for the remaining sides of the assembly until the device is released from the socket.

4. TOOL INSPECTION

 Inspect the tool immediately upon arrival and at regularly scheduled intervals according to Figure 3 to ensure that the tool is not damaged.

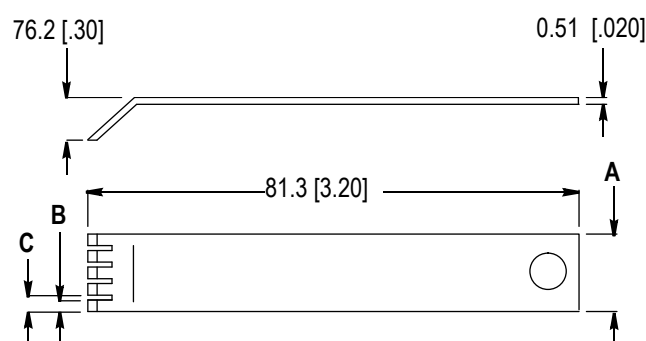

TOOL	NUMBER OF BLADES	DIMENSION		
		A	B Typ	C Typ
58113-1	5	11.7 [.46]	1.52 [.060]	2.54 [.100]
58113-3	10	24.4 [.96]		
58113-4	13	32.0 [1.26]		
58113-5	16	39.6 [1.56]		

Figure 3

5. REPLACEMENT

The extraction tool cannot be repaired. Order replacement tools through your representative, or call 1-800-526-5142, or send a facsimile of your purchase order to 717-986-7605, or write to:

CUSTOMER SERVICE (038-035)
 TYCO ELECTRONICS CORPORATION
 PO BOX 3608
 HARRISBURG PA 17105-3608

6. REVISION SUMMARY

Revisions to this instruction sheet include:

- Updated instruction sheet to corporate requirements