



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



## Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: [info@chipsmall.com](mailto:info@chipsmall.com) Web: [www.chipsmall.com](http://www.chipsmall.com)

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



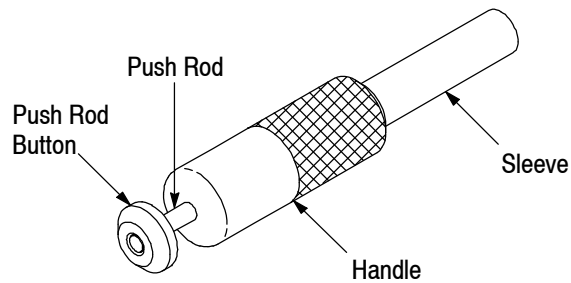


Figure 1

## 1. INTRODUCTION (See Figure 1)

High Current Extraction Tools 679916-1, 679917-1, and 679918-1 are designed to remove High Current Pin and Socket Contacts 193837-[ ] and 193673-[ ] from their housings. Read these instructions thoroughly before using the tool.

### NOTE



*Housings are customer supplied and must be designed to meet specifications by Tyco Electronics.*

## 2. DESCRIPTION

The extraction tool consists of a push rod button, push rod, handle, and sleeve. The sleeve is inserted into the mating face of the housing, depressing the locking lances of the crimped contact and allowing the contact to be extracted from the wire end of the housing.

## 3. EXTRACTION PROCEDURE (See Figure 2)

1. Align the sleeve of the tool with the contact to be removed.

2. Holding the handle, insert the sleeve into the housing cavity until the sleeve bottoms. Allow the push rod to slide out of the handle.

3. While holding the sleeve in position, depress the push rod button. The contact will emerge from the wire end of the housing as the button is depressed; then pull contact free from housing.

### NOTE



*If contact is not easily removed, carefully repeat the extraction procedure.*

## 4. MAINTENANCE AND INSPECTION

It is recommended that the tool be inspected when you receive it and at regularly scheduled intervals. The tool is not repairable, and it should be replaced when it is worn or damaged. Store the extraction tool in a clean, dry place and clean the extraction tool with a soft, lint-free cloth.

Order extraction tools through your Representative, or call 1-800-526-5142, or send a facsimile of your purchase order to 1-717-986-7605, or write to:

CUSTOMER SERVICE (38-35)  
TYCO ELECTRONICS CORPORATION  
PO BOX 3608  
HARRISBURG PA 17105-3608

## 5. REVISION SUMMARY

Revisions to this instruction sheet include:

- Updated instruction sheet to corporate requirements

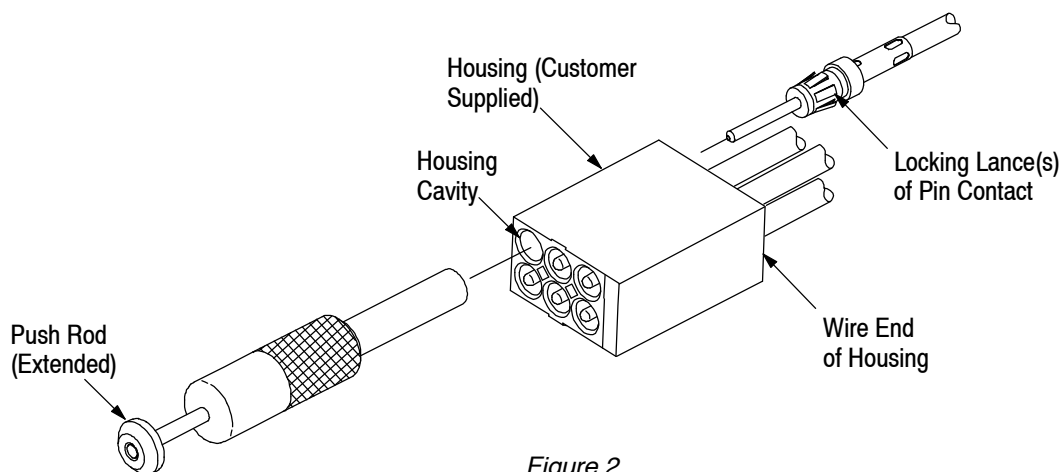


Figure 2