



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



80PK-26 *SureGrip™ Tapered Temperature Probe*

Instruction Sheet

⚠️⚠️ Warning

To avoid electrical shock, do not use this probe when voltages exceeding 24 V ac rms or 60 V dc are present. The probe tip is electronically connected to the output terminals.

Introduction

The 80PK-26 SureGrip™ Tapered Temperature Probe is essentially a bead probe with a handle that can be used as a surface probe. The stainless steel sheath allows the bead to measure temperatures higher than bead probes with flexible leads. The handle also allows you to apply more focused surface pressure without having your hand in close proximity to the source. The 40-inch (1-meter) cable is terminated with a Type K miniature thermocouple connector with 0.792-mm (.312-in) pin spacing. The 80PK-26 can be used with any temperature-measuring instrument that is designed to accept Type K thermocouples and has miniature connector input.

Specifications

Type

K Standard Grade Ni-Cr vs Ni-Al (Chromel vs Alumel)

Measurement Range

-40 °C to 816 °C (-40 °F to 1500 °F)

Accuracy

(With respect to ANSI MC96.1-1982-Standard Limits of Error):

Note

All error calculations should be done in °C, then scaled to °F.

Range	Accuracy (% of reading)
-40 °C to 293 °C (-40 °F to 559.4 °F)	±2.2 °C
293 °C to 816 °C (559.4 °F to 1500 °F)	±0.75 %

Output

@ 25 °C (77 °F) = 1.00 mV (reference junction @ 0 °C)

Seebeck Coefficient

25 °C (77 °F) = 40.50 $\mu\text{V} / ^\circ\text{C}$

Measurement Time

(Time Constant): 3.0 seconds for air moving at 3.33 meters / second (10.9 feet / second) at sea level pressure (5 time constants = 1 complete step change, i.e., 15 seconds)

Maximum Voltage

24 V ac rms or 60 V dc

Maximum Temperature of Tip

816 °C (1500 °F)

Sheath

Material: 304 Stainless Steel

Dimensions

Diameter: 4.8 mm (.19 in)

Length: 20.32 cm (8 in)

Bead (sensor) Sheath

Material: Inconel 600

Dimensions

Diameter: 1.5748 mm (.062 in)

Length: 11.049 mm (.435 in)

Grounding

Junction Welded to Sheath.

Cable

Length: 1 meter (40 in)

Insulation

Material: PVC

Maximum Temperature: 105 °C (220 °F)

Jacket Color: Gray

Conductors

Type: K

Size: AWG #24 stranded (7 strands of #32)

Handle

Material: Hytrel

Maximum Temperature: 125 °C (257 °F)

Connector

Type: Mini-thermocouple connector with .792 mm (.0312 in) pin spacing

Material: Yellow Hytrel

Maximum Temperature: 1.25 °C (257 °F)

Overall Probe Length

31.9 cm (12.55 in) from tip to end of cable strain relief.

Protection

Class 3. Relates solely to insulation and grounding properties defined in IEC 348.

Measurement Considerations

Instrument Compatibility

The 80PK-26 is compatible with any temperature-measuring instrument that's accepts Type K thermocouples, has a miniature thermocouple connector, and has cold reference junction compensation. Accuracy of the temperature-measuring instrument must be considered along with the 80PK-26 accuracy specification to determine the overall accuracy of the combination.

Temperature Limitations

The tip area (thermocouple-sheath) of the 80PK-26 has a continuous temperature rating of 816 °C (1500 °F). However, the opposite end of the sheath nearest the handle should not be subjected to temperatures greater than 125 °C (257 °F). This is the maximum temperature limitation of the handle.

Media Limitations

The stainless steel sheath should not be exposed to halides or sulfides. Even though the sheath to junction transition is sealed, it is not recommended to immerse the probe in liquid or saturated vapor. The 80PK-26 should not be used in reducing atmospheres or in a vacuum. Excess mounting force can deform or crush the bead. With the probe perpendicular to the measurement surface, do not apply more than 12.25 new tons (2.75 pounds-force). Use proportionally less force as the angle to the measurement surface becomes more acute.

Operation

Use the 80PK-26 as follows:

1. Using the miniature (0.312 inch spacing) thermocouple, connect the 80PK-26 to a compatible Type K temperature-measuring instrument.
2. Turn on the measuring instrument, and select the appropriate range and scale.
3. Check the read out on the measuring instrument. With no heat or cold source applied to the bead, the measuring instrument should display the ambient (room) temperature. If the instrument does not read out properly, refer to "Troubleshooting".

Minimizing Thermal Shunting

The 80PK-26 Tapered Temperature Probe should be inserted at least 6.35 cm (2.5 in) into the environment to be measured to minimize the shunting effect of the sheath.

Measuring Technique

Here are some suggestions for improving the accuracy of your temperature measurements:

1. Make sure there is a good connection between the probe and the surface you are measuring by doing any of the following:
 - a. Increase the mounting pressure
 - b. Use an interface agent (such as silicone grease) between the thermocouple probe and the surface you are measuring.
 - c. Use a thermal epoxy to attach the thermocouple.

2. When measuring higher than ambient temperatures, adjust the connection between the probe and the surface until you get the highest temperature reading. To ensure a good connection, see the suggestions above.
3. When measuring lower than ambient temperatures, adjust the connection between the probe and the surface until you obtain the lowest temperature reading. To ensure a good connection, see the suggestions above.
4. When measuring near ambient temperatures, make the reading when the multimeter when the multimeter read-out is most stable.

Troubleshooting

With no heat or cold applied to the probe, the measuring instrument should display the ambient temperature. If the measuring instrument does not read out properly, try the following:

1. Verify that the temperature-measuring instrument is designed to be used with Type K thermocouples. The temperature-measuring instrument should have a yellow input connector and / or be marked with a "K".
2. Check for an open circuit indicator on the measuring instrument. Some temperature measuring instruments have a built-in circuit to indicate if the connected probe is open. (All Fluke Temperature-measuring instruments have this feature.) Refer to the owner's manual accompanying the measuring instrument to see if this feature is available.
3. Short the two input pins of the measuring instrument with a piece of wire. If the instrument is functioning, it should indicate the ambient temperature.
4. If you suspect a broken connection, use an ordinary ohmmeter to read the continuity of the measuring instrument from pin to pin. The ohmmeter should read 20 ohms or less if there is continuity.


Scale Conversions

Use the following equation to convert °C to °F:

$$(^{\circ}\text{C} \times 1.8) + 32 = ^{\circ}\text{F}$$

Use the following equation to convert °F to °C:

$$(^{\circ}\text{F} - 32) \times 0.5556 = ^{\circ}\text{C}$$

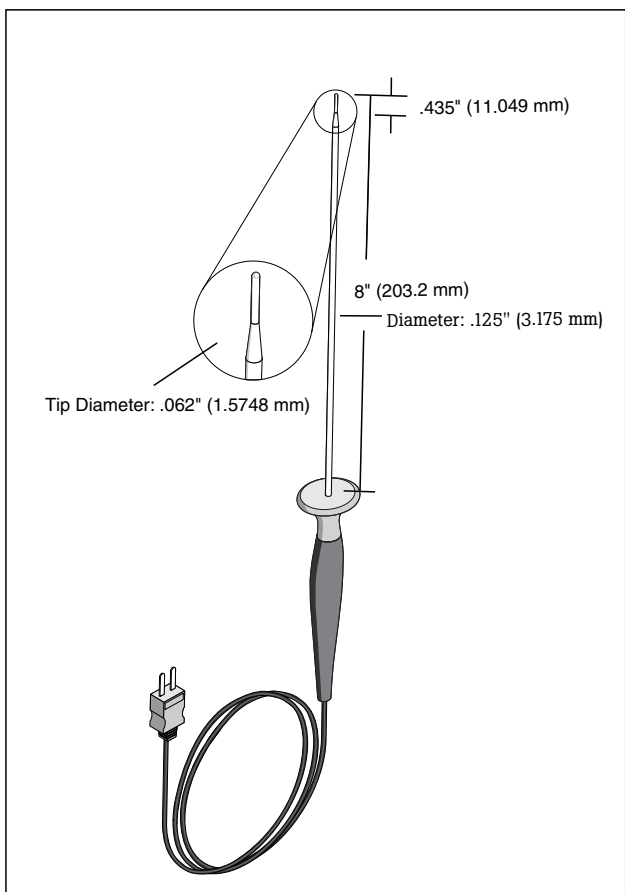

baj01f.eps

Figure 1. Fluke 80PK-26

Contacting Fluke

For application or operation assistance, or information on Fluke products, call:

USA: 1-888-44-FLUKE (1-888-443-5853)

Canada: 1-800-36-FLUKE (1-800-363-5853)

Europe: +31 402-675-200

Japan: +81-3-3434-0181

Singapore: +65-738-5655

Anywhere in the world: +1-425-446-5500

For USA Service: 1-888-99-FLUKE
(1-888-993-5853)

Or, visit Fluke's Web site at www.fluke.com.

To register your product, visit register.fluke.com

ONE YEAR LIMITED WARRANTY

This Fluke product will be free from defects in material and workmanship for one year from the date of purchase. This warranty does not cover fuses, disposable batteries, or damage from accident, neglect, misuse, alteration, contamination, or abnormal conditions of operation or handling. Resellers are not authorized to extend any other warranty on Fluke's behalf. To obtain service during the warranty period, contact your nearest Fluke authorized service center to obtain return authorization information, then send the product to that Service Center with a description of the problem.

THIS WARRANTY IS YOUR ONLY REMEDY. NO OTHER WARRANTIES, SUCH AS FITNESS FOR A PARTICULAR PURPOSE, ARE EXPRESSED OR IMPLIED. FLUKE IS NOT LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES OR LOSSES, ARISING FROM ANY CAUSE OR THEORY. Since some states or countries do not allow the exclusion or limitation of an implied warranty or of incidental or consequential damages, this limitation of liability may not apply to you.

Fluke Corporation
P.O. Box 9090
Everett, WA 98206-9090
U.S.A.

Fluke Europe B.V.
P.O. Box 1186
5602 BD Eindhoven
The Netherlands