

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China











10 OCT 11 Rev C

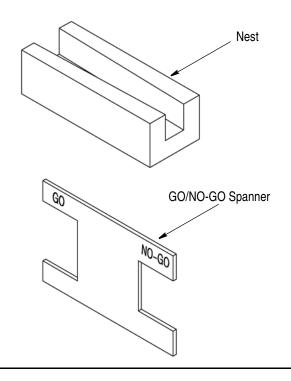


Figure 1

1. INTRODUCTION

This instruction sheet covers the setup and use of the Crimp Height Gage 904170-1 for 2-, 4-, 6-, 8-, and 10-position modular plugs. The gage *cannot* be used for 4-position handset and 6-position offset modular plugs.

The gage is designed to be used as a quick verification of acceptable crimp height. Read these instructions thoroughly before using the gage.



Dimensions in this instruction sheet are in millimeters [with inches in brackets]. Figures are not drawn to scale.

Reasons for reissue of this instruction sheet are provided in Section 5, REVISION SUMMARY.

2. DESCRIPTION

This gage consists of a nest and a GO/NO-GO spanner. See Figure 1.

3. USING THE GAGE

1. Push down firmly on the crimped modular plug, and slide the locking latch of the modular plug into the nest, wedging the modular plug in so that it is held tightly. Refer to Figure 2.

2. While holding the modular plug in the nest, slide the GO end of the spanner over each contact as shown in Figure 2. Repeat this step with the NO-GO end of the spanner.



DO NOT force the spanner over modular plug. Damage to the gold plated contacts or spanner may result.


If both ends of the spanner pass over a contact, the crimp height of that contact is below the allowed tolerance. If both ends of the spanner fail to pass over a contact, the crimp height of that contact is above the allowed tolerance.



For the required crimp height dimension, refer to the applicable application specification (114-series) for the modular plug.

Acceptable Crimp Height

Side View

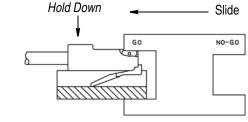

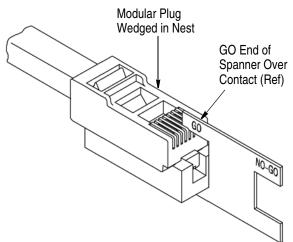


Figure 2




4. MAINTENANCE AND INSPECTION

This gage must be kept clean and calibrated on a scheduled basis to maintain the integrity of the measurement process. Refer to Figure 3.

Gage Calibration

Note: Not to Scale

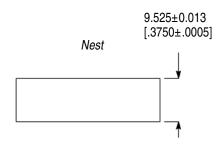

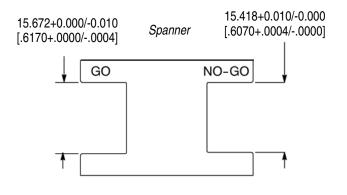


Figure 3

The crimp height gage should be covered with a light film of oil to prevent corrosion and stored in a clean, dry area.

5. REVISION SUMMARY

Revisions to this instruction sheet include:

• Changed company name and logo

Rev C 2 of 2