

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China


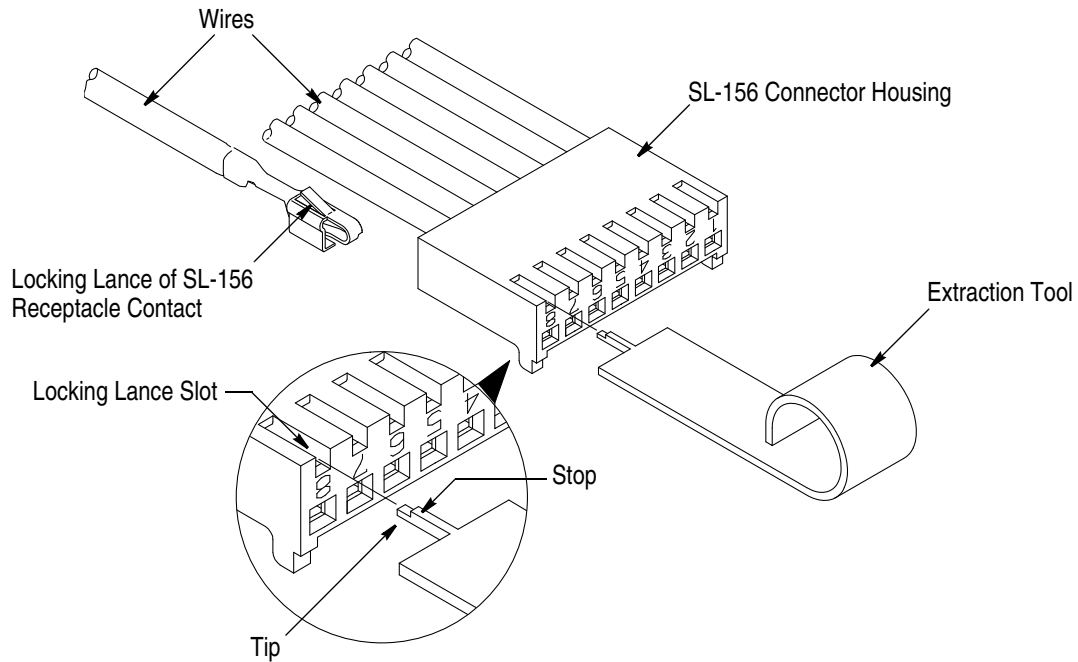 


Figure 1

1. INTRODUCTION

 Extraction Tool 90471-1 extracts an individual SL-156 Receptacle Contacts 770476-[] from SL-156 Connector Housing 770849-[]. See Figure 1 for an SL-156 receptacle contact and connector housing.



The illustration is for identification only and is not drawn to scale.

 
Reasons for reissue of this instruction sheet are provided in Section 5, REVISION SUMMARY.

2. DESCRIPTION (See Figure 1)

The tip of the extraction tool is designed to enter the locking lance slot of the connector and depress the contact locking lance. The tool stop prevents contact damage due to over-insertion of the extraction tool.

3. EXTRACTION PROCEDURE

1. Position the extraction tool as shown in Figure 1. Insert the tip straight into the connector locking lance slot of the contact to be removed until the tool stop bottoms on the connector housing.
2. Grasp the wire of the contact being removed, and pull the contact out of the connector.



Do not re-insert the removed contact into the connector.

3. Remove the tool straight from the connector.

4. MAINTENANCE AND INSPECTION

To ensure proper operation, it is recommended that the tool be inspected immediately on its arrival and at regularly scheduled intervals. The tool is not repairable and should be replaced when worn or damaged. It is recommended that the tool be stored in a clean, dry place and cleaned with a soft, lint-free cloth.

Additional tools can be purchased from:

CUSTOMER SERVICE (038-035)
 TYCO ELECTRONICS CORPORATION
 PO BOX 3608
 HARRISBURG PA 17105-3608

5. REVISION SUMMARY

Revisions to this instruction sheet include:

- Changed company logo
- Added Original Instructions