imall

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832 Email & Skype: info@chipsmall.com Web: www.chipsmall.com Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China







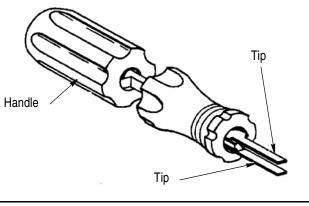


Figure 1

1. INTRODUCTION

This tool (see Figure 1) is used to extract Type XII (male and female) Contacts from their housings. A list of the contacts is shown in the table in Figure 2.

Read these instructions carefully before using the tool.

CONTACT NUMBER		
FEMALE CONTACT	MALE CONTACT	
66258 (66252 LP)	66261 (66255 LP)	
	66262 (66256 LP)	
	66329 (66330 LP)	
66257 66251 LP)	66259 (66253 LP)	
	66260 (66254 LP)	
	66326 (66327 LP)	

Figure 2

2. DESCRITION

The tool consists of a sectionalized handle (see Figure 1) and two tooling tips.

3. EXTRACTION

3.1. Exraction of Male Contact

1. Pull the rear section of handle back.

2. Keeping sections of handle separated, slide tool tips over male contact and into offsets in cavity. See Figure 3.

3. Push the tips of the tool into the housing until they bottom in the cavity.

4. Keeping the tool bottomed in the cavity, push the rear section of the handle toward the housing.

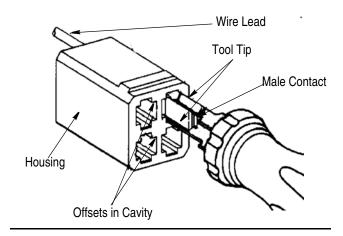


Figure 3

5. Remove the contact by pulling it out of the rear of cavity.

3.2. Extraction of Female Contact

1. Insert the tool tips into the offsets in the cavity. See Figure 4 .

2. Push the tool into the housing until it bottoms in the cavity.

NOTE		
	i	

The rear section of the handle will back out of the tool.

3. Keeping the tool bottomed in the cavity, push the rear section of thehandle toward thehousing.

4. Remove the contact by pulling it out of rear of the cavity.

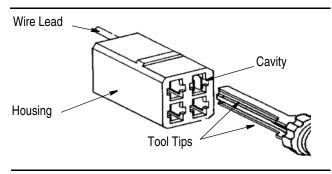


Figure 4

4. REVISION SUMMARY

Revisions to this instruction sheet include:

- Changed company name and logo
- Revised title error

©2012 Tyco Electronics Corporation, a TE Connectivity Ltd. Company TOOLING ASSI: All Rights Reserved PRODUCT INFC

TOOLING ASSISTANCE CENTER 1-800-722-1111 PRODUCT INFORMATION 1-800-522-6752 This controlled document is subject to change. 1 of 1 For latest revision and Regional Customer Service, visit our website at www.te.com

TE Connectivity, TE connectivity (logo), and TE (logo) are trademarks. Other logos, product and/or Company names may be trademarks of their respective owners.