



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



AC Outlet Analyzer and Wrist Strap Tester - Operation and Maintenance



Made in America



Figure 1. Desco [98130](#) AC Outlet Analyzer and Wrist Strap Tester



Figure 2. Desco [98131](#) AC Outlet Analyzer and Wrist Strap Tester

Description

Desco's AC Outlet Analyzer and Wrist Strap Tester is an easy-to-use, low cost, plug-in tester. It is designed to confirm the integrity of the resistance path from field service personnel to ground. This is possible through wrist strap grounding systems and the equipment grounding conductor.

When the AC Outlet Analyzer and Wrist Strap Tester is plugged into an AC outlet, the green LED lights if the outlet's wiring is correct and the path to earth ground via the equipment grounding conductor (the green wire) is intact. The red LED lights if either condition is not met.

Use the AC Outlet Analyzer and Wrist Strap Tester to fulfill the S6.1 Section 6.3.1 requirement. "The hot, neutral, and equipment grounding conductor shall be verified to be in the proper wiring orientation in accordance with the National Electric Code (ANSI/NFPA-70)." (Grounding ANSI ESD S6.1 section 6.3.1 Equipment Grounding Conductor)

The AC Outlet Analyzer and Wrist Strap Tester is available in the following models:

Item	Voltage	Plug
98130	120V	US
98131	220V	UK / Asia

Instructions

Just plug AC Outlet Analyzer into an outlet to see if green pass LED is illuminated, verifying orientation. For wrist strap testing, plug wrist strap while worn into wrist strap test jack. By touching the Test Button on the tester, a person can quickly and easily ensure that their wrist strap grounding system contains adequate current limiting resistance and that there is continuity from one's skin to ground. The tester detects poorly fitting, worn out, corroded or dirty wrist straps. It can also be used to check the integrity of the conductive path from sleeve-to-sleeve of ESD protective garments.

"Typical test programs recommend that wrist straps that are used daily should be tested daily." (Handbook ESD TR20.20 section 5.3.2.4.4)

Calibration

The AC Outlet Analyzer and Wrist Strap Tester is calibrated to NIST traceable standards. Calibration may be performed to insure that the tester is operating within limits. We recommend annual calibration of our testers.

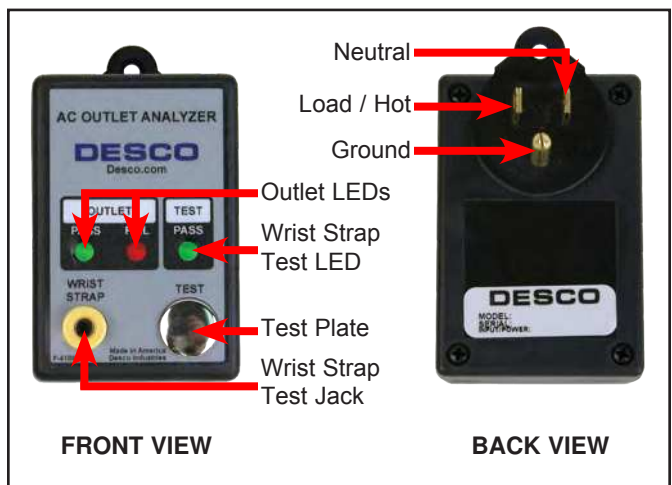


Figure 3. [98130](#) 120V AC Outlet Analyzer and Wrist Strap Tester features and components

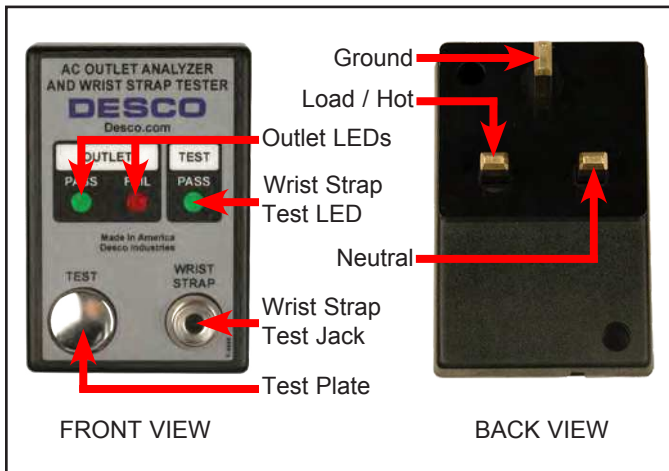


Figure 3. [98131](#) 220V AC Outlet Analyzer and Wrist Strap Tester features and components

TESTING THE WRIST STRAP TESTER

PROCEDURE FOR ITEM 98130

- A. LOW FAIL** - Connect a 450 kilohm resistor @ 5% tolerance between the Wrist Strap Test Jack and the Test Plate. The Wrist Strap Test LED will momentarily illuminate then turn off. This test confirms the LOW FAIL point.
- B. LOW PASS** - Connect a 550 kilohm resistor @ 5% tolerance between the Wrist Strap Test Jack and the Test Plate. The Wrist Strap Test LED will remain illuminated until the resistor is removed from the Test Plate. This test confirms the LOW PASS point.
- C. HIGH PASS** - Connect a 45 megohm resistor @ 5% tolerance between the Wrist Strap Test Jack and the Test Plate. The Wrist Strap Test LED will remain illuminated until the resistor is removed from the Test Plate. This test confirms the HIGH PASS point.
- D. HIGH FAIL** - Connect a 60 megohm resistor @ 5% tolerance between the Wrist Strap Test Jack and the Test Plate. The Wrist Strap Test LED should not illuminate. This test confirms the HIGH FAIL point.

PROCEDURE FOR ITEM 98131

- A. LOW FAIL** - Connect a 675 kilohm resistor @ 5% tolerance between the Wrist Strap Test Jack and the Test Plate. The Wrist Strap Test LED will momentarily illuminate then turn off. This test confirms the LOW FAIL point.
- B. LOW PASS** - Connect a 825 kilohm resistor @ 5% tolerance between the Wrist Strap Test Jack and the Test Plate. The Wrist Strap Test LED will remain illuminated until the resistor is removed from the Test Plate. This test confirms the LOW PASS point.
- C. HIGH PASS** - Connect a 32 megohm resistor @ 5% tolerance between the Wrist Strap Test Jack and the Test Plate. The Wrist Strap Test LED will remain illuminated until the resistor is removed from the Test Plate. This test confirms the HIGH PASS point.
- D. HIGH FAIL** - Connect a 40 megohm resistor @ 5% tolerance between the Wrist Strap Test Jack and the Test Plate. The Wrist Strap Test LED should not illuminate. This test confirms the HIGH FAIL point.

TESTING THE AC OUTLET ANALYZER (98130 ONLY)

NOTE: The following procedure should only be done by someone familiar with voltage hazards. This procedure does not apply to item 98131 because the United Kingdom does not reference GROUND to NEUTRAL as the United States does.

Isolate the ground plug from the AC Outlet Analyzer and Wrist Strap Tester by inserting the tester into a "3 to 2" plug adapter.

- A. PASS OUTLET** - Connect a 5 kilohm resistor @ 5% tolerance across the Neutral Plug and Ground Plug. The Outlet PASS LED should remain illuminated until the resistor is removed. This test confirms the PASS point for the neutral-to-ground resistance.
- B. FAIL OUTLET** - Connect a 12.5 kilohm resistor @ 5% tolerance across the Neutral Plug and Ground Plug. The Outlet FAIL LED should remain illuminated until the resistor is removed. This test confirms the FAIL point for the neutral-to-ground resistance.

Specifications

Input Voltage:

120 VAC ±15% (Item [98130](#))

220 VAC ±15% (Item [98131](#))

Current Drain:

< 10mA

Operator Resistance Limits (nominal):

500 kilohms - 55 megohms (Item [98130](#))

750 kilohms - 35 megohms (Item [98131](#))

Test Voltage, Open Circuit:

27 VDC (nominal)

Equipment Ground Conductor Resistance Limits:

10 kilohms (nominal) ([98130](#) only)

Long Term Drift:

< . 1% / decade

Dimensions:

2.0" x 3.0" x 1.3" (5.1cm x 7.6cm x 3.2cm) (Item [98130](#))

2.0" x 3.0" x 2.0" (5.1cm x 7.6cm x 5.1cm) (Item [98131](#))

Operating Temperature:

0° - 40°C

Limited Warranty

Desco expressly warrants that for a period of one (1) year from the date of purchase, Desco AC Outlet Analyzers will be free of defects in material (parts) and workmanship (labor). Within the warranty period, the product will be tested, repaired, or replaced at Desco's option, free of charge. Call our Customer Service Department at 909-627-8178 (Chino, CA) or 781- 821-8370 (Canton, MA) for a Return Material Authorization (RMA) and proper shipping instructions and address. Include a copy of your original packing slip, invoice, or other proof of purchase date. Any unit under warranty should be shipped prepaid to the Desco factory. Warranty repairs will take approximately two weeks.

If your unit is out of warranty, call Customer Service at 909-627-8178 (Chino, CA) or 781-821-8370 (Canton, MA) for a Return Material Authorization (RMA) and proper shipping instructions and address. Desco Charleswater will quote repair charges necessary to bring your unit up to factory standards.

Warranty Exclusions

THE FOREGOING EXPRESS WARRANTY IS MADE IN LIEU OF ALL OTHER PRODUCT WARRANTIES, EXPRESSED AND IMPLIED, INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE WHICH ARE SPECIFICALLY DISCLAIMED. The express warranty will not apply to defects or damage due to accidents, neglect, misuse, alterations, operator error, or failure to properly maintain, clean or repair products.

Limit of Liability

In no event will Desco or any seller be responsible or liable for any injury, loss or damage, direct or consequential, arising out of the use of or the inability to use the product. Before using, users shall determine the suitability of the product for their intended use, and users assume all risk and liability whatsoever in connection therewith.