# imall

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



### Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832 Email & Skype: info@chipsmall.com Web: www.chipsmall.com Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China





## A01 series

Pushbutton switches & indicators

Distinctive features and specifications

A01\_AX1607USR1

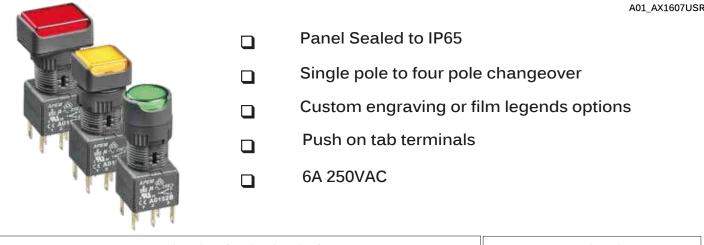

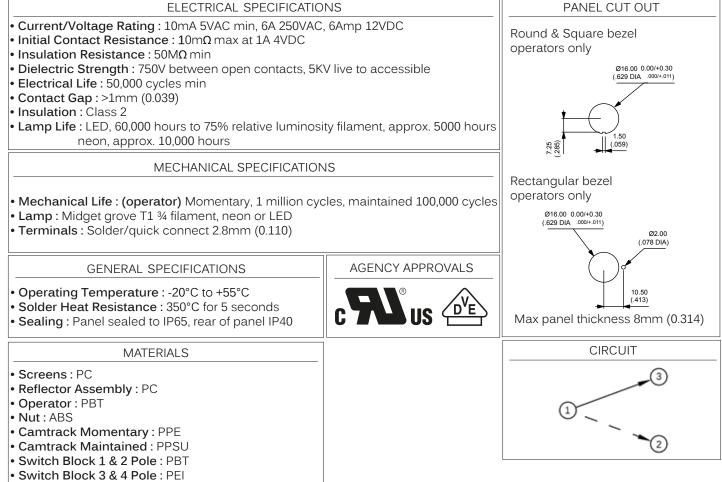

- Contacts : Gold plated silver


Dimensions : first dimensions are in mm while inches are shown in brackets. Refer to the following pages for further information.




Mounting accessories : standard hardware 1 nut and 1 sealing washer.

Panel cut-out Ø16 (0.755)

### Pushbutton

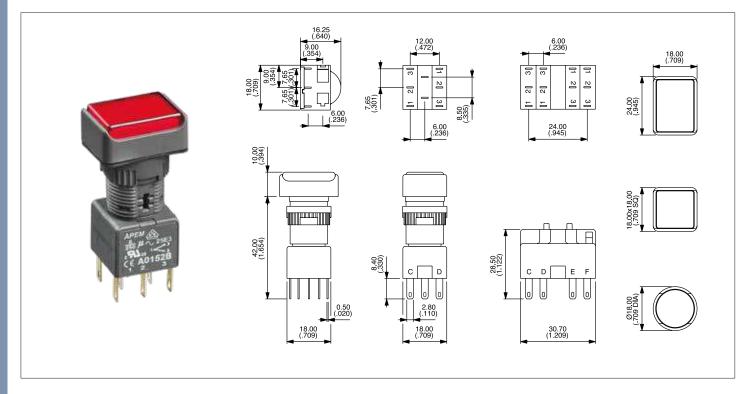

#### Indicator

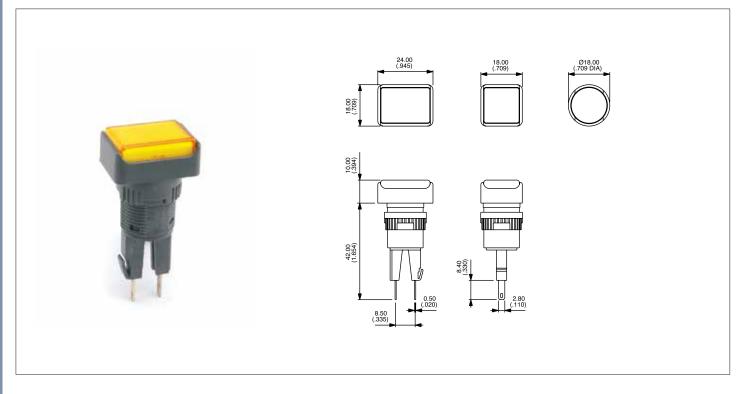

Overview

#### Pushbutton

	Screen +			Lamp (f	Lamp (if required)		-	Operator	+	Switch block	
Bezel	Colour	Part No	Lamp	Voltage	Part No	Pole	Bezel	Description	Part No	No of poles	Part No
	black	A0161A	Filament	6.3V	A0141A	1 or 2		Illum, momentary	A0101Y	Single pole	A0151
	red	A0161B	Filament	14V	A0141B	1 or 2		Illum, maintained	A0101X	Double pole	A0152
	amber	A0161C	Filament	28V	A0141C	1 or 2		Non-illum, momentary	A0102Y	Three pole	A0155
	yellow	A0161D	Filament	36V	A0141D	1 or 2		Non-illum, maintained	A0102X	Four pole	A0153
	green	A0161E	Filament	48V	A0141E	3 or 4		Illum, momentary	A0103Y		
	blue	A0161F	Filament	60V	A0141F	3 or 4		Illum, maintained	A0103X		
	clear	A0161G	Neon	110V	A0143G	3 or 4		Non-illum, momentary	A0104Y		
	white	A0161J	Neon	220V	A0143H	3 or 4		Non-illum, maintained	A0104X		
	black	A0162A	LED	6V red	A0142L1	1 or 2		Illum, momentary	A0105Y		
	red	A0162B	LED	6V green	A0142L2	1 or 2		Illum, maintained	A0105X		
	amber	A0162C	LED	6V amber	A0142L3	1 or 2		Non-illum, momentary	A0106Y		
	yellow	A0162D	LED	12V red	A0142M1	1 or 2		Non-illum, maintained	A0106X		
	green	A0162E	LED	12V green	A0142M2	3 or 4		Illum, momentary	A0107Y		
	blue	A0162F	LED	12V amber	A0142M3	3 or 4		Illum, maintained	A0107X		
	clear	A0162G	LED	12V blue	A0142M4	3 or 4		Non-illum, momentary	A0108Y		
	white	A0162J	LED	12V white	A0142M5	3 or 4		Non-illum, maintained	A0108X		
0	black	A0163A	LED	24V red	A0142N1	1 or 2	0	Illum, momentary	A0109Y		
Ō	red	A0163B	LED	24V green	A0142N2	1 or 2	Ō	Illum, maintained	A0109X		
Ó	amber	A0163C	LED	24V amber	A0142N3	1 or 2	Õ	Non-illum, momentary	A0110Y		
0	yellow	A0163D	LED	24V blue	A0142N4	1 or 2	0	Non-illum, maintained	A0110X		
Ō	green	A0163E	LED	24V white	A0142N5	3 or 4	Ō	Illum, momentary	A0111Y		
Ó	blue	A0163F	LED	48V red	A0142P1	3 or 4	Ō	Illum, maintained	A0111X		
Ō	clear	A0163G	LED	48V green	A0142P2	3 or 4	Ō	Non-illum, momentary	A0112Y		
	white	A0163J	LED	48V amber	A0142P3	3 or 4	õ	Non-illum, maintained	A0112X		


### Indicator

	Scree	n	+	Lamp		+	Operator		
Bezel	Colour	Part No	Lamp	Voltage	Part No	Bezel	Description	Part No	
	black	A0161A	Filament	6.3V	A0141A		Indicator	A0171	
	red	A0161B	Filament	14V	A0141B		Indicator	A0172	
	amber	A0161C	Filament	28V	A0141C	0	Indicator	A0173	
	yellow	A0161D	Filament	36V	A0141D				
	green	A0161E	Filament	48V	A0141E				
	blue	A0161F	Filament	60V	A0141F				
	clear	A0161G	Neon	110V	A0143G				
	white	A0161J	Neon	220V	A0143H				
	black	A0162A	LED	6V red	A0142L1				
	red	A0162B	LED	6V green	A0142L2				
	amber	A0162C	LED	6V amber	A0142L3				
	yellow	A0162D	LED	12V red	A0142M1				
	green	A0162E	LED	12V green	A0142M2				
	blue	A0162F	LED	12V amber	A0142M3				
	clear	A0162G	LED	12V blue	A0142M4				
	white	A0162J	LED	12V white	A0142M5				
0	black	A0163A	LED	24V red	A0142N1				
0	red	A0163B	LED	24V green	A0142N2				
0	amber	A0163C	LED	24V amber	A0142N3				
0	yellow	A0163D	LED	24V blue	A0142N4				
0	green	A0163E	LED	24V white	A0142N5				
0	blue	A0163F	LED	48V red	A0142P1				
0	clear	A0163G	LED	48V green	A0142P2				
0	white	A0163J	LED	48V amber	A0142P3				

Unsealed switches & indicators (IP40) suffix 01 to the end of the part number. Screen engraving insertable legends, & bi-color LED's please contact APEM

Accessories

### Flush mount bezels

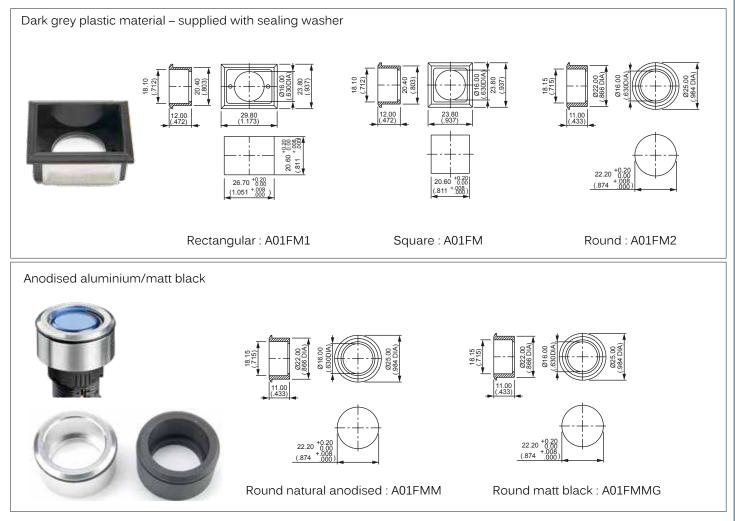

#### **PCB Sockets**


Number of Poles	Part No.	5,00[0,197] 10,25[0,404] 10,50[0,413] 
Single pole, non illuminated : Double pole, non illuminated : Single pole, illuminated : Double pole, illuminated : Indicator :	A01PC1 A01PC2 A01PC3 A01PC4 A01PC5	6 1.10[0.043] 4.25[0.167] 4.25[0.167] 6 6 6 6 6 1.10[0.043] 6 1.10[0.043] 4.25[0.167] 6 1.10[0.043] 6 1.10[0.043] 1.10




Dimensions : first dimensions are in mm while inches are shown in brackets. Refer to the following pages for further information.

#### Accessories

#### Flap guards

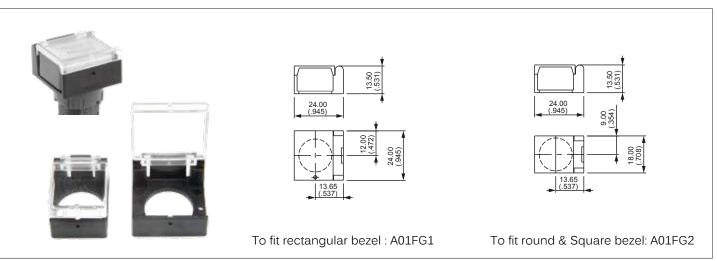


#### Aluminium bezel protection guards

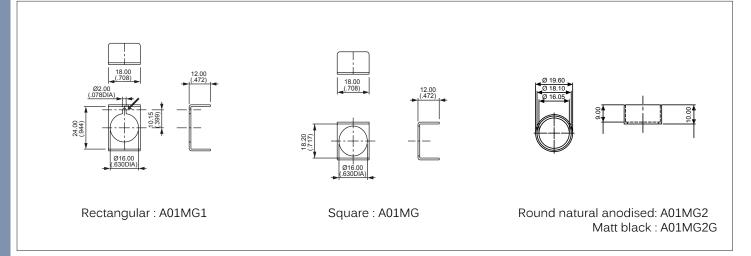


Anti rotation ring

**Blanking plugs** 

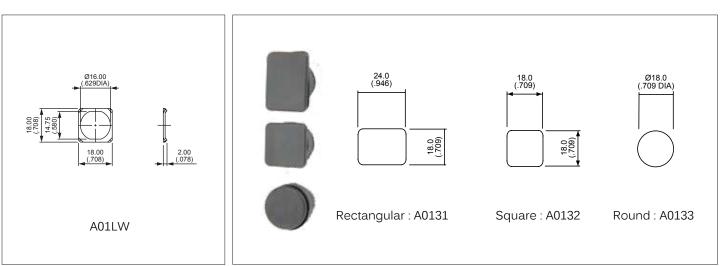

Installation & tools

#### Installation guide

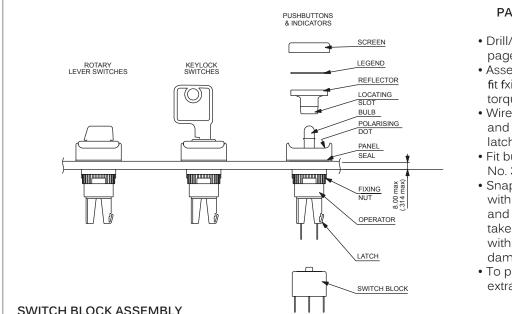

#### PANEL MOUNTING ASSEMBLY

- Drill/punch hole shaped as shown on page one.
- Assemble front operator through hole, fit fxing nut and tighten to a maximum torque of 0.8Nm using tool No. 30-0001.
- Wire chosen switch block as required and slide onto operator until latch engages.
- Fit bulb if required using tool No. 30-0002.
- Snap screen onto reflector assembly with legend in between if required and snap onto front operator, take care to line up the locating slot with the polarising dot and not to damage the internal seal
- To place/remove the bulb use the bulb extractor 30-0002.

#### SWITCH BLOCK ASSEMBLY

To assemble switch block to the operator, firstly, take care to line up the switch block with the back of the operator. Once in position slide on to the back of the operator. N.B. Ensure latch is fully engaged correctly onto the switch block. To remove switch block, depress the latch and slide the switch block off the operator.

#### Tools

