



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts,Customers Priority,Honest Operation,and Considerate Service",our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



Phytion™		Device Programmers and Development Tools for Microcontrollers				
Home	Products	E-Shop	Support	Contact	News	Site Map

Quick Links

- [Help Desk](#)
- [Downloads](#)
- [All Programmers](#)
- [Device Search](#)
- [Tools Catalogs](#)

Shopping Cart

Items: 0

Total: \$0.00


[Your Account](#)

Products

- Development Tools
 - ARM
 - 8051
 - Other
- Device programmers
 - All Models
 - Universal
 - In-System
 - Gang
 - Adapters
- Custom made tools
- OEM tools

AE-B48-NM1

DIP48/ BGA48 specialized adapter for FLASH memory.

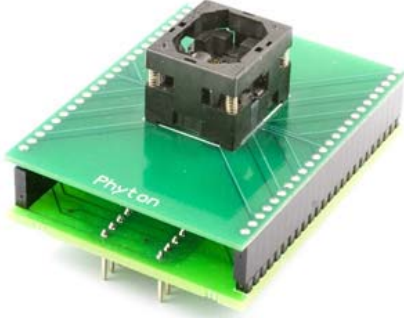

Description:

DIP48/BGA48 specialized adapter for FLASH memory. Device package dimensions: 6.39 x 6.37 x 1.0 mm, 0.75 mm pitch

Supported Devices:

Click the device programmer model below to get an appropriate list of the devices supported by this programmer with this adapter:

- [ChipProg-48](#)
- [ChipProg-G4](#)

[Adapter wiring diagram](#)

Adapter Connection Table:

DIP-48	Header	TSOP-48
1	A15	1
2	A14	2
3	A13	3
4	A12	4
5	A11	5
6	A10	6
7	A9	7
8	A8	8
9	NC(A21)	9
10	A20	10
11	W	11
12	RP(RST)	12
13	Vpp	13
14	WP	14
15	A19	15
16	A18	16
17	A17	17
18	A7	18
19	A6	19
20	A5	20
21	A4	21
22	A3	22
23	A2	23
24	A1	24
25	A0	25
26	E(CE)	26
27	Vssq	27
28	G(OE)	28
29	DQ0	29
30	DQ8	30
31	DQ1	31

	32	DQ9	32
	33	DQ2	33
	34	DQ10	34
	35	DQ3	35
	36	DQ11	36
	37	Vdd	37
	38	DQ4	38
	39	DQ12	39
	40	DQ5	40
	41	DQ13	41
	42	DQ6	42
	43	DQ14	43
	44	DQ7	44
	45	DQ15	45
	46	Vss	46
	47	Vddq	47
	48	A16	48

Copyright © 2007-2010 Phytion, Inc.

Phone: 718-259-3191 • E-mails: info@phyton.com, sales@phyton.com, support@phyton.com