



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts,Customers Priority,Honest Operation,and Considerate Service",our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832


Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



April Development Board

April is a very simple board with the minimum required components for a working impee.

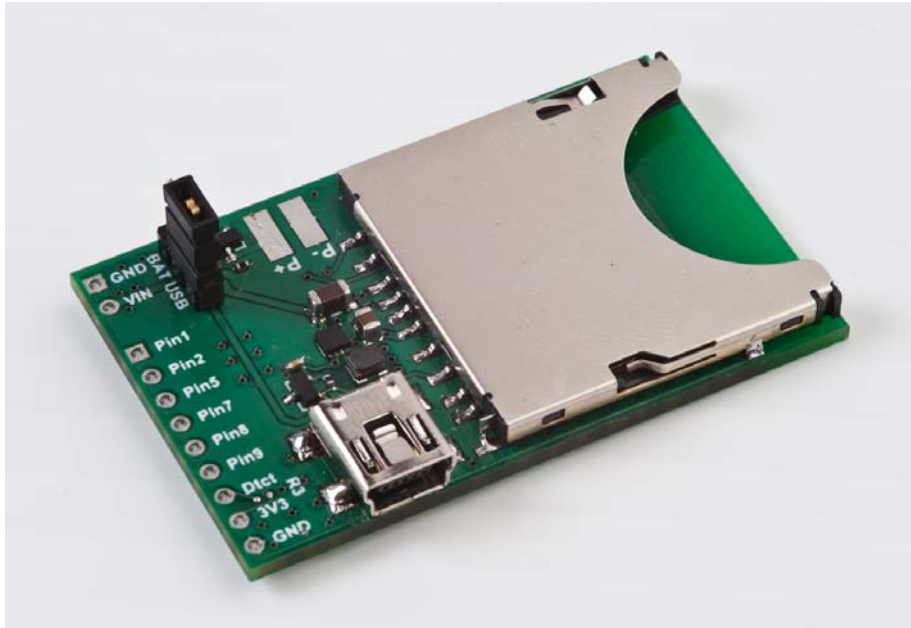

Project Files

[Schematics](#)

[Gerber Files](#)

[Bill of Materials](#)

[Altium Source Files](#)

Power

Power can be supplied using a USB-Mini-B cable from a USB Charger or standard USB Port, though the data lines are not connected to anything. Optionally, a battery connector can be soldered to the battery pads, P+, P-. April can operate from any DC voltage from 3.3 to 17 Volts, and tolerates voltages down to -12 Volts. This is helpful for any application with removable batteries where they may be inserted backwards by the user. You may select between USB power and battery power by placing a shunt on the power select header. Please note that April does not have any circuitry for charging a battery and you should never short USB power to the battery pack.

April uses the TI TPS62172 DC/DC Buck Power supply for 3.3V. It can provide an additional 100mA@3V3 to any boards connected to April, however if your application requires more than 100mA@3V3, it must have it's own supply.

The 3 pin jumper allows selection of the DC input source; jumper between the middle pin and the side labeled USB for USB power, and the other way for battery pack power (soldering the input leads onto the P+ and P- pads).

Signals

All of the signals from the imp come out to a header. For descriptions of pin of function see the [Imp Pin Mux](#).

Card Detect

If your application requires the card detect signal, it must be pulled up by soldering an 0402 resistor R3 or on an external board.. The signal is connected to GND whenever a card is present in the slot, so we recommend using a 100k Ω or higher resistor to save power.

VIN

This pad is connected to the input voltage being fed to the board - either the USB 5v supply or the reverse-voltage protected battery pads.

april.txt · Last modified: 2012/10/03 00:53 by hugo

Except where otherwise noted, content on this wiki is licensed under the following license: CC Attribution-Share Alike 3.0 Unported [<http://creativecommons.org/licenses/by-sa/3.0/>]