## imall

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



### Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832 Email & Skype: info@chipsmall.com Web: www.chipsmall.com Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



# **COMPACT SIZE TIMER COMMON OPTIONS**

Flush Type 1. Flush type mounting frame

	Color	Part number	Front View (Installing onto control panel)	Mounting Hole Dimensions (Unit: mm inch)		
Appearance				Recommended Hole (For newly designed frame)	Applicable Mounting Hole (For installing in the old hole)	
62.8 2.472	Gray	AT7851	1.890 58 2.283	50.5 <sup>+05</sup> 1.988 <sup>+000</sup> +-43.5 <sup>+05</sup> +-43.5 <sup>+05</sup>	<b>F: 2</b> .079 or	
	Black	AT7852			*Distance between parallel drilled holes: 5 mm or more	
	Silver Gray	AT7853		1.713 <sup>+200</sup> *Distance between parallel drilled holes: 6.5 mm or more		
62.8 2472	Gray	AT7811	1.890 58 2.283	<b>R: 2</b> .079 or		
	Black	AT7812		53 <sup>±03</sup> 2.087 <sup>±03</sup> 1.535 <sup>±012</sup> 1.535 <sup>±012</sup>		
	Silver Gray	AT7813		*Distance between parallel drilled holes: 11 mm or more		
62.8 2.472	Gray	AT7821	50 1.869 74 2.913	53 <sup>10.3</sup> 2.087 <sup>±012</sup>	$\begin{array}{c c} 2-\phi 4.5 \\ 2-\phi .177 \\ \hline \\ 62^{a0.1} \\ 2.441^{a.000} \\ arcm \\ cr \\$	
	Black	AT7822			$\begin{array}{c c} 53^{-100} \\ 2.087^{+00} \\ \hline \\ +39^{+00} \\ \hline \\ +39^{+00} \\ \hline \\ +39^{+00} \\ \hline \\ +43.5^{+00} \\ \hline \\ +43.5^{+00} \\ \hline \\ +43.5^{+00} \\ \hline \\ \end{array}$	
	Silver Gray	AT7823		*Distance between parallel drilled holes: 13 mm or more	1.535**** 1.713**** 1.732****   *Distance between parallel drilled holes: *Distance between parallel drilled holes: *Distance between parallel drilled holes:   13 mm or more 8.5 mm or more 8 mm or more	
62.8 2.472	Gray	AT7831	- <u>58</u> 2283 88 3.465	2-04.5 2-0.177 2.992 <sup>-004</sup> 2.992 <sup>-004</sup> 2.087 <sup>-012</sup> -39 <sup>4-03</sup> -39 <sup>4-03</sup>		
62.8 2.472	Gray	AT7841	2.283 2.283 3.465	*Distance between parallel drilled holes: 8 mm or more	*Distance between parallel drilled holes: 16 mm or more	


Notes:

1. The thickness of all applicable panels ranges from 1.0 to 3.5 mm .039 to .138 inch.


2. \* indicates the distance between the mounting holes which are parallel cut on the panel.

#### Installation

1. Insert the mounting frame surface into the panel from its front surface.

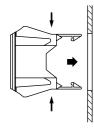



Note: The panel which is installed onto the flush type mounting frame for the timer cannot be inserted. (However, the installation order is not specified when the flush type mounting frame (type S) is used.) 2. After installing the panel, insert the timer to be used from the back of the panel.

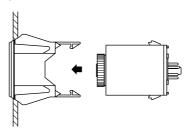

When an applicable timer comes in contact with the collar of the mounting frame, stop the timer by pressing the upper and lower hooks in the direction indicated by arrow. Use the terminal socket at the back (AT78041) or the 8P cap (AD8-RC) for the connection wiring.

### 3. Hang the hooks on the timer base to secure the timer to the flush type mounting frame.

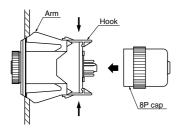

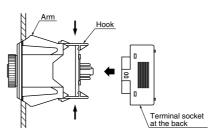

#### Removal

Remove the timer in the reverse order of installation.

### Compact timer protective cover




#### Features

1. The cover prevents the timer from operating improperly after setting the time. It also works as a compact dust cover.

2. The cover is applicable for all types of the fingertip flush type mounting frames for the compact timer.

• 8P cap When a flush type mounting frame is used for the exposed type, 8P cap should be installed.



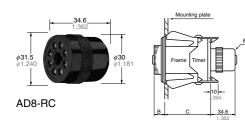

The dimensions B and C are shown in the table below. (Unit: mm, inch)

Mounting frame to be used	Dimension B	Dimension C
Туре Н Туре К	13.1	52.8
Type MHP Type MHP-M Type S	14.6	51.3

#### Rear terminal socket: M3.5


The terminal socket can be used for two installation methods for the back and the front!

Tolerance: ±0.1 ±.004





AT78041

Installation

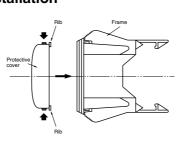

Press the points on the protective cover (indicated by arrows) to bend the ribs, and hook the ribs inside the mounting frame window. The protective cover can be installed if the timer is inserted into the mounting frame.

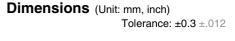

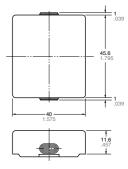

### COMPACT SIZE TIMER COMMON OPTIONS

### The protective cover is applicable for the exposed type plug-in and stand-up type timers (PMH, MHP-M, MHP)

