imall

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832 Email & Skype: info@chipsmall.com Web: www.chipsmall.com Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



BATTERY CARTRIDGE AND BATTERY CHARGER USED WITH THE CT-2500/L and CT-2500/LE TOOLS - OPERATION INSTRUCTIONS

© Panduit Corp. 2016

USE OF THE BATTERY CARTRIDGE AND CHARGING UNIT

The charging unit is run with a nominal voltage of 120 V (CT-2500/LCHR), or (230 V for CT-2500/LECHR) and a frequency of 50-60 Hz. New batteries must be charged prior to use. To remove the battery, actuate the battery lock and pull it out of the tool. To charge the battery, connect the power plug of the charging unit with the power supply and slide the battery into the charging unit. The charging time is 40 minutes. The charging level of the battery cartridge can be checked by the right LED (multi-color) of the charging unit.

	Left LED (Red)	Right LED (Multi-color)
Red	Charging unit ready to operate	Battery defective
Red Flashing	Charging unit out of order. New or unused batteries whose nominal capacity is not sufficient.	Battery too hot or too cold. Remove battery. Safety components possibly defective.
Green	-	Charging cycle starts
Green Flashing	_	Battery fully charged. Charging unit switches automatically into a maintaining mode. Battery can stay in charger for indefinite time w/o being damaged.

- If the nominal capacity of the battery is not achieved, e.g. at first charge, the battery is not necessarily faulty. Full capacity can be achieved after (3) charging/discharging cycles.
- When the speed of the tool decreases noticeably, the battery must be recharged.

Do Not recharge a partially discharged battery as a precaution.

- Charge the battery at room temperature between 50°F and 104°F (10°C and 40°C).
- Charging batteries at low temperatures, under 41°F (5°C) is not possible. Increase battery temperature before starting the charging cycle.
- Do Not expose the charging unit to rain or snow.
- Do Not charge a battery in the vicinity of explosive materials and gases.
- No other batteries (e.g. dry batteries or car batteries, etc.) are to be used in the tool or in the charging unit.
- Do Not use the cord to transport the charging unit, or to pull the plug out of a wall socket with force.
- Do Not insert foreign objects into the ducts of the charging unit. Pull the plug of the charging unit after charging. Do Not disassemble the charging unit or battery.

<u>Do Not</u> place the battery in your pocket or in your toolbox if there are any conductive materials in it such as coins, keys, tools or other metallic parts.

TERMINATIONS PER BATTERY CHARGE

The estimated number of terminations before the battery will need to be recharged is dependent on variables such as the connector size and type being terminated, ambient temperature, and time lapsed between termination cycles as well as other variables.

E-mail: techsupport@panduit.com

EU Website: www.panduit.com/emea

E-mail: emeatoolservicecenter @panduit.com



www.panduit.com

Technical Support: 1-800-777-3300

Panduit Europe, EMEA Service Center Almelo, Netherlands Tel.: 31-546-580-452 Fax: 44 208 601 7209