imall

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832 Email & Skype: info@chipsmall.com Web: www.chipsmall.com Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



sparkfun

CC3000 Hookup Guide

Introduction

If you need to add wireless networking (WiFi) to a project, then the CC3000 could be your ticket. Two flavors are available: the CC3000 WiFi Arduino Shield, and the CC3000 WiFi Breakout Board. What sets the CC3000 apart from others (such as the WiFly Shield) is its ability to associate to a WiFi access point (AP) using a cell phone app in a process TI calls SmartConfig.

This guide will walk you through the getting started process with the CC3000 Shield and Breakout Board.



For an Arduino shield form factor, we recommend the CC3000 Shield



For other microcontrollers, we recommend the CC3000 Breakout Board

Required Materials

- · CC3000 Shield or CC3000 Breakout Board
- · Arduino, RedBoard or any Arduino-compatible board
- · Male PTH headers or Arduino Stackable Headers

If you are using the breakout board (as opposed to the shield), you will also need:

- · Jumper wires to connect from breadboard to Arduino
- · Breadboard to tie everything together

If you want to connect an external antenna, you need:

- RP-SMA to U.FL cable
- 2.4GHz antenna or 2.4GHz large antenna

Suggested Reading

- What is an Arduino?
- How to Solder
- · Working with Wire


Board Overview

CC3000 Shield

The CC3000 Shield has a standard Arduino shield layout with 2 rows of pins on either side. The right-side headers have been broken out on the shield if you want to solder headers or wires for easy prototyping.

On the top-left, there is a microSD card which will work with Arduino's SD library (note that you will need to change the chipSelect variable to pin 8 for the CC3000 Shield). To the left of the microSD slot is a RESET button, should you need to reset the Arduino. To the right of the microSD slot, you will find a prototyping area filled with 0.100 inch holes and the following voltages broken out: GND, 3.3V, 5V, and Vin (the input voltage to the Arduino).

Below the microSD slot is a 3.3V regulator and the CC3000 module, which is connected to the antenna section at the bottom of the board. By default the CC3000 is connected to the chip antenna, but you can move the Antenna Select capacitor if you want to Bring Your Own Antenna. To the right of the CC3000 module is a level shifter that allows the 3.3V logic of the CC3000 to communicate with the 5V logic normally found on the Arduino.

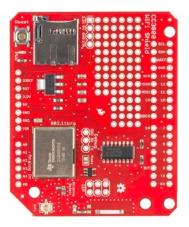

CC3000 Shield front

The pins used by the shield are as follows:

2 (INT) is the interrupt pin that the CC3000 uses to notify the Arduino that it has data.

7 (EN) is the enable pin that the Arduino uses to turn the CC3000 off and on.

8 (SDCS) is the chip select for the SD card.

10 (CS) is the chip select for the CC3000.

11 (MOSI) is the SPI communication line from the Arduino to the CC3000.

12 (MISO) is the SPI communication line from the CC3000 to the Arduino.

13 (SCK) is the SPI clock line.

CC3000 Breakout Board

As opposed to the Shield, the CC3000 Breakout Board contains just the CC3000 module, an antenna section, a voltage regulator, and a level shifter. It can work with any 3.3V or 5V logic microcontroller that can communicate via SPI.



CC3000 Breakout front

GND should be connected to the host circuit's ground.

VCC is the supply voltage and should be connected to 4.3V - 15V if you are unable to provide 3.3V to the board.

3.3V should be connected to a 3.3V power source if one is available. **IMPORTANT:** only one of VCC or 3.3V should be connected.

MOSI should be connected to the SPI MOSI pin of the host microcontroller.

MISO should be connected to the SPI MISO pin of the host microcontroller.

CS should be connected to a SPI chip select pin of the host microcontroller.

INT should be connected to a pin capable of external interruptrs on the microcontroller.

SCK should be connected to the SPI clock line of the host microcontroller.

EN should be connected to any GPIO pin on the microcontroller.

Hardware Hookup

You can use either the CC3000 Shield or the CC3000 Breakout for the examples in this tutorial.

CC3000 Shield

Solder Arduino stackable headers or break away headers to the shield.



Header pins soldered onto the CC3000 Shield


Attach the shield to the Arduino.




CC3000 Shield on top of a RedBoard

CC3000 Breakout

Solder break away headers to the 9 header holes on the board.

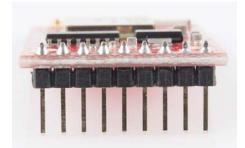

Header pins soldered onto the CC3000 Breakout Board Connect the breakout board to the following Arduino pins:

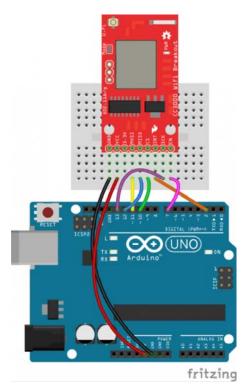

Fritzing diagram of CC3000 Breakout Board hookup

(CC3000 Breakout Board \rightarrow Arduino)

- GND \rightarrow GND
- VCC $\rightarrow 5V$
- MOSI \rightarrow 11
- MISO \rightarrow 12
- $CS \rightarrow 10$
- INT \rightarrow 2
- SCK \rightarrow 13
- EN \rightarrow 7

Connecting an External Antenna

IMPORTANT: This step is **optional!** You don't need to add an external antenna to get the CC3000 to work (the chip antenna on the shield and breakout board works well enough). Only do this if you need to add an external antenna.

Both the CC3000 Shield and Breakout Board offer the ability to attach an external antenna. This is a handy feature if you want to route an antenna to the outside of an enclosure or to increase your WiFi gain.

Shield

Desolder the capacitor labeled "Antenna Select."



Rotate the capacitor at a 90° angle so that it is connecting the trace coming out of the CC3000 and the trace going to the U.FL connector.




Attach the RP-SMA to U.FL cable to the U.FL connector. Connect the 2.4GHz antenna (or 2.4GHz large antenna) to the cable.



Note that you can use some Angle Brackets, 4-40 Screws, 4-40 Nuts, and a piece of drilled (or laser-cut) plastic to hold the antenna onto the CC3000 Shield.

Breakout Board

For the CC3000 Breakout Board, you will need to perform the same operation as on the shield to rotate the Antenna Select capacitor by 90°.

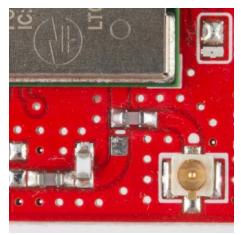

You may then connect an antenna to the U.FL connector.

CC3000 Library Installation

If you have the Arduino program open, close it now.

Download the SFE CC3000 Library from the GitHub repository here: SFE_CC3000_Library-master

Right-click on the .zip file and select "Extract All..." to unzip the library.

Name	Date modified	Type	Size
SFE_CC3000_Library-master	3/13/2014 4:37 PM	File folder	
SFE_CC3000_Library-master.zip	3/13/2014 4:34 PM	Compressed (sipp-	133 K

Copy the newly extracted folder into your (Arduino isntallation directory) \libraries (e.g. C:\Program Files (x86)\Arduino\libraries) folder.

Organics + 🛛 🏭 C	Ipen Diclude in Many • Share with •	Burn. New Solder		H + CL	
12 Recent Places	Name a 10	Data modiFiel W26/2013 3226 PM	Type Fra tutder	-1 See	
Car Libration	La Salfat	12/18/30127-36 PM	Elia hubbar		
C Documents	Server	8/24/2013 12:16 PM	Eile fulder		
Music	July 144_CC3000_Likewy	3/3/2014 3/0 PM	File Bulder		1.9
Report	SRIMPISheld	12/38/2013 7:56 PM	File folder		
Videos	a SetsPath	31/7/2013 2:45 PM	Prie Tolder		
a succession of the	s Softwarderial	\$124/2013 1218 PM	File holder		- 14

WebClient Example

Open up the Arduino program and select File \rightarrow Examples \rightarrow SFE_CC3000_Library \rightarrow WebClient.

Edit Sketch Tools Help			_	
New	Ctrl+N			
Open	Ctrl+O			
Sketchbook				12
Examples		01.Basics		^
Close	Ctrl+W	02.Digital		
Save	Ctrl+S	03.Analog		100
Save As	Ctrl+Shift+S	04.Communication		
Upload	Ctrl+U	05.Control		
Upload Using Programmer	Ctrl+Shift+U	06.Sensors		
Page Setup	Ctrl+Shift+P	07.Display		
Page Secup Print	Ctrl+P	08.Strings		
Print	C01+P	09.USB		1000
Preferences	Ctrl+Comma	10.StarterKit		
Quit	Ctrl+Q	ArduinoISP		
		EEPROM		
		Esplora		100
		Ethernet		
		Firmata		
		GSM	2 E	
		LiquidCrystal	•	
		Robot_Control		- 1
		Robot_Motor		
		SD		263
		SdFat		OM23 :
None and an		Servo	•	
	Constant of the	SFE_CC3000_Library		BoardTest
	1	SFEMP3Shield		ConnectionTes
	No. of Street, or other	SoftPWM		FastConnect
	a state and	SoftwareSerial		PingTest
		SPI		ScanTest
		Stepper		SmartConfig
	100000	TFT		WebClient
		WFi	1	States in
	State of the Carl	Wire		

Scroll down to the Constants section and change the ap_ssid[] and ap_password[] variables to match the SSID (network name) and password of your wireless network. If you are using a security protocol other than WPA2, make sure you change ap_security to one of

- WLAN_SEC_UNSEC for unsecured networks
- WLAN_SEC_WEP for networks using WEP
- WLAN_SEC_WPA for networks using WPA
- WLAN_SEC_WPA2 for networks using WPA2

<u>@</u>
Î
// SSID of network
// Password of network
2; // Security of network
// Hilliseconds // Remote host site
// Remote host site
, CC3000_EN, CC3000_CS};
•
Arduina Una an COM19

Plug in your Arduino board via USB cable, and select the correct COM port and Board type that corresponds to your Arduino. Click the "Upload" button.

le Edit Ske	Arduino 1.0.5		×
is call Ske	etch Tools Help		
9 📀 🛙	🕈 🚺 🛃 Upload	4	ø
WebClient			
********	***********		*****
ebClient.	ino		
C3000 Web	Client Test		E
	1 0 SparkFun Ele	ctronics	
arch 1, 2			
ttps://gi	thub.com/sparkfu	m/SFE CC3000 Library	
he serial		ints the contents of the page to	
Uno Pin	CC3000 Board	Function	
+57	VCC or +5V	SV	
GND	GND	GND	
	INT	Interrupt	
2			
2 7	EN	WiFi Enable	-
	GND INT	GND Interrupt	

Go to Tools \rightarrow Serial Monitor and change the baud rate to 115200 baud. Wait while the program tries to connect to the specified access point and perform a GET request of www.example.com. If the test succeeds, you should see HTML print out on the Serial Monitor.

	Send
border-radius: 1em;	
1	
a:link, a:visited {	
color: #38488f;	
text-decoration: none;	
}	
@media (max-width: 700px) {	
body {	
background-color: #fff	;
1	
div {	
width: auto;	
margin: 0 auto;	
border-radius: 0;	
padding: 1em;	
}	
1	
	[
<body></body>	
<div></div>	
<h1>Example Domain</h1>	
domain in examples without pri	to be used for illustrative examp or coordination or asking for per
<a nref="nttp://www.iana.or<br">	g/domains/example">More informati
<td></td>	
Critinity	
Finished WebClient test	
4 m	

Install SmartConfig App

One of the most appealing features of the CC3000 is its ability to receive AP connection information from a smartphone app. If you are working on a final product or a project that might be changing WiFi networks often, having a way to connect to a new network without re-programming the microcontroller is extremely handy.

iPhone Installation

For iPhone users, download the free app from the iTunes store: TI WiFi SmartConfig

Android Installation

If you have an Andoid phone, the installation process is more involved:

Download the Android SmartConfig Application here. **Note:** if the download link does not work, go to TI's CC3000 Wi-Fi Downloads page and navigate to the "CC3000 SmartConfig" section to download the "Android SmartConfig Application."

Run the self-extracting .exe and accept the defaults. The program will unzip a series of folders to C:\TI\CC3000AndroidApp.

	Introductio
Alexandren Licoso Agreenen Previolations Previolations Cocces statul Folge Instate Instate Sergetin	InstalArywhere will guide you through the installation of CC3000 Android App. It is shongly recommended that you gui all programs before continuing with this installation. Click the Neck Dutain to proceed to the next screen. If you want to champe something on a providous Screen, click the "Providou" butann You mary cancel this installation at any time by clicking the 'Cancel' butann.
Cancel	Previous

Using a USB cable, plug your phone into your computer.

Navigate to C:\TI\CC3000AndroidApp\SmartConfigCC3X\bin and copy SmartConfigCCX.apk to the Internal Storage of your Android phone (e.g. Galaxy Nexus\Internal storage\Download).




On your phone, go to Settings \rightarrow Security, and check "Unknown sources" to allow the installation of the .apk file.

00	2:28
< 📰 Security	:
Make passwords visible	<
DEVICE ADMINISTRATION	
Device administrators	
View or deactivate device administrators	
Unknown sources	
Allow installation of apps from sources other than the Play Store	
Verify apps	
Disallow or warn before installation of apps that may cause harm	
CREDENTIAL STORAGE	
Trusted credentials Display trusted CA certificates	
Install from storage Install certificates from storage	
← ←	ה
	-

Using the Google Play store, install a file browser, such as File Manager.

Open up the File Manager app and navigate to /storage/emulated/0/Download. Click on the SmartConfigCC3X.apk.

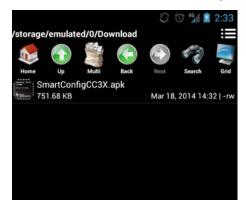

After reviewing the installation page, click "Install."

	ی 🕲 🐄 🗈 2:33 SmartConfigCC3X
	ou want to install this application? It get access to:
DEV	ICE ACCESS
((**	connect and disconnect from Wi-Fi full network access view network connections view Wi-Fi connections
Î	allow Wi-Fi Multicast reception
	Cancel Install

Once the app has installed, click "Done."

A		Q 🛈 🖆 🖬 2:33
Smar	tConfigCC	3X
✓ App inst	alled.	
Done		Open
\bigcirc	\Box	

SmartConfig and FastConnect

When the SmartConfig procedure is run, the CC3000 creates a connection profile in non-volatile memory (note that all previous connection profiles are deleted). The connection profile can be recalled later (even if the CC3000 and Arduino lose power!) to perform the FastConnect procedure, which allows the CC3000 to connect to the last access point stored in memory.


IMPORTANT: You must run the SmartConfig example before you run FastConnect!

SmartConfig

Connect the CC3000 Shield or Breakout Board to an Arduino. Open the Arduino program and select File \rightarrow Examples \rightarrow SFE_CC3000_Library \rightarrow SmartConfig.




Plug in your Arduino board via USB cable, and select the correct COM port and Board type that corresponds to your Arduino. Click the "Upload" button.

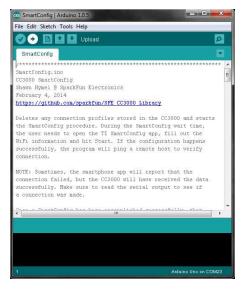

Go to Tools \rightarrow Serial Monitor and change the baud rate to 115200 baud. The program will print "Send connection details from app now!" and you will have 30 seconds to send connection info from the SmartConfig phone app.



On your phone, go to Settings \rightarrow WiFi (on either iPhone and Android) and connect to a wireless access point (enter your network's password if asked).

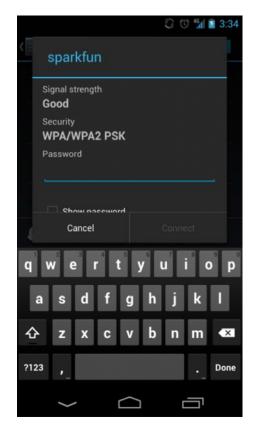

Open the SmartConfig app and enter your network's password. Click "Start."

IMPORTANT: You need to click "Start" while the SmartConfig Arduino program is running and is "Waiting to connect..." If the Arduino program times out (you will see Errors printed in the Serial Monitor), reset the Arduino and try clicking "Start" in the phone app again.

Device Co	् ा 🔿 🤿	al 🗎 3:1
SSID	sparkfun	
Password	Password	
Gateway IP Address	192.168.21.1	
Кеу	Кеу	
Device Name	CC3000	
c1	art	
51	ait	
DESIGNED AND DEVELOPE	en 🔕 taladar	
		ABS
\leftarrow		י ה

If the CC3000 successfully received the connection packet from the SmartConfig app, you should see a "Connected Successfully" message appear in the app window (note: sometimes this message does not appear, but the CC3000 connects anyway. If this happens, just click "Stop" in the app).

	3:22 🕲 👽 🕻			
Device Cor	nfiguration			
SSID	sparkfun			
Password				
Gateway IP Address	192.168.21.1			
CC3x Alert CC3x App Connec	cted Successfully			
C	Ж			
Start				
DESIGNED AND DEVELOPE	D BY 🏠 [X]Cube LABS			

If everything worked, the CC3000 will connect to an access point and ping www.sparkfun.com, which will be reported in the Serial Monitor.

Looking up IP address of: www.sparkfun.com IP address found: 204.144.132.37 Pinging 204.144.132.37 3 times Pong! Packets sent: 6 Packets received: 3 Min round time (ms): 13 Max round time (ms): 18			Send
Starting SmartConfg Send connection details from app now! Waiting to connect Connected: IP Address: 192.168.21.140 Looking up IP address of: www.sparkfun.com IP address found: 206.144.132.37 Pinging 204.144.132.37 3 times Pong! Packets senct: 6 Packets senctived: 3 Min round time (ms): 13 Max round time (ms): 25 Awg round time (ms): 18 Disconnected			
Send connection details from app now! Maiting to connect Connected! IP Address : 192.163.21.140 Locking up IP Address of: www.sparkfun.com IP address found: 204.144.132.37 Pinging 204.144.132.37 3 times Pong! Packets sent: 6 Packets received: 3 Min round time (ms): 13 Max round time (ms): 18 Disconnected	CC3000 initialization complete		
Waiting to connect Connected! IP Address: 192.168.21.140 Looking up IP address of: www.sparkfun.com IP address found: 204.144.132.37 Pinging 204.144.132.37 3 times Pong! Packets sent: 6 Packets received: 3 Min round time (ms): 13 Max round time (ms): 25 Avg round time (ms): 18 Disconnected	Starting SmartConfig		
Connected! IP Address 192.168.21.140 Looking up IP address of: www.sparkfun.com IP address found: 204.144.132.37 Pinging 204.144.132.37 3 times Pong! Packets sent: 6 Packets sectived: 3 Min round time (ms): 13 Max round time (ms): 15 Disconnected	Send connection details from app now!		
IP Address: 192.168.21.140 Looking up IP address of: www.sparkfun.com IP address found: 204.142.32.37 Pinging 204.144.132.37 3 times Pong! Packets sent: 6 Packets received: 3 Min round time (ms): 13 Max round time (ms): 25 Avg round time (ms): 18 Disconnected	Waiting to connect		
Looking up IP address of: www.sparkfun.com IP address found: 204.144.132.37 Pinging 204.144.132.37 3 times Pong! Packets sent: 6 Packets received: 3 Min round time (ms): 13 Max round time (ms): 15 Disconnected			
IP address found: 204.144.132.37 Pinging 204.144.132.37 3 times Pong! Packets sent: 6 Packets received: 3 Min round time (ms): 13 Max round time (ms): 25 Avg round time (ms): 18 Disconnected	IF Address: 192.168.21.140		
Pinging 204.144.322.37 3 times Pong! Packets sent: 6 Packets received: 3 Min round time (ms): 13 Max round time (ms): 25 Nay ground time (ms): 18 Disconnected		com	
Pong! Packets sent: 6 Packets received: 3 Min round time (ms): 13 Max round time (ms): 25 Avg round time (ms): 18 Disconnected	IP address found: 204.144.132.37		
Packets sent: 6 Packets received: 3 Min round time (ms): 13 Max round time (ms): 25 Avg round time (ms): 18 Disconnected	Pinging 204.144.132.37 3 times		
Packets received: 3 Min round time (ms): 13 Max round time (ms): 25 Avg round time (ms): 18 Disconnected	Pong!		
Min found time (ms): 13 Max round time (ms): 25 Avg round time (ms): 18 Disconnected	Packets sent: 6		
Max round time (ms): 25 Avg round time (ms): 18 Disconnected	Packets received: 3		
Avg round time (ms): 18 Disconnected	Min round time (ms): 13		
Disconnected	Max round time (ms): 25		
	Avg round time (ms): 18		
Finished SmartConfig test	Disconnected		
	Finished SmartConfig test		

FastConnect

Once you have successfully run the SmartConfig procedure, a connection profile will be stored on the CC3000. We can use that profile to reconnect to an AP by calling fastConnect() in the CC3000 Library. This example illustrates how to use FastConnect.

IMPORTANT: Do not reset the Arduino after running SmartConfig! Leave the Serial Monitor up after a successful SmartConfig and proceed directly to uploading the FastConnect example. If the Arduino is reset, startSmartConfig() will be called, which automatically deletes any connection profiles in memory.

Open the Arduino program and select File \rightarrow Examples \rightarrow SFE_CC3000_Library \rightarrow FastConnect.

sketch_mar18b Arduino 10.5 le Edit Sketch Tools Help				
New Open Sketchbook	Ctrl+N Ctrl+0			
Examples	-	01.Basics		A 150
Close	Ctrl+W	02.Digital		1000
Save	Ctrl+S	03.Analog		
Save As	Ctrl+Shift+S	04.Communication		
Upload	Ctrl+U	05.Control		100
Upload Using Programmer	Ctrl+Shift+U	06.Sensors		
Page Setup	Ctrl+Shift+P	07.Display 08.Strings		
Print	Ctrl+P	09.USB		100
Preferences	Ctrl+Comma	10.StarterKit		3.85
Quit	Ctrl+Q	ArduinoISP		
		EEPROM Esplora	*	100
		Ethernet		
		Firmata	1	-
		GSM	1	
		LiquidCrystal	1	
		Robot_Control		
		Robot Motor		
		SD		1000
		SdFat		COM23
		Servo		
	No. Contraction	SFE_CC3000_Library		BoardTest
		SFEMP3Shield		ConnectionTes
		SoftPWM		FastConnect
	THE ALL	SoftwareSerial		PingTest
	and the second	SPI		ScanTest
		Stepper		SmartConfig
		TFT		WebClient
		WIFi		
	10 March 10	Wire		

Make sure that the correct COM port and correct Arduino board are still selected unded Tools. Click the "Upload" button.

	ct Arduino 1.0.5	
File Edit Ske	tch Tools Help	
🛛 📀 🛽	🕈 🚺 🛃 Upload	1 🔊
FastConn	ect	
/********	************	*********
FastConnec	t.ino	
	tConnect Test	
	1 @ SparkFun Ele	ctronics
March 1, 2		The second second second
https://gi	thub.com/sparkfu	m/SFE CC3000 Library
Composta t	o the UiFi petro	rk profile stored in non-volatile
		st to verify functionality.
170	6.6	2 C
NOTE: You	nust run SmartCo	nfig.ino prior to this sketch in order
to setup a	profile.	
Hardware C	onnections:	
	CC3000 Board	Function
Uno Pin		
Uno Pin +5V	VCC or +5V	5¥
	VCC or +5V GND	5V GND
+57		

Go to Tools \rightarrow Serial Monitor and ensure that the baude rate is 115200 baud. If the FastConnect is successful, it should connect to the network setup by the SmartConfig example and ping www.sparkfun.com.

Sparkhun CC3000 - FastConnect CC3000 initialization complete Connected to: sparkfun IP Address: 192.164.21.140 Looking up IP address of: www.sparkfun.com IP address found: 204.144.132.37 Pinging 204.144.132.37 3 times Pong! Packets sent: 6 Packets received: 3 Min round time (ms): 20 Max round time (ms): 21 Disconnected Finished FastConnect test	×
<pre>SparkFun CC3000 - FastConnect CC0000 initialization complete Connecting to network stored in profile Connected to: sparkfun IP Address: 192.168.21.140 Looking up IP address of: www.sparkfun.com IP address found: 204.144.132.37 Pinging 204.144.132.37 3 times Prog! Packets received: 3 Min round time (ms): 20 Max round time (ms): 21 Disconnected</pre>	Send
SparkFun CC3000 - FastConnect CC0000 initialization complete Connected to: sparkfun IP Address: 192.168.21.140 Looking up IP address of: www.sparkfun.com IP Address found: 204.144.132.37 Pinging 204.144.132.37 3 times Packets sent: 6 Packets received: 3 Min Found time (ms): 20 May Found time (ms): 21 Disconnected	
Connecting to network stored in profile Connecting to network stored in profile Connected to: sparkfun TP Address: 192.168.2.1.40 Looking up IP address of: www.sparkfun.com IP address found: 204.144.132.37 Pinging 204.144.132.37 3 times Pong: Packets sent: 6 Packets received: 3 Win round time (ms): 20 Max round time (ms): 21 Disconnected	
Connecting to network stored in profile Connected to: sparkfun IP Address: 192.166.21.140 Looking up IP address of: www.sparkfun.com IP address found: 204.144.132.37 Pinging 204.144.132.37 3 times Packets sent: 6 Packets received: 3 Min round time (ms): 20 Max round time (ms): 21 Disconnected	
Connecting to network stored in profile Connected to: sparkfun IP Address: 192.166.21.140 Looking up IP address of: www.sparkfun.com IP address found: 204.144.132.37 Pinging 204.144.132.37 3 times Packets sent: 6 Packets received: 3 Min round time (ms): 20 Max round time (ms): 21 Disconnected	
Connected fo: sparkfun IP Address: 192.168.21.140 Looking up IP address of: www.sparkfun.com IP address found: 204.144.132.37 Pinging 204.144.132.37 3 times Pong! Packets sent: 6 Packets received: 3 Min round time (ms): 20 Max round time (ms): 21 Disconnected	
IP Address: 192.166.21.140 Looking up IP address of: www.sparkfun.com IP address found: 204.144.132.37 Pinging 204.144.132.37 3 times Pong! Packets sent: 6 Packets received: 3 Min round time (ms): 20 Max round time (ms): 25 Avg round time (ms): 21 Disconnected	
Looking up IF address of: www.sparkfun.com IF address found: 204.144.132.37 Enging 204.144.132.37 3 times Pong! Packets sent: 6 Packets received: 3 Min round time (ms): 20 Max round time (ms): 21 Disconnected	
IP address found: 204.144.132.37 Pinging 204.144.132.37 3 times Pong! Packets sent: 6 Packets received: 3 Min round time (ms): 20 Max round time (ms): 25 Avg round time (ms): 21 Disconnected	
Pinging 204.144.132.37 3 times Packets sent: 6 Packets received: 3 Min round time (ms): 20 Max round time (ms): 25 Rwg round time (ms): 21 Disconnected	
Pong! Packets sent: 6 Packets received: 3 Min round time (ms): 20 Max round time (ms): 25 Avg round time (ms): 21 Disconnected	
Packets sent: 6 Packets received: 3 Min round time (ms): 20 Max round time (ms): 25 Avg round time (ms): 21 Disconnected	
Packets received: 3 Min round time (ms): 20 Max round time (ms): 25 Avg round time (ms): 21 Disconnected	
Min round time (ms): 20 Max round time (ms): 25 Avg round time (ms): 21 Disconnected	
Max round time (ms): 25 Avg round time (ms): 21 Disconnected	
Avg round time (ms): 21 Disconnected	
Disconnected	
Finished FastConnect test	
V Autoscroll No line e	ding 🖌 115200 baud 🖌

If you would like to see how the connection profiles work using non-volatile memory, unplug the Arduino's USB cable for a few seconds and then plug it back in before running the FastConnect sketch again. You will see how FastConnect can connect to a stored profile even if the Arduino and CC3000 lose power!

Resources and Going Further

The CC3000 provides an easy-to-use WiFi client to any project that contains a SPI bus and a few GPIO lines. The example library was written for Arduino, but the CC3000 can be used with almost any microcontroller. To read more about the CC3000, refer to the following sites:

- TI's CC3000 Main Page
- TI's CC3000 Wiki

- Updating the CC3000's Firmware (Note: this requires an MSP430 Launchpad)
- Understanding the CC3000 library
- Writing your own CC3000 library
- TI's Basic WiFi Application example for the MSP430