



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China





Xbee USB adapter (FTDI ready)

SKU:DFR0050



INTRODUCTION

The upgraded DFRobot Xbee USB adapter is designed for the XBee module configuration parameters to facilitate using or to work as a FTDI writer. The new version of Xbee USB adapter is also welded with the female pin for FTDI so that users can directly use the adapter as a FTDI program writer, such as Arduino FIO/pro/mini, lilypad Arduino and so on. It's a must-have for interactive electronic installations and projects.

The adapter allows the PC to configure XBee / Bluetooth module and the controller / development board for wireless data transmission via mini USB cable. You can upload your program through the wireless controller module, or conduct wireless real-time data transmission. The adapter uses a FTDI232 USB-UART converter chip to ensure stable and reliable data transmission.

FEATURES

- Used for the XBee module configuration parameters
- Easily connected to a PC via mini USB cable
- XBee-setting support software X-CTU
- Also used as a USB-TTL adapter
- Voltage: +5V(USB Power)