

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



# Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China







# Programmable Temperature Controller (Digital Controller) E5AN-HT/E5EN-HT

(96 x 96 mm and 48 x 96 mm)

CSM\_E5AN-HT\_E5EN-HT\_DS\_E\_1\_10

 
# **Programmable Controllers Join the Series!** Program up to 256 segments and take advantage of the high cost performance of the new LCD that improves both the field of view and contrast.

- Set up to 8 programmed patterns with up to 32 segments (steps) each.
- High-resolution display with 5 digits/0.01°C display.
- High-speed sampling cycle of 60 ms.
- High Accuracy

Thermocouple/Pt input: ±0.1% of PV

Analog input: ±0.1% FS

- Universal inputs on all models (thermocouple, PT, or analog input) to handle various sensors with one Controller. Models also available with Remote SP.
- A PV/SV-status display function can be set to automatically alternate between displaying the status of the Temperature Controller (auto/ manual, RUN/RESET, and alarms) and the PV or SV.
- Flexible contact outputs with logic operations (AND, OR, and delays) set from the Support Software (CX-Thermo version 4.3). Program settings can be managed.
- An infrared ports enables communications from the front panel.
- Preventive maintenance for relays in the Temperature Controller using a Control Output ON/OFF Counter.
- Model available with position-proportional control. \*



Refer to Operation for E5\_N/E5\_N-H/E5\_N-HT for operating procedures.




For the most recent information on models that have been certified for safety standards, refer to your OMRON website.

E5AN-HTPRR2B□-500, E5EN-HTPRR2B□-500 in this catalog have been discontinued at the end of March 2018.

\* Orders will not be accepted after March 31, 2018.

# Main I/O Functions

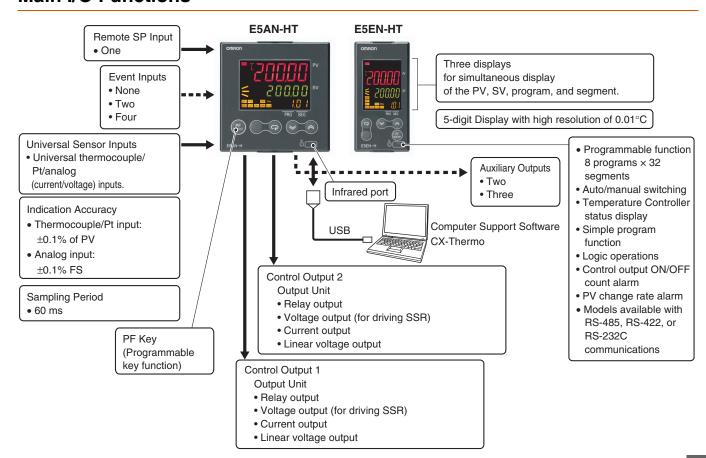

# Lineup



Note: The Controller can be used for heating/cooling control even if only 1 control output is used.

# **Model Number Structure**

# **Model Number Legend**

# **Controllers**

E5AN/E5EN-\_\_\_\_\_M\_\_-\_-500

1. Type

HT: Programmable

2. Control Mode

Blank: Standard or heating/cooling control

P: Position-proportional control \*

3. Control Output 1

A: Control Output Unit

R: Relay output \*

4. Control Output 2

A: Control Output Unit

R: Relay output \*

5. Auxiliary Outputs

2: Two outputs

3: Three outputs

6. Option 1

Blank: None

H: Heater burnout/SSR failure/Heater overcurrent detection (CT1)

HH: Heater burnout/SSR failure/Heater overcurrent detection

(CT2)

7. Option 2

B: Two event inputs

BF: Event input + Transfer output

8. Option 3

M: Option Unit can be mounted.

9. Power Supply Voltage

Blank: 100 to 240 VAC

D: 24 VAC/VDC

10.Case Color

Blank: Black
11.Terminal Cover

-500: With Terminal Cover

\* Orders will not be accepted after March 31, 2018.

**Option Units** 

E53-\_

1. Function

EN01: RS-232C communications

EN02: RS-422 communications

EN03: RS-485 communications

AKB: Event input

**Output Units** 

E53- \_ \_ \_ \_

1. Control Output

R: Relay output

Q: Voltage output (for driving SSR)

Q3: Voltage output (for driving SSR) + 24 VDC (NPN)

Q4: Voltage output (for driving SSR) + 24 VDC (PNP)

C3: Current output + 4 to 20 mA DC

C3D: Current output + 0 to 20 mA DC

V34: Linear voltage output + 0 to 10 VDC

V35: Linear voltage output + 0 to 5 VDC

2. Version

Blank: Available for E5AN-H/E5EN-H/E5AN-HT/E5EN-HT.

N: Available only for E5AN-H/E5EN-H and E5AN-HT/E5EN-HT.

Note: Estimates can be provided for coatings and other specifications that are not given in the datasheet. Ask your OMRON representative for details.

This data sheet is provided as a guideline for selecting products. Be sure to refer to the following user manuals for application precautions and other information required for operation before attempting to use the product.

E5CN-HT/E5AN-HT/E5EN-HT Digital Controllers User's Manual Programmable Type (Cat. No. H169)

E5CN-HT/E5AN-HT/E5EN-HT Digital Controllers Communications Manual Programmable Type (Cat. No. H170)

# **Ordering Information**

# E5AN-HT

	Case	ase Power Control Auxiliary			Heater	C	optional fund	tions				
Size	color	supply voltage	method	output	Control output 1/2	burnout	Event inputs	Transfer output	RSP	Model		
				0	Control Output Unit × 2	1	2		4 to 20-mA input	E5AN-HTAA2HBM-500		
			Basic	2	Control Output Unit × 2	2	2	4 to 20-mA output	4 to 20-mA input	E5AN-HTAA2HHBFM-500		
		100 to 240 VAC		3	Control Output Unit × 2		2	4 to 20-mA output	4 to 20-mA input	E5AN-HTAA3BFM-500		
			Valve	2	Relay outputs × 2		2		4 to 20-mA input	E5AN-HTPRR2BM-500 *		
1/4 DIN 96 × 96 × 78	Black		vaive	2	Relay outputs × 2		2	4 to 20-mA output	4 to 20-mA input	E5AN-HTPRR2BFM-500 *		
$(W \times H \times D)$	DIACK			2	Control Output Unit × 2	1	2		4 to 20-mA input	E5AN-HTAA2HBMD-500		
			Basic	2	Control Output Unit × 2	2	2 1.1		4 to 20-mA input	E5AN-HTAA2HHBFMD-500		
		24 VAC/ VDC		3	Control Output Unit × 2		2	4 to 20-mA output	4 to 20-mA input	E5AN-HTAA3BFMD-500		
			Valve		Relay outputs × 2		2		4 to 20-mA input	E5AN-HTPRR2BMD-500 *		
			vaive	2	Relay outputs × 2		2	4 to 20-mA output	4 to 20-mA input	E5AN-HTPRR2BFMD-500 *		

<sup>\*</sup>Orders will not be accepted after March 31, 2018.

# E5EN-HT

	0	B	Control	Auxil-		Heater	С	ptional Fund	ctions	
Size	Case	Power supply voltage	method	iary output	Control output 1/2	burn- out	Event inputs	Transfer output	RSP	Model
				2	Control Output Unit × 2	1	2		4 to 20-mA input	E5EN-HTAA2HBM-500
			Basic	2	Control Output Unit × 2	2	2	4 to 20-mA output	4 to 20-mA input	E5EN-HTAA2HHBFM-500
		100 to 240 VAC		3	Control Output Unit × 2		2	4 to 20-mA output	4 to 20-mA input	E5EN-HTAA3BFM-500
			Valve	2	Relay outputs × 2		2		4 to 20-mA input	E5EN-HTPRR2BM-500 *
1/8 DIN 48 × 96 × 78	Black		vaive	2	Relay outputs × 2		2	4 to 20-mA output	4 to 20-mA input	E5EN-HTPRR2BFM-500 *
$(W \times H \times D)$	ыаск			0	Control Output Unit × 2	1	2		4 to 20-mA input	E5EN-HTAA2HBMD-500
			Basic	2	Control Output Unit × 2	2	2	4 to 20-mA output	4 to 20-mA input	E5EN-HTAA2HHBFMD- 500
		24 VAC/VDC		3	Control Output Unit × 2		2	4 to 20-mA output	4 to 20-mA input	E5EN-HTAA3BFMD-500
			Valve	2	Relay outputs × 2		2		4 to 20-mA input	E5EN-HTPRR2BMD-500 *
			vaive	_	Relay outputs × 2		2	4 to 20-mA output	4 to 20-mA input	E5EN-HTPRR2BFMD-500 *

<sup>\*</sup>Orders will not be accepted after March 31, 2018.

# **Accessories (Order Separately)**

Output unit	Model	Specifications						
Relay output	E53-RN	SPST-NO, 250 VAC, 5 A (resistive load), electrical life: 100,000 operations						
Voltage	E53-QN	12 VDC (PNP), max. load current: 40-mA, with short-circuit protection						
output (for driving	E53-Q3	24 VDC (NPN), max. load current: 20-mA, with short-circuit protection						
SSR)	E53-Q4	24 VDC (PNP), max. load current: 20-mA, with short-circuit protection						
Current	E53-C3N	4 to 20-mA DC, load: 600 $\Omega$ max., resolution: approx. 10,000						
output	E53-C3DN	0 to 20-mA DC, load: 600 $\Omega$ max., resolution: approx. 10,000						
Linear voltage	E53-V34N	0 to 10 VDC, load: 1 k $\Omega$ min., resolution: approx. 10,000						
output	E53-V35N	0 to 5 VDC, load: 1 k $\Omega$ min., resolution: approx. 10,000						

# **USB-infrared Conversion Cable**

Model	
E58-CIFIR	

# **USB-Serial Conversion Cable**

Model	
E58-CIFQ1	

## **Terminal Cover**

Connectable models	Model
E5AN-HT	E53-COV16
E5EN-HT	E53-COV 16

Note: The Terminal Cover comes with the E5AN/E5EN-\\_-500 models.

# **Mounting Adapters**

Model	
Model	
Y92H-9	

Note: These Mounting Adapters are provided with the Digital Controller.

# **Waterproof Packing**

Connectable models	Model
E5AN-HT	Y92S-P4
E5EN-HT	Y92S-P5

Note: The Waterproof Packing is included with the Controller.

# **Current Transformers (CTs)**

Hole diameter	Model
5.8 dia.	E54-CT1
12.0 dia.	E54-CT3

# **CX-Thermo Support Software**

Model
EST2-2C-MV4

# **Specifications**

# Ratings

i i a tii i g										
Power supp	ly voltage	No D in model number: 100 to 240 VAC, 50/60 Hz D in model number: 24 VAC, 50/60 Hz; 24 VDC								
Operating v	oltage range	85% to 110% of rated supply voltage								
Power cons	umption	100 to 240 VAC: 12 VA 24 VAC/VDC: 8.5 VA (24 VAC)/5.5 W (24 VDC)								
Sensor input		Any of the following can be selected. Thermocouple: K, J, T, E, L, U, N, R, S, B, W, or PL II Platinum resistance thermometer: Pt100 or JPt100 Current input: 4 to 20 mA or 0 to 20 mA Voltage input: 1 to 5 V, 0 to 5 V, or 0 to 10 V								
Input imped	ance	Current input: 150 $\Omega$ max., Voltage input: 1 M $\Omega$ min. (Use a 1:1 connection when connecting the ES2-HB-N.)								
Control met	hod	ON/OFF control or 2-PID control (with auto-tuning)								
	Relay output									
Control output	Voltage output (for driving SSR)	Output Unit (Install the Output Unit (sold separately).)								
output	Current output									
	Linear voltage output									
Auxiliary	Number of outputs	2 or 3 max.								
output	Output specifications	Relay output: SPST-NO, 250 VAC, 3 A (resistive load), electrical life: 100,000 operations, minimum applicable load: 5 V, 10 mA								
	Number of outputs	2 or 4 (with an E53-AKB)								
Event	F	Contact input: ON: 1 $k\Omega$ max., OFF: 100 $k\Omega$ min.								
input	External contact input specifications	Non-contact input: ON: Residual voltage: 1.5 V max., OFF: Leakage current: 0.1 mA max.								
	- P	Current flow: Approx. 7 mA per contact								
	Number of operations	8 max.								
Logic operations	Operations	Logic operation: Any of the following four patterns can be selected. The input status may be inverted.     (A and B) or (C and D), (A or C) and (B or D), A or B or C or D, A and B and C and D     (A, B, C, and D are four inputs.)      ON delay or OFF delay for the results of the logic operation given above.     Setting time: 0 to 9999 s or 0 to 9999 min      Output inversion: Possible								
	Output	One work bit per operation								
	Work bit assignment	Any of The following can be assigned to up to eight work bits (logic operation results): operation commands (assigned to event inputs) *, auxiliary outputs, or control outputs.  * Application is possible with models that do not have event inputs by using an internal assignment.								
Transfer	Number of outputs	1 max. (Depends on model. Models with transfer output (F in model number)								
outputs	Output specifications	Current output: 4 to 20 mA DC, Load: 600 Ω max., Resolution at 4 to 20 mA: Approx. 10,000								
	Number of inputs	1								
	Signal type	Current input: 4 to 20 mA (input impedance: 150 $\Omega$ ±10%)								
RSP input	Analog input scaling	Scaling of signal to engineering units (EU) –19,999 to 30,000 (display: 30,000 max.)								
	Accuracy	(±0.2% of FS) ±1 digit max.								
	Input sampling period	60 ms								
Setting met	hod	Set digitally using keys on the front panel or by using the RSP input.								
Indication method		11-segment digital display and individual indicators (7-segments displays also possible) Character height: E5AN-HT: PV: 15.8 mm, SV: 9.5 mm, MV: 6.8 mm; E5EN-HT: PV: 11.8 mm, SV: 8.1 mm, MV: 5.8 mm Three displays: PV/SV/Program number/Segment number, PV/SV/MV, or PV/SV/Remaining segment time. Number of digits: 5 for PV and SV, 4 for MV								
Other functions		Manual output, heating/cooling control, loop burnout alarm, other alarm functions, heater burnout detection (including SSR failure and heater overcurrent detection), 40% AT, 100% AT, MV limiter, input digital filter, temperature input shift, run/reset protection functions, control output ON/OFF counter, extraction of square root, MV change rate limit, PV/SV status display, automatic cooling coefficient adjustment, program control functions, etc.								
Ambient op	erating temperature	-10 to 55°C (with no condensation or icing), for 3-year warranty: −10 to 50°C								
Ambient op	erating humidity	25% to 85%								
Storage ten	perature	-25 to 65°C (with no condensation or icing)								

# **Input Ranges**

# Thermocouple/Platinum Resistance Thermometer/Analog Input (Fully Universal Inputs)

Inp ty		ı			resist	ance	!	Thermocouple														Analog input									
Na	me	e Pt100 JPt100					100		К			J			т		Е	L	U		N	R	s	В	W	믿	4 to 20 m A	0 to 20 m A	1 to 5 V	0 to 5 V	0 to 10 V
Temperature range (°C)	2300 1800 1700 1600 1500 1400 1300 1200 1100 900 800 700 600 500	850.0	500.0			500.0		1300.0	500.0		850.0	400.0		400.0	400.0		600.0	850.0	400.0	400.0	1300.0		1700.0	1800.0		1300.0	Usak rang -199 -199	ole in tes by 99 to 9.9 to .99 to	he foll scalin 3240 3240 324.0 32.40	g: 0, 1.0, 00, or	
_	400 300 200 100 0 100.0 200.0	-200.0	_199.9	0.0	200.00		100.0	-200.0	-20.0	200.00			200.00		400.0 -199.9	200.00		-100.0			-200.0	0.0	0.0	100.0	0.0	0.0					
Sett num		0	1	2	24	3	4	5	6	21	7	8	22	9	10	23	11	12	13	14	15	16	17	18	19	20	25	26	27	28	29

Shaded settings are the default settings.

The applicable standards for the input types are as follows:

K, J, T, E, N, R, S, B: JIS C 1602-1995, IEC 584-1

L: Fe-CuNi, DIN 43710-1985

U: Cu-CuNi, DIN 43710-1985

W: W5Re/W26Re, ASTM E988-1990

JPt100: JIS C 1604-1989, JIS C 1606-1989

Pt100: JIS C 1604-1997, IEC 751

PL II: According to Platinel II electromotive force charts from BASF (previously Engelhard)

 
# **Alarm Outputs**

Each alarm can be independently set to one of the following 15 alarm types. The default is 2: Upper limit. Auxiliary outputs are allocated for alarms. ON delays and OFF delays (0 to 999 s) can also be specified.


Note: For models with heater burnout, SSR failure, and heater overcurrent detection, alarm 1 will be an OR output of the alarm selected from the following alarm types and the alarms for heater burnout, SSR failure, and heater overcurrent. To output only a heater burnout alarm, SSR failure alarm, and heater overcurrent alarm for alarm 1, set the alarm type to 0 (i.e., no alarm function).

	Alarm type	Alarm output operation		
Set value		When alarm value X is positive	When alarm value X is negative	Description of function
0	Alarm function OFF	Output OFF		No alarm
1	Upper- and lower-limit *1	ON L H SP	*2	Set the deviation in the set point by setting the alarm upper limit (H) and alarm lower limit (L).
2	Upper-limit	ON OFF SP	ON X ← SP	Set the upward deviation in the set point by setting the alarm value (X).
3	Lower-limit	ON X SP	ON X SP	Set the downward deviation in the set point by setting the alarm value (X).
4	Upper- and lower-limit range *1	ON OFF SP	*3	Set the deviation in the set point by setting the alarm upper limit (H) and alarm lower limit (L).
5	Upper- and lower-limit with standby sequence *1	ON OFF SP	*4	A standby sequence is added to the upper- and lower-limit alarm (1). *7
6	Upper-limit with standby sequence	ON X - SP	ON X - SP	A standby sequence is added to the upper-limit alarm (2). *7
7	Lower-limit with standby sequence	ON X SP	ON X SP	A standby sequence is added to the lower-limit alarm (3). *7
8	Absolute-value upper-limit	ON OFF 0	ON OFF 0	The alarm will turn ON if the process value is larger than the alarm value (X) regardless of the set point.
9	Absolute-value lower-limit	ON ←X→ OFF 0	ON OFF 0	The alarm will turn ON if the process value is smaller than the alarm value (X) regardless of the set point.
10	Absolute-value upper-limit with standby sequence	ON OFF 0	ON OFF 0	A standby sequence is added to the absolute-value upper-limit alarm (8). *7
11	Absolute-value lower-limit with standby sequence	ON ←X→ OFF 0	ON OFF 0	A standby sequence is added to the absolute-value lower-limit alarm (9). *7
12	LBA (alarm 1 type only)			*8
13	PV change rate alarm			*9
14	RSP absolute value upper limit *6	ON OFF 0	ON ←X→ O	The alarm turns ON when the remote SP (RSP) is larger than the alarm value (X). This alarm functions in both Local SP and Remote SP Modes.
15	RSP absolute value lower limit *6	ON →X→	ON OFF 0	The alarm turns ON when the remote SP (RSP) is smaller than the alarm value (X). This alarm functions in both Local SP and Remote SP Modes.

- **\*1.** With set values 1, 4 and 5, the upper and lower limit values can be set independently for each alarm type, and are expressed as "L" and "H."
- \*2. Set value: 1, Upper- and lower-limit alarm



 \*3. Set value: 4, Upper- and lower-limit range



- **\*4.** Set value: 5, Upper- and lower-limit with standby sequence For Upper- and Lower-Limit Alarm Described Above
  - Case 1 and 2
     Always OFF when the upper-limit and lower-limit hysteresis overlaps.
  - Case 3: Always OFF

- \*5. Set value: 5, Upper- and lower-limit with standby sequence <u>Always OFF</u> when the upper-limit and lower-limit hysteresis overlaps.
- **\*6.** Displayed when there is a remote SP input.
- \*7. Refer to the E5CN-HT/E5AN-HT/E5EN-HT Digital Controllers User's Manual (Cat. No. H169) for information on the operation of the standby sequence.
- \*8. Refer to the E5CN-HT/E5AN-HT/E5EN-HT Digital Controllers User's Manual (Cat. No. H169) for information on the loop burnout alarm (LBA).
- \*9. Refer to the E5CN-HT/E5AN-HT/E5EN-HT Digital Controllers User's Manual (Cat. No. H169) for information on the PV change rate alarm.

# **Characteristics**

ona.aou				
Indication accuracy		Thermocouple: (±0.1% of indicated value or ±1°C, whichever is greater) ±1 digit max. <b>*</b> 1 Platinum resistance thermometer: (±0.1% of indicated value or ±0.5°C, whichever is greater) ±1 digit max. Analog input: ±0.1% FS ±1 digit max.  CT input: ±5% FS ±1 digit max.		
Transfer output accuracy		±0.3% FS max.		
Influence of *2	temperature	Thermocouple input (R, S, B, W, PL II): (±1% of PV or ±10°C, whichever is greater) ±1 digit max.		
Influence of	voltage *2	Other thermocouple input: (±1% of PV or ±4°C, whichever is greater) ±1 digit max. *3 Platinum resistance thermometer: (±1% of PV or ±2°C, whichever is greater) ±1 digit max.		
Influence of (at EN 61326		Analog input: (±1%FS) ±1 digit max.		
Input sampli	ing period	60 ms		
Hysteresis		Temperature input: 0.1 to 3240.0°C or °F (in units of 0.1°C or °F) Analog input: 0.01% to 99.99% FS (in units of 0.01% FS)		
Proportional	l band (P)	Temperature input: 0.1 to 3240.0°C or °F (in units of 0.1°C or °F) Analog input: 0.1% to 999.9% FS (in units of 0.1% FS)		
Integral time	e (I)	0.0 to 3240.0 s (in units of 0.1 s)		
Derivative ti	me (D)	0.0 to 3240.0 s (in units of 0.1 s)		
Control peri	od	0.5, 1 to 99 s (in units of 1 s)		
Manual rese	t value	0.0 to 100.0% (in units of 0.1%)		
Alarm settin	g range	-19999 to 32400 (decimal point position depends on input type)		
Affect of signal source resistance		Thermocouple: $0.1^{\circ}$ C/ $\Omega$ max. ( $100 \Omega$ max.) Platinum resistance thermometer: $0.1^{\circ}$ C/ $\Omega$ max. ( $10 \Omega$ max.)		
Insulation resistance		20 MΩ min. (at 500 VDC)		
Dielectric strength		2,300 VAC, 50 or 60 Hz for 1 min (between terminals with different charge)		
Vibration	Malfunction	10 to 55 Hz, 20 m/s² for 10 min each in X, Y, and Z directions		
resistance	Destruction	10 to 55 Hz, 0.75-mm single amplitude for 2 hrs each in X, Y, and Z directions		
Shock	Malfunction	100 m/s², 3 times each in X, Y, and Z directions		
resistance	Destruction	300 m/s², 3 times each in X, Y, and Z directions		
Weight	E5AN-HT	Controller: Approx. 310 g, Mounting Bracket: Approx. 100 g		
Weight	E5EN-HT	Controller: Approx. 260 g, Mounting Bracket: Approx. 100 g		
Degree of pr	otection	Front panel: IP66, Rear case: IP20, Terminals: IP00		
Memory pro	tection	Non-volatile memory (number of writes: 1,000,000 times)		
Setup Tool		CX-Thermo version 4.0 or higher		
Setup Tool port		Provided on the bottom of the E5AN-HT and E5EN-HT.  An E58-CIFQ1 USB-Serial Conversion Cable is required to connect the computer to the E5AN-HT and E5EN-HT.  Provided on the front of the E5AN-HT and E5EN-HT. An E58-CIFIR USB-infrared Conversion Cable is required to connect the computer to the E5AN-HT or E5EN-HT. *4		
Standards	Approved standards	UL 61010-1, CSA C22.2 No. 1010-1		
	Conformed standards	EN 61010-1 (IEC 61010-1): Pollution level 2, overcurrent category II		
ЕМС		EMI: EN 61326-1 *5 Radiated Interference Electromagnetic Field Strength: EN 55011 Group 1, class A Noise Terminal Voltage: EN 55011 Group 1, class A EMS: EN 61326-1 *5 ESD Immunity: EN 61000-4-2 Electromagnetic Field Immunity: EN 61000-4-3 Burst Noise Immunity: EN 61000-4-4 Conducted Disturbance Immunity: EN 61000-4-6 Surge Immunity: EN 61000-4-5 Power Frequency Magnetic Field Immunity: EN 61000-4-8		
that The See Press		Voltage Dip/Interrupting Immunity: EN 61000-4-11		

**<sup>\*1.</sup>** The indication accuracy of K thermocouples in the −200 to 1300°C range, T and N thermocouples at a temperature of −100°C max., and U and L thermocouples at any temperatures is  $\pm 2^{\circ}$ C  $\pm 1$  digit max. The indication accuracy of the B thermocouple at a temperature of 400°C max. is not specified. The indication accuracy of B thermocouples in the 400 to 800°C range is  $\pm 3^{\circ}$ C max. The indication accuracy of the R and S thermocouples at a temperature of 200°C max. is  $\pm 3^{\circ}$ C  $\pm 1$  digit max. The indication accuracy of W thermocouples is  $\pm 0.3\%$  of PV or  $\pm 3^{\circ}$ C, whichever is greater, ±1 digit max.

The indication accuracy of PL II thermocouples is  $\pm 0.3\%$  of PV or  $\pm 2^{\circ}$ C, whichever is greater,  $\pm 1$  digit max. \*2. Ambient temperature:  $-10^{\circ}$ C to  $23^{\circ}$ C to  $55^{\circ}$ C, Voltage range: -15% to 10% of rated voltage

**<sup>\*3.</sup>** K thermocouple at –100°C max.: ±10°C max.

<sup>\*4.</sup> External communications (RS-232C, RS-485, or RS-422) and cable communications for the Setup Tool can be used at the same time.

<sup>\*5.</sup> Industrial electromagnetic environment (EN/IEC 61326-1 Table 2)

Prod	gram	Cor	itrol

Number of programs (patterns)	8		
Number of segments (steps)	32		
	Time setting (Segment set with set point and time.)		
Segment setting method	Gradient setting (Segmen	t type with set point, gradient, and time.)	
	0 h 0 min to 99 h 59 min		
Segment times	0 min 0 s to 99 min 59 s		
Alarm setting	Set separately for each pr	rogram.	
Reset operation		ntrol or fixed SP operation.	
Startup operation	Select continuing, resetting	g, manual operation, or run mode.	
nn .	Number of sets	8	
PID sets	Setting method	Set separately for each program (automatic PID group selection also supported).	
Alarm SP function	Select from ramp SP and target SP.		
D	Segment operation	Advance, hold	
Program status control	Program operation	Program repetitions and program links	
Weit an austion	Wait method	Waiting at segment ends	
Wait operation	Wait width setting	Same wait width setting for all programs	
	Number of outputs	2	
Time signals	Number of ON/OFF Operations	1 each per output	
	Setting method	Set separately for each program.	
Program status output	Program end output (pulse width can be set), run output, stage output		
	PV start	Select from segment 1 set point, slope-priority PV start	
Program startup operation	Oternalle	0 h 0 min to 99 h 59 min	
	Standby	0 day 0 h to 99 day 23h	
Operation end operation	Select from resetting, continuing control at final set point, and fixed SP control.		
Program SP shift	Same program SP shift for all programs		

# **USB-Serial Conversion Cable**

Applicable OS	Windows XP/Vista/7/8
Applicable software	CX-Thermo version 4 or higher
Applicable models	E5AN/E5EN/E5CN/E5CN-U/E5AN-H/ E5EN-H/E5CN-H/E5AN-HT/E5EN-HT/ E5CN-HT
USB interface standard	Conforms to USB Specification 1.1.
DTE speed	38400 bps
Connector specifications	Computer: USB (type A plug) Temperature Controller: Setup Tool port (on bottom of Controller)
Power supply	Bus power (Supplied from USB host controller.)
Power supply voltage	5 VDC
Current consumption	70 mA
Ambient operating temperature	0 to 55°C (with no condensation or icing)
Ambient operating humidity	10% to 80%
Storage temperature	-20 to 60°C (with no condensation or icing)
Storage humidity	10% to 80%
Altitude	2,000 m max.
Weight	Approx. 100 g

Note: A driver must be installed in the personal computer. Refer to installation information in the operation manual for the Conversion Cable.

# **Communications Specifications**

Transmission line connection method	RS-485, RS-422: Multipoint RS-232C: Point-to-point	
Communications	RS-485 (two-wire, half duplex) RS-422 (four-wire, half duplex) or RS-232C	
Synchronization method	Start-stop synchronization	
Protocol	CompoWay/F or Modbus	
Baud rate	1200, 2400, 4800, 9600, 19200, 38400, or 57600 bps	
Transmission code	ASCII (CompoWay/F) RTU (Modbus)	
Data bit length *	7 or 8 bits	
Stop bit length *	1 or 2 bits	
Error detection	Vertical parity (none, even, odd) Block check character (BCC) with CompoWay/F or CRC-16 Modbus	
Flow control	None	
Interface	RS-485, RS-422, or RS-232C	
Retry function	None	
Communications buffer	217 bytes	
Communications response wait time	0 to 99 ms Default: 20 ms	

\*The baud rate, data bit length, stop bit length, and vertical parity can be individually set using the Communications Setting Level.

# **Current Transformer (Order Separately) Ratings**

<del>-</del>	
Dielectric strength	1,000 VAC for 1 min
Vibration resistance	50 Hz, 98 m/s <sup>2</sup>
Weight	E54-CT1: Approx. 11.5 g, E54-CT3: Approx. 50 g
Accessories (E54-CT3 only)	Armatures (2) Plugs (2)

# **USB-Infrared Conversion Cable**

Applicable OS	Windows XP/Vista/7/8
Applicable software	CX-Thermo version 4.0 or higher
Applicable models	E5AN-H/E5EN-H/E5AN-HT/ E5EN-HT
USB interface standard	Conforms to USB Specification 1.1.
DTE speed	38400 bps
Connector specifications	Computer: USB (type A plug) Temperature Controller: Infrared port (on front of Controller)
Power supply	Bus power (Supplied from USB host controller.)
Power supply voltage	5 VDC
Current consumption	80 mA
Ambient operating temperature	0 to 55°C (with no condensation or icing)
Ambient operating humidity	10% to 80%
Storage temperature	-20 to 60°C (with no condensation or icing)
Storage humidity	10% to 80%
Altitude	2,000 m max.
Weight	Approx. 130 g (with mounting adaptor)


Note: A driver must be installed in the personal computer. Refer to installation information in the operation manual for the Conversion Cable.

# Heater Burnout Alarms, SSR Failure Alarms, and Heater Overcurrent Alarms

CT input (for heater current detection)	Models with detection for single-phase heaters: One input Models with detection for single-phase or three-phase heaters: Two inputs
Maximum heater current	50 A AC
Input current indication accuracy	±5% FS ±1 digit max.
Heater burnout alarm setting range *1	0.1 to 49.9 A (in units of 0.1 A) Minimum detection ON time: 100 ms
SSR failure alarm setting range *2	0.1 to 49.9 A (in units of 0.1 A) Minimum detection OFF time: 100 ms
Heater overcurrent alarm setting range *3	0.1 to 49.9 A (in units of 0.1 A) Minimum detection ON time: 100 ms

- \*1. For heater burnout alarms, the heater current will be measured when the control output is ON, and the output assigned to the alarm 1 function will turn ON if the heater current is lower than the set value (i.e., heater burnout detection current value).
- \*2. For SSR failure alarms, the heater current will be measured when the control output is OFF, and the output assigned to the alarm 1 function will turn ON if the heater current is higher than the set value (i.e., SSR failure detection current value).
- \*3. For heater overcurrent alarms, the heater current will be measured when the control output is ON, and the output assigned to the alarm 1 function will turn ON if the heater current is higher than the set value (i.e., heater overcurrent detection current value).

# Electrical Life Expectancy Curve for Relays (Reference Values)

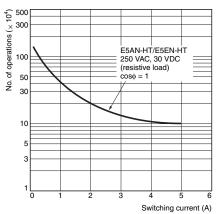


# **External Connections**

Control output 1 and control output 2 are functionally isolated from the internal circuits.

# **Controllers**


# **Option Units**

The Temperature Controller is set for a K-type thermocouple (input type = 5) by default. An input error (5.ERR) will occur if the input type setting does not agree with the temperature sensor. Check the input type.

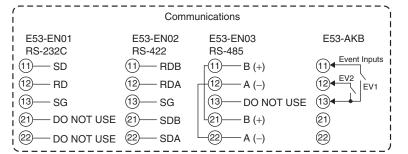


Event input \*1/

- 100 to 240 VAC
- 24 VAC/VDC (no polarity)

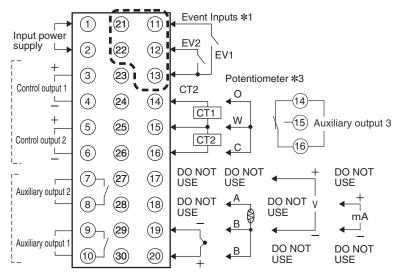

Auxiliary output 3 Relay output SPDT, 250 VAC, 3 A (resistive load)

A heater burnout alarm, SSR failure, heater overcurrent alarm, input alarm, or Remote SP Input Error is sent to the output to which the alarm 1 function is assigned.

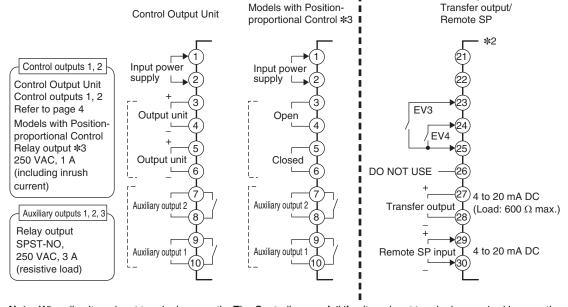


Note: Wire all voltage input terminals correctly. The Controller may fail if voltage input terminals are wired incorrectly.

\*1. EV3 and EV4 are assigned to event inputs in controllers with two event inputs.


- \*2. Terminals 21 to 30 exist only on the following models.
  - Models with four event inputs (E5□N-□BB□) Models with a transfer output (E5□N-□F□)

\*3. Orders will not be accepted after March 31, 2018.

# **Isolation/Insulation Block Diagrams**

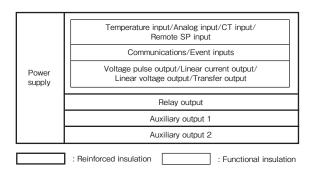


# **Nomenclature**

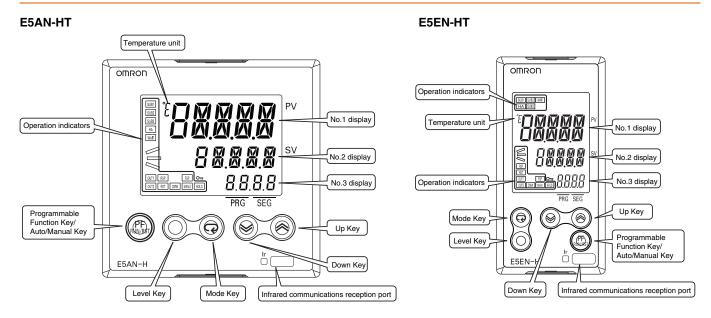



**Dimensions** (Unit: mm)

## E5AN-HT



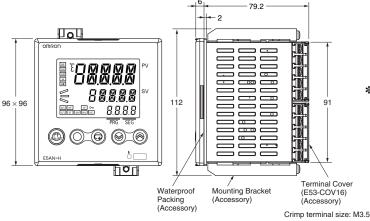

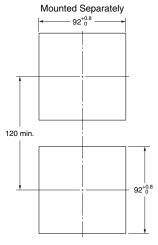

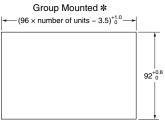


Group mounting does not allow waterproofing.

- Recommended panel thickness is 1 to 8 mm.
- 8 mm.

  Group mounting is not possible in the vertical direction. (Maintain the specified mounting space between Controllers.)


  To mount the Controller so that it is
- waterproof, insert the waterproof packing onto the Controller.
  When two or more Controllers are mounted, make sure that the surrounding temperature does not exceed the allowable operating temperature specified in the specifications.
- \* Group mounting is not possible if an E53-C3N or E53-C3DN Output Unit is used for control output 1 or 2. For these combinations, maintain the following mounting space between Controllers.

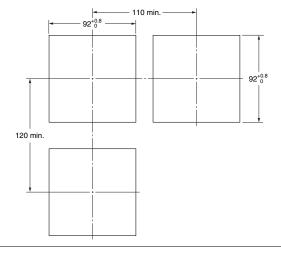


# E5AN-HT/E5EN-HT

# E5EN-HT




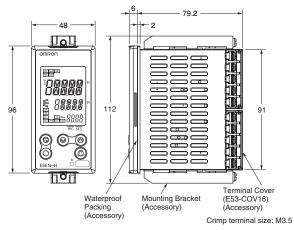

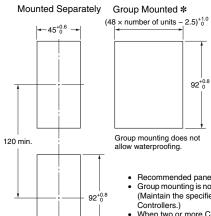

- Recommended panel thickness is 1 to 8 mm.
   Group mounting is not possible in the vertical direction.
   (Maintain the specified mounting space between Controllers.)

  When two or more Controllers are mounted, make
- sure that the surrounding temperature does not exceed the allowable operating temperature specified in the specifications.
- \* Group mounting is not possible if an E53-C3N or E53-C3DN Output Unit is used for control output 1 or 2. For these combinations, maintain the following mounting space between Controllers.

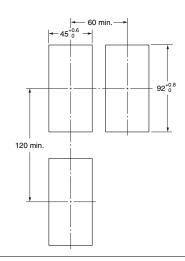


# **Accessories (Order Separately)**

# **USB-Infrared Conversion Cable**

# E58-CIFIR


**USB-Infrared Conversion Cable** 



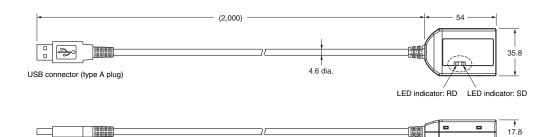


With Mounting Adapter Connected



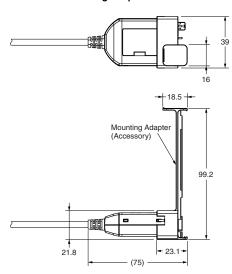


# **USB-Serial Conversion Cable** E58-CIFQ1



 

# Terminal Covers E53-COV16 (Six Covers provided.)
 
# Mounting Adapters Y92H-9 (2pcs)




One set is packaged with the product.


Order Mounting Adapters separately if yours are lost or damaged.

# **Waterproof Packing**

  Y92S-P4 (for DIN  $96 \times 96$ )

**Y92S-P5 (for DIN 48 × 96)** 





Order the Waterproof Packing separately if it becomes lost or damaged.

The Waterproof Packing can be used to achieve an IP66 degree of protection.


(Deterioration, shrinking, or hardening of the waterproof packing may occur depending on the operating environment. Therefore, periodic replacement is recommended to ensure the level of waterproofing specified in IP66. The time for periodic replacement depends on the operating environment. Be sure to confirm this point at your site. Consider one year a rough standard. OMRON shall not be liable for the level of water resistance if the customer does not perform periodic replacement.)

The Waterproof Packing does not need to be attached if a waterproof structure is not required.

# **Current Transformers**


## E54-CT1



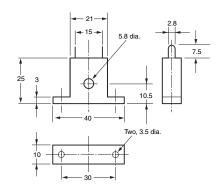

# E54-CT3




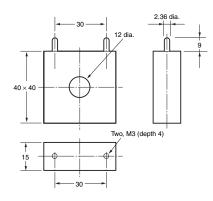

# E54-CT3 Accessory

# Armature


### **Connection Example**

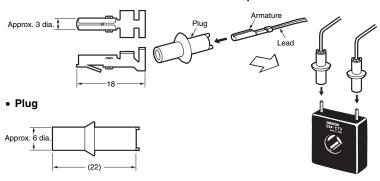

# E54-CT1


# Thru-current (Io) vs. Output Voltage (Eo) (Reference Values)

Maximum continuous heater current: 50 A (50/60 Hz) Number of windings: 400 $\pm 2$  Winding resistance: 18 $\pm 2~\Omega$ 

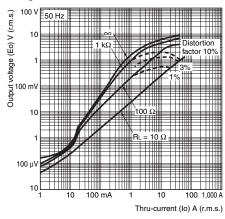

# E54-CT3 Thru-current (Io) vs. Output Voltage (Eo) (Reference Values)

Maximum continuous heater current: 120 A (50/60 Hz) (Maximum continuous heater current for an OMRON Temperature Controller is 50 A.) Number of windings: 400±2 Winding resistance:  $8\pm0.8~\Omega$ 

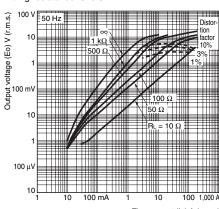

Thru-current (Io) A (r.m.s.)

# Terms and Conditions Agreement

### Read and understand this catalog.

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

# Warranties.

- (a) Exclusive Warranty. Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.
- (b) Limitations. OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE

PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE.

Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) Buyer Remedy. Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty.

See <a href="http://www.omron.com/global/">http://www.omron.com/global/</a> or contact your Omron representative for published information.

### <u>Limitation on Liability; Etc.</u>

OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY.

Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.

## Suitability of Use.

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine. system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

# Programmable Products.

Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.

## Performance Data.

Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.

### Change in Specifications.

Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.

<u>Errors and Omissions.</u>
Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.

2018.6

In the interest of product improvement, specifications are subject to change without notice.

