



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China






Quick Installation Guide (systems only)

The ESPRIT system provides 4 switches each capable of switching up to 1KW (4A @ 230V). Each channel is independent and separately controlled. The ESPRIT Remote control system provides 230V mains switched outputs via each terminal.

1. First mount the ESPRIT system receiver box in the wall in your desired location.
2. Open the enclosure by removing fixing screws from the enclosure front and then removing the front from the enclosure.
3. Wire the LIVE, Neutral and Earth connections to the power supply screw terminal as shown below (shown as A).
4. Wire your load(s) as required (shown as B).
5. Once all required wiring is complete, use the handheld ESPRIT transmitter to switch the outputs on and off.
6. As supplied, the handheld will operate the outputs - Button 1 to output 1, Button 2 to output 2 etc.
7. All buttons will operate in a latching mode - Press for on, press again for off. It is possible to change the operation to momentary mode by fitting the links (shown as C)
8. For advanced operation such as adding extra transmitters different button mapping options consult datasheet.

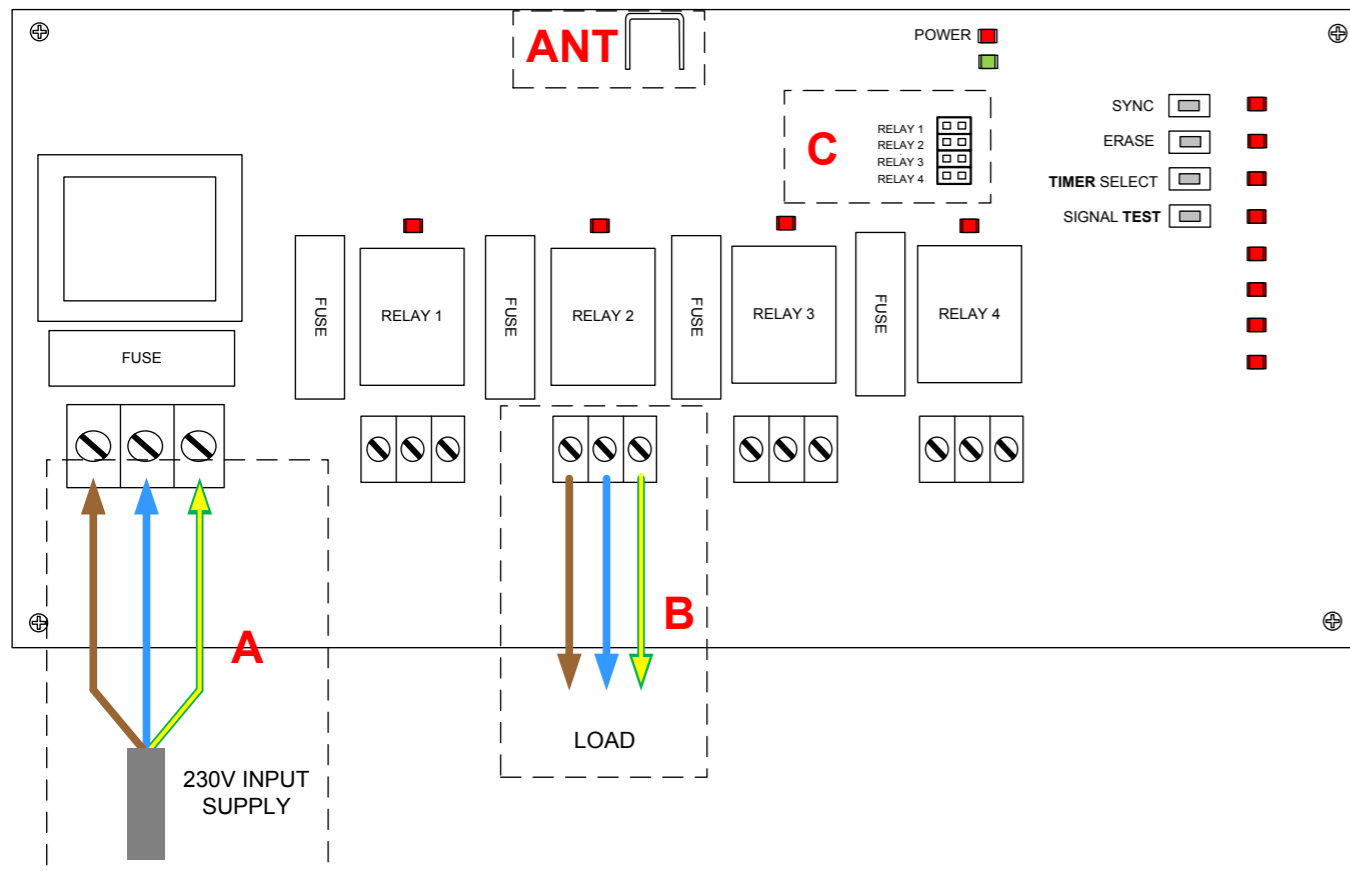

Please contact RF Solutions if any components are missing
 Sales: +44 (0) 1444 227910 Tech. Support: +44 (0) 1444 227909

www.rfsolutions.co.uk

RF Solutions Ltd
 William Alexander House, William Way, Burgess Hill, West Sussex, RH15 9AG
 Sales: +44(0)1444 227 910 Tech Support: +44(0)1444 227909



Quick Start Guide

What's in the box?

1 x FOBBER
 Key Fob



1 x Receiver with 5 additional
 cable glands



ESPRIT Remote
 Control System
 Quick Start Guide

For full details of ESPRIT's
 programmable features, see
 the ESPRIT Datasheet at
www.rfsolutions.co.uk.

Please contact RF Solutions if any components are missing.

Sales: +44 (0) 1444 227900


Tech Support: +44 (0) 1444 227909



QS-ESPRIT-1

www.rfsolutions.co.uk

Receiver Guide

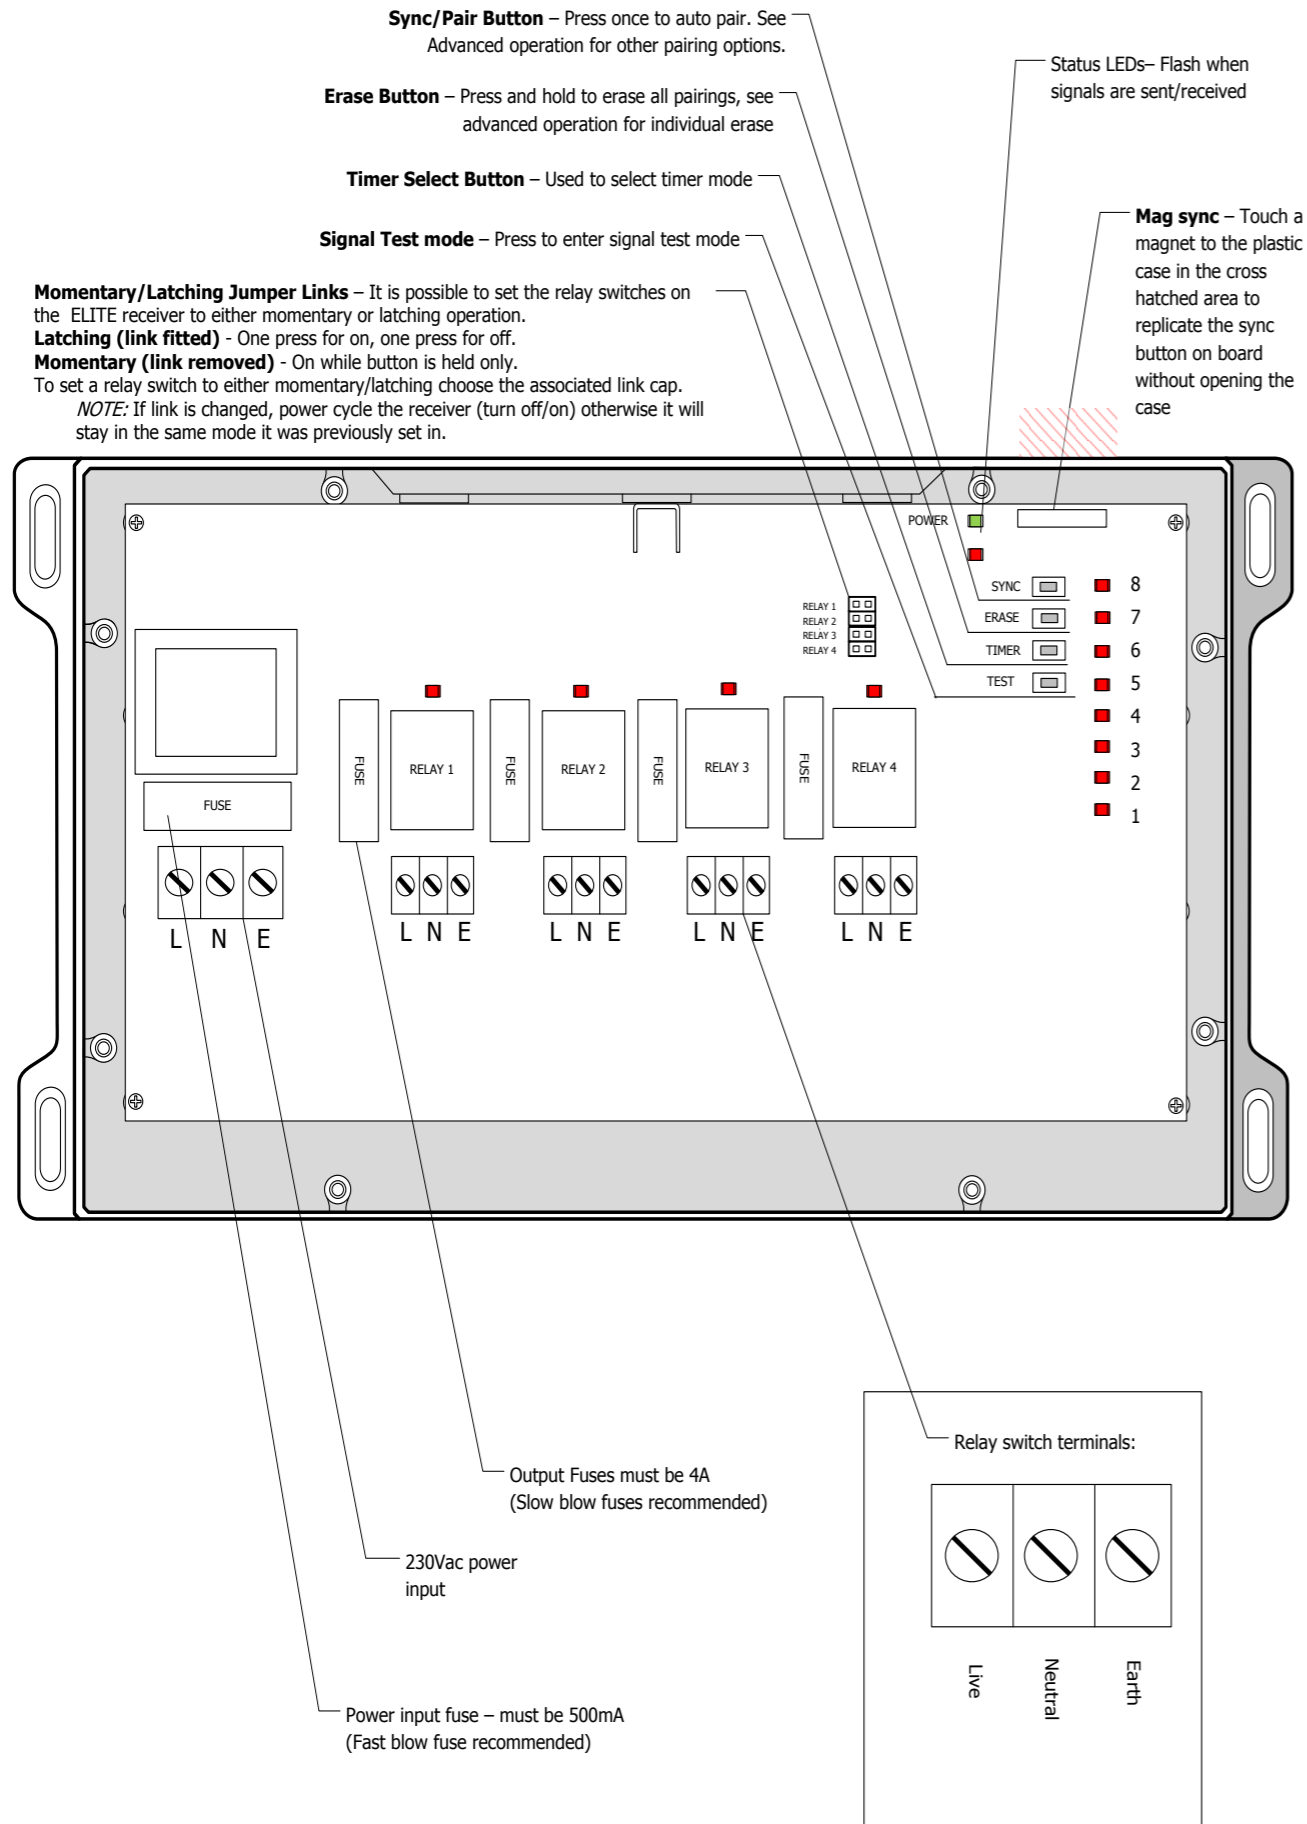

Pairing a transmitter

NOTE: The transmitter supplied with the system should already be paired.

If an additional transmitter needs to be paired, simply follow the below instructions.

- To SYNC a specific ESPRIT handheld transmitter button to a specific output on the ELITE receiver box—press and release the SYNC button on the ESPRIT receiver board.
- The ESPRIT receiver will flash all its relay output LED's at a high rate to show that it is ready to SYNC.
- Press and release the SYNC button again—the ESPRIT receiver will flash output LED1 this is showing that output 1 is selected. Pressing and releasing the SYNC button again will select output 2 and so on, through to output 4.
- Once you have selected the required output (only that output LED is flashing) press and release the SPECIFIC button on the transmitter that you wish to SYNC to the receiver.
- The flashing LED's will go out, the SYNC LED will flash quickly for 2 seconds then go out.