



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



FEATURES

- Full-featured evaluation board for the **AD7746**
- PC evaluation software for control and measurement of the **AD7746**
- USB interface and cable in kit

APPLICATIONS

- Capacitive length sensor demo
- AD7746** performance evaluation
- Platform to integrate the **AD7746** into system design

EVALUATION BOARD DESCRIPTION

This data sheet describes the evaluation board for the **AD7746**. The evaluation board interfaces to the USB port of a PC. Evaluation software is available with the evaluation board, which allows the user to easily communicate with the **AD7746**.

Note that the **AD7746** evaluation board software should be installed before connecting the **AD7746** evaluation board to the PC.

To properly use the evaluation board, see the **AD7746** data sheet on the Analog Devices, Inc., website. You can download the data sheet from www.analog.com/AD7746.

AD7746 DEVICE DESCRIPTION

The **AD7746** is a high resolution capacitance-to-digital converter (CDC). The capacitance to be measured is connected directly to the device inputs. The architecture features inherent high resolution (24 bits, no missing codes, up to 21-bit effective resolution), high linearity (0.01%), and high accuracy (± 4 fF factory calibrated). The **AD7746** capacitance input range is ± 4 pF (changing); the **AD7746** can accept up to 17 pF common-mode capacitance (not changing), which can be balanced by a programmable on-chip digital-to-capacitance converter (CAPDAC).

The **AD7746** has two capacitive input channels. Each channel can be configured as single-ended or differential. The **AD7746** is designed for floating capacitive sensors. For capacitive sensors with one plate connected to ground, the **AD7747** is recommended.

The **AD7746** has an on-chip temperature sensor with resolution of 0.1°C and accuracy of $\pm 2^\circ\text{C}$. The on-chip voltage reference and the on-chip clock generator eliminate the need for any external components in most capacitive sensor applications. The part has a standard voltage input, which, together with the differential reference input, allows easy interface to an external temperature sensor such as an RTD or diode.

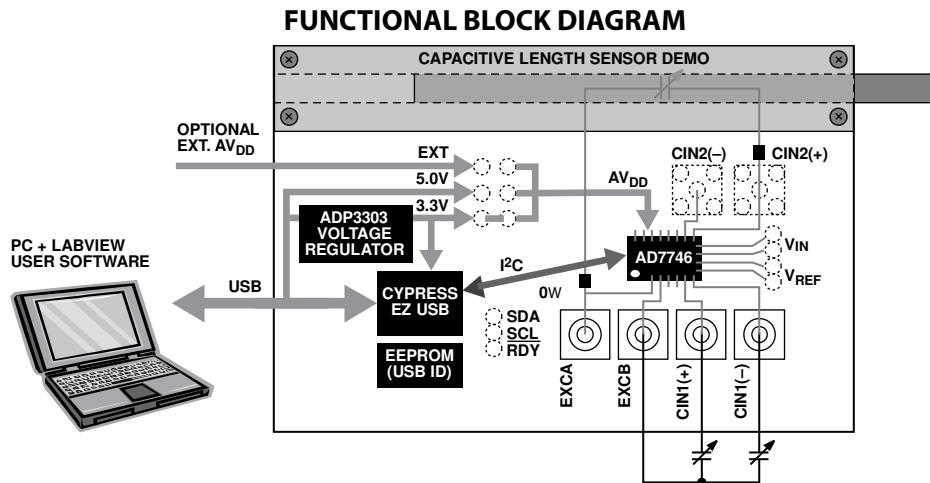


Figure 1.

Rev. A

Information furnished by Analog Devices is believed to be accurate and reliable. However, no responsibility is assumed by Analog Devices for its use, nor for any infringements of patents or other rights of third parties that may result from its use. Specifications subject to change without notice. No license is granted by implication or otherwise under any patent or patent rights of Analog Devices. Trademarks and registered trademarks are the property of their respective owners.

TABLE OF CONTENTS

Features 1
 Applications..... 1
 Evaluation Board Description..... 1
 AD7746 Device Description 1
 Functional Block Diagram 1
 Revision History 2
 Evaluation Board Software Installation 3
 Evaluation Board Hardware..... 4
 Power Supplies 4
 I²C Interface Configuration Options 4
 USB Connector 5
 Sockets 5

Evaluation Board Software.....6
 Configuring the Evaluation Board.....6
 Getting Started with the Software6
 Setup Window8
 User Unit Setup.....9
 Performing a Noise Analysis..... 10
 Saving and Reloading User Configurations..... 10
 Schematics and Artwork 11
 Component ID..... 12
 Ordering Information 13
 Bill of Materials..... 13
 Ordering Guide 13
 ESD Caution..... 13

REVISION HISTORY

11/11—Rev. 0 to Rev. A
 Changes to Evaluation Board Software Installation Section 3
 Deleted Figure 2..... 3
 Added Figure 2, Figure 3, and Figure 4; Renumbered
 Figures Sequentially 3
 Renamed Evaluation Board Hardware and Interfacing Section
 to Evaluation Board Hardware Section 4
 Changes to Power Supplies Section..... 4
 Deleted Link Options Section, Figure 3, and Table 1 4
 Added I²C Interface Configuration Options Section,
 Figure 6, Figure 7, and Figure 8 4

Deleted Connecting the Board to the PC Section5
 Renamed Schematic Section to Schematics and Artwork
 Section; Changes to Figure 10..... 11
 Renamed Layout Section to Component ID Section 12
 Added Ordering Information Section, Bill of Materials
 Section, and Table 2..... 13
 Changes to Ordering Guide 13

5/05—Revision 0: Initial Version

EVALUATION BOARD SOFTWARE INSTALLATION

Before connecting the AD7746 evaluation board to the PC, install the AD7746 evaluation board software by completing the following steps.

1. Insert the AD7746 evaluation kit CD into the CD-ROM drive of your PC.



Figure 2. AD7746 Evaluation Kit CD

The evaluation software installation wizard should start automatically (see Figure 3). If the wizard does not start, run **Setup.exe** from the AD7746 evaluation kit CD.

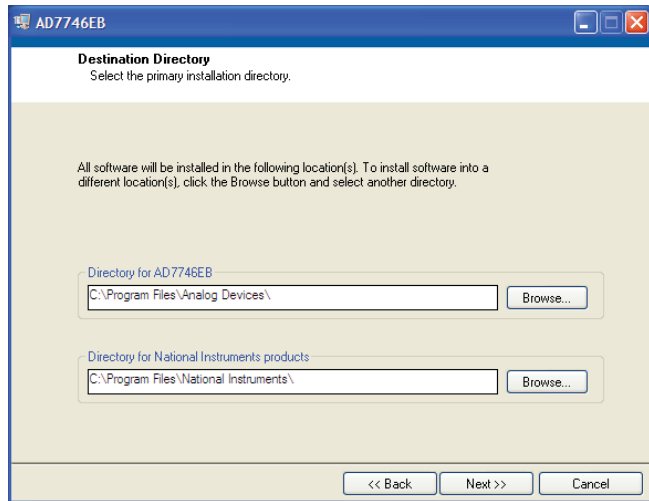


Figure 3. AD7746 Evaluation Software Installation Wizard

2. Follow the steps in the evaluation software installation wizard until the installation is completed.

3. Connect the AD7746 evaluation board to the USB connector of the PC using the USB cable included in the evaluation kit. The POWER LED on the evaluation board turns on, and the **Found New Hardware Wizard** starts automatically on the PC (see Figure 4).



Figure 4. Found New Hardware Wizard

4. Follow the steps in the **Found New Hardware Wizard** window. If a message that the software has not passed Windows® Logo testing appears, click **Continue Anyway** (see Figure 5).

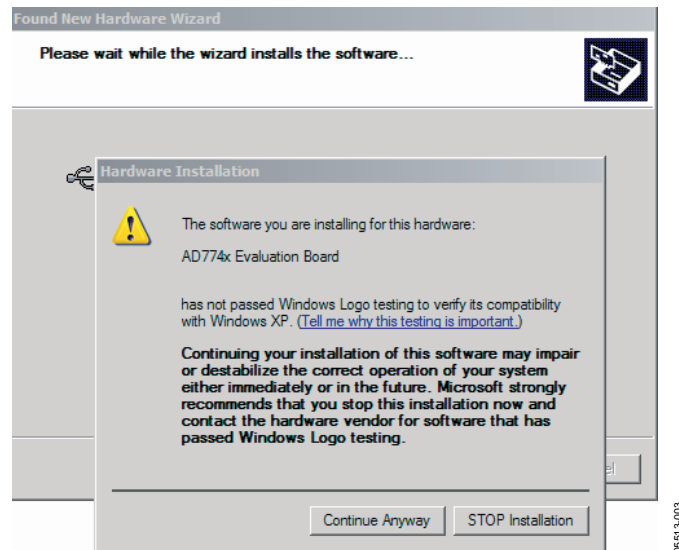


Figure 5. Windows Logo Warning

5. Follow the steps in the **Found New Hardware Wizard** window until the installation is completed.

EVALUATION BOARD HARDWARE

POWER SUPPLIES

The board is powered via the 5 V supply from the USB connector, J1, indicated via LED D1 (POWER). The 5 V supply can be used to power the AD7746 directly. A 3.3 V regulated voltage from the on-board ADP3303 high precision, low power, 3.3 V output voltage regulator can also be used. Alternatively, the AD7746 can be powered using an external 3 V or 5 V power supply via J2.

I²C INTERFACE CONFIGURATION OPTIONS

The AD7746 evaluation board allows different digital interface configurations by redirecting the I²C signals, SDA and SCL, on LK2.

Default Configuration

Links in the SDA, SCL, and RDY positions of LK2 connect the USB microcontroller as the I²C bus master to the on-board AD7746, as shown in Figure 6. This configuration allows easy use of the evaluation board, together with the PC software.

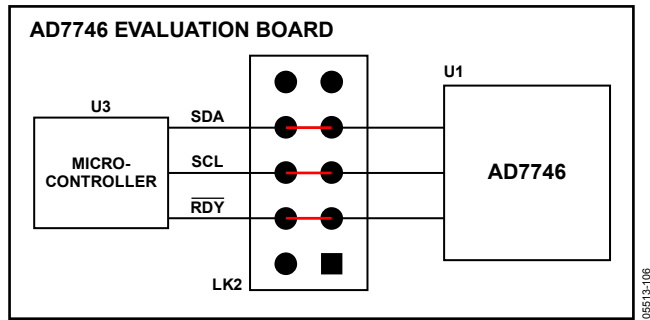


Figure 6. AD7746 Evaluation Board in Default Configuration

External Connection—USB

The AD7746 evaluation board allows customers to connect their own specific AD7746 application board to Pin 4, Pin 6, and Pin 8 of LK2. Using the PC evaluation software, customers can evaluate their application hardware using the AD7746 evaluation board as a USB-to-I²C digital interface only, as shown in Figure 7.

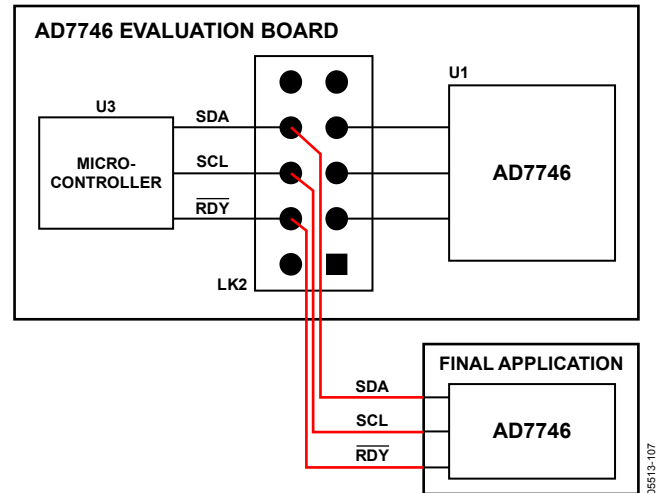


Figure 7. AD7746 Evaluation Board as USB-to-PC Interface

External Connection—AD7746

The AD7746 evaluation board can be used for software development by connecting a customer-specific external microcontroller board to Pin 3, Pin 5, and Pin 7 of LK2, as shown in Figure 8. In this configuration, the AD7746 CDC on the evaluation board is used as the sensing device.

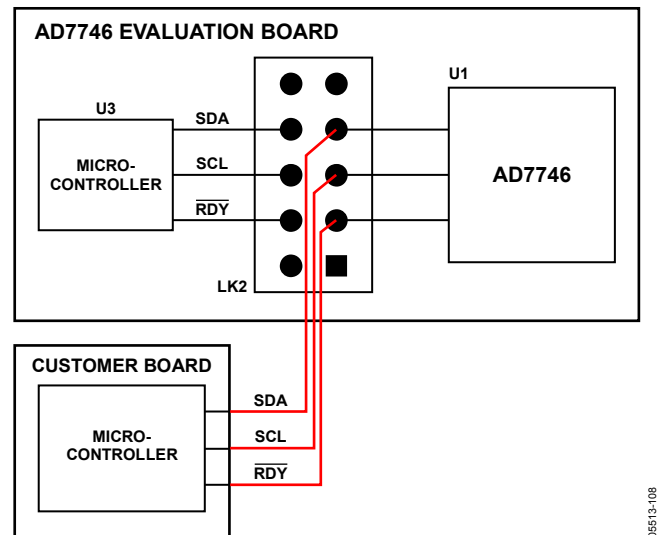


Figure 8. AD7746 Evaluation Board Software Development Platform

USB CONNECTOR

A standard USB connector, J1, is used to connect the evaluation board to the USB port of a PC. A standard USB connector cable is included with the [AD7746](#) evaluation kit. Because the board is powered by the USB connector, an external power supply is not required, although one can be connected to J2.

Communication between the [AD7746](#) evaluation board and the PC is over the USB interface. The on-board USB controller controls this communication.

SOCKETS

The [AD7746](#) evaluation board has four populated sockets: EXCA (P1), EXCB (P2), CIN1– (P3), and CIN1+ (P4). The functions of these sockets are described in Table 1.

To interface to the [AD7746](#) using the analog voltage input channel or the external temperature sensor and an external voltage reference, use the unpopulated through hole pads labeled AIN+, AIN–, REF+, and REF– located on the [AD7746](#) evaluation board.

Table 1. Socket Functions

| Socket | Function |
|--------------------|--|
| CIN1+ | Subminiature BNC (SMB) connector. The capacitive input signal for the CIN1(+) input of the AD7746 is applied to this socket. |
| CIN1– | Subminiature BNC (SMB) connector. The capacitive input signal for the CIN1(–) input of the AD7746 is applied to this socket. |
| CIN2+ ¹ | Subminiature BNC (SMB) connector. The capacitive input signal for the CIN2(+) input of the AD7746 is applied to this socket. On this evaluation board, the positive terminal of the capacitive length sensor demo is connected to CIN2+. |
| CIN2– ¹ | Subminiature BNC (SMB) connector. The capacitive input signal for the CIN2(–) input of the AD7746 is applied to this socket. |
| EXCA | Subminiature BNC (SMB) connector. This socket is connected to the EXCA output of the AD7746 . On this evaluation board, the negative terminal of the capacitive length sensor demo is connected to EXCA. This provides excitation to the on-board capacitive length sensor demo. |
| EXCB | Subminiature BNC (SMB) connector. This socket is connected to the EXCB output of the AD7746 . |

¹ The CIN2– and CIN2+ sockets (P5 and P6, respectively) are unpopulated on the [AD7746](#) evaluation board.

EVALUATION BOARD SOFTWARE

CONFIGURING THE EVALUATION BOARD

The evaluation board is initially configured to allow the user to interface any capacitive input directly to CIN1 of the [AD7746](#) device. To do this, connect one end of the capacitive input to the SMB connector labeled CIN1+ or CIN1-. Then connect the other end of the capacitive input to the SMB connector labeled EXCB.

The [AD7746](#) provides a second capacitive channel, CIN2. On the [AD7746](#) evaluation board, the second capacitive channel is used with the on-board capacitive length sensor demo.

To disable the capacitive length sensor demo, disconnect the two $0\ \Omega$ SMD resistors, R1 and R2. Any capacitive sensor can then be directly interfaced to CIN2 of the [AD7746](#) by connecting one end of the capacitive input to either of the SMB connectors labeled CIN2+ or CIN2- and the other end to one of the SMB connectors labeled EXCA or EXCB.

Note that after the capacitive length sensor demo is disabled, either of the excitation output pins (EXCA or EXCB) can be used as the excitation source, regardless of which capacitive channel is enabled. These settings are configurable using the evaluation board software.

GETTING STARTED WITH THE SOFTWARE

To run the [AD7746](#) evaluation board software, follow these steps:

1. From the **Start** menu, select **Program Files > Analog Devices\AD7746 Evaluation Software**.

The **AD7745/AD7746 Evaluation Software** window appears (see Figure 9). By default, the application opens to the **Real Time** tab.

2. Click the **Length Demo (CH2)** button. This action enables continuous conversions on Capacitive Channel 2 in single-ended mode, enables EXCA as the excitation output pin, sets the update rate, and initializes CAPDAC A. The **Capacitive Length Sensor Demo** window appears (see Figure 10).

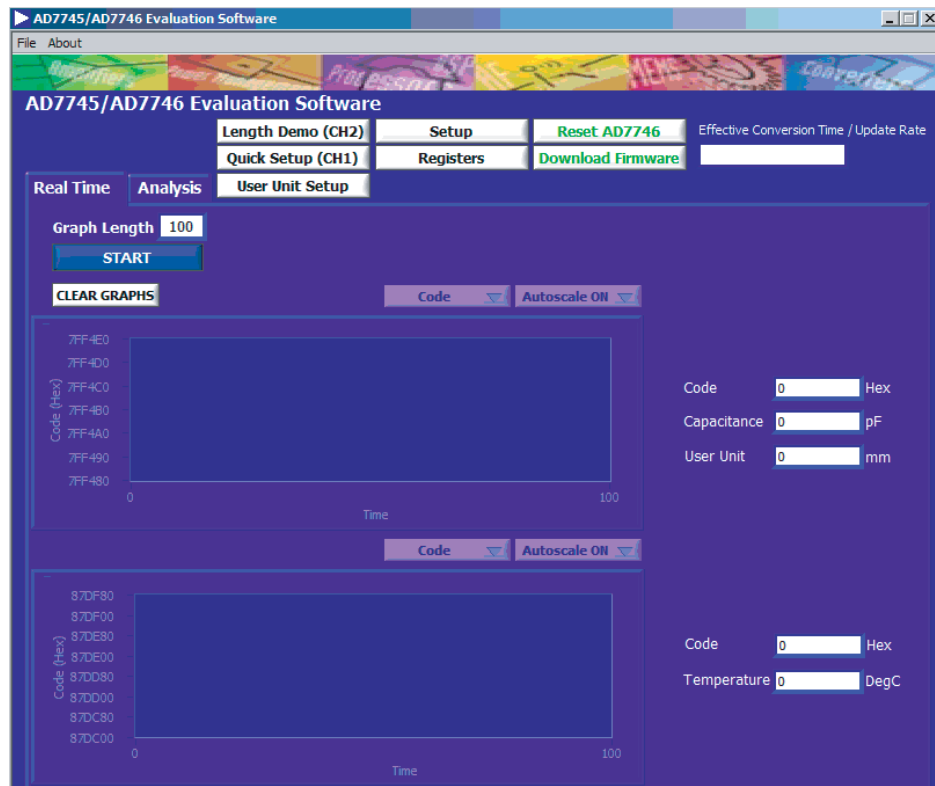


Figure 9. AD7745/AD7746 Evaluation Software Window

- Slide the ruler on the evaluation board. This action is mirrored on the screen. The code, capacitance, and length (in inches or mm) appear on the right side of the window (see Figure 10). These values change as you slide the ruler on the evaluation board.
- Remove the ruler completely by clicking the **0 mm/0 inch Cal** button.
- Place the ruler at the 51 mm/2 inch mark by clicking the **51 mm/2 inch Cal** button. The part is now calibrated to the length of the ruler. Note that when the ruler length exceeds 80 mm, the demo can no longer measure the ruler length because the input capacitance range (± 4 pF) has been exceeded.
- Click **BACK** to return to the **Real Time** tab.

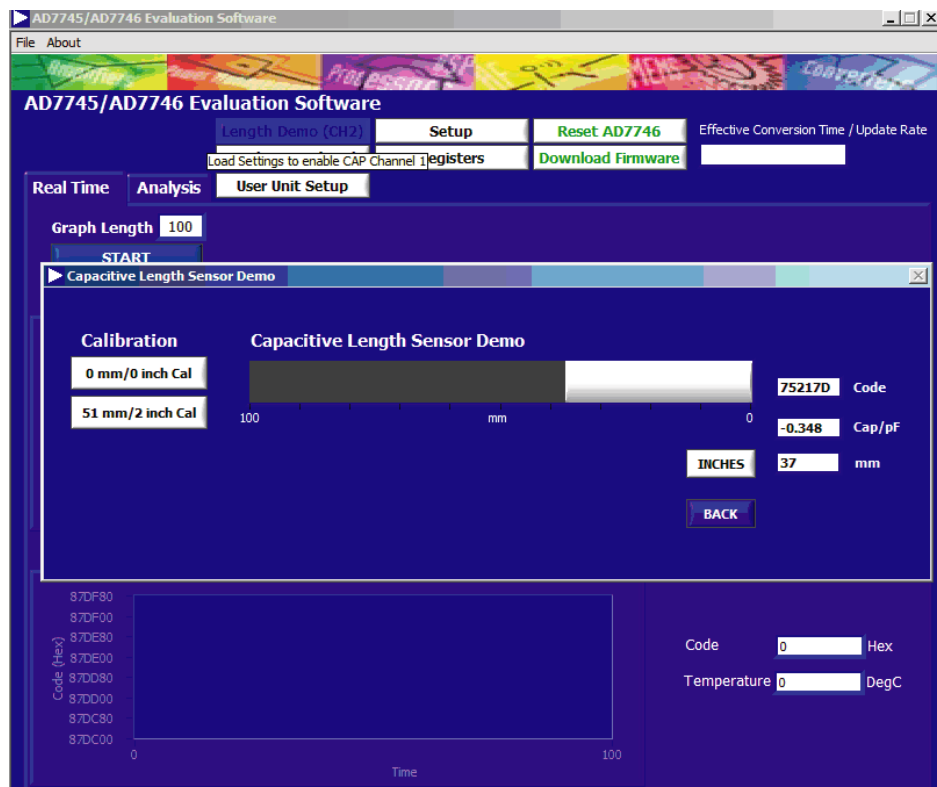


Figure 10. Capacitive Length Sensor Demo Window

SETUP WINDOW

After running the capacitive length sensor demo to check the settings and familiarize yourself with the software, follow these steps to set up the software.

1. On the **Real Time** tab, click **Setup**. The **Setup** window appears (see Figure 11).

The **Setup** window allows you to configure the capacitive channel, the voltage/temperature channel, the output pin for the excitation source, the CAPDACs, and the AD7746 operating mode.

Note that the **Setup** window reflects the settings established during the capacitive length sensor demo, that is,

- Capacitive Channel 2 is enabled in single-ended mode.
 - EXCA is enabled as the excitation output pin.
 - CAPDAC A is set to a value determined by the demo calibration routine.
 - The part is in continuous conversion mode.
2. Click **OK** to return to the **Real Time** tab.

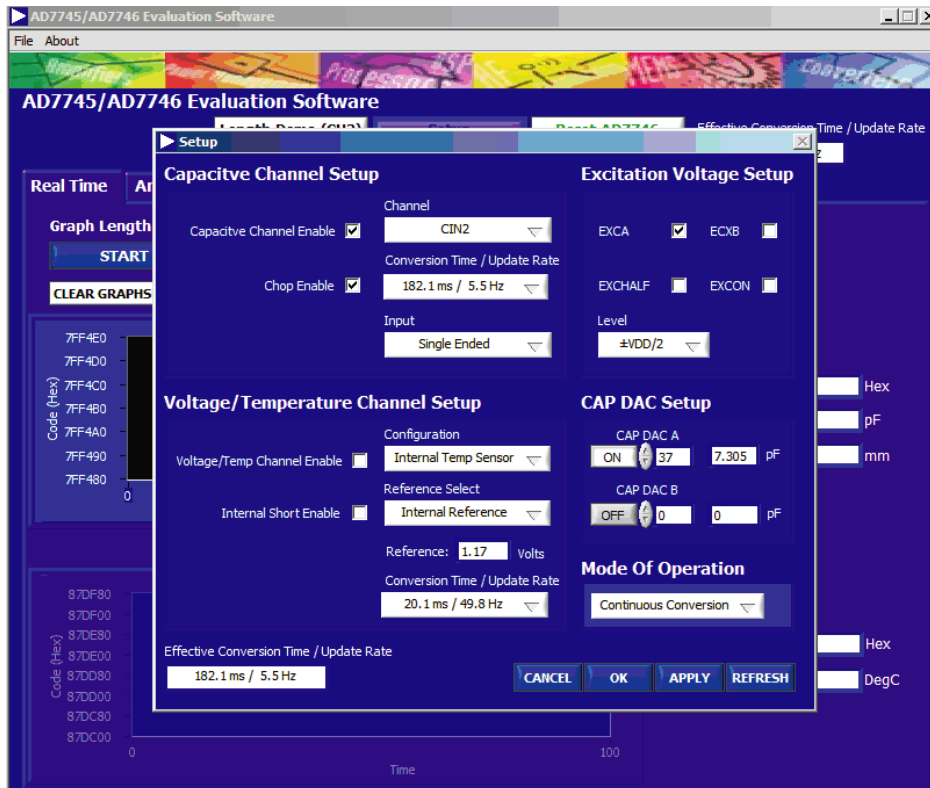


Figure 11. Setup Window

USER UNIT SETUP

To set up the user unit, follow these steps.

1. On the **Real Time** tab, click **User Unit Setup**. The **User Unit Setup** window appears (see Figure 12).
The **User Unit Setup** window allows you to configure a unit that reflects the nature and sensitivity of the capacitive sensor connected to the selected capacitive input. This configuration is then reflected in the **Real Time** tab and the **Analysis** tab. After the capacitive length sensor demo is run, the user unit reflects the capacitive length sensor by default.
2. Click **OK** to return to the **Real Time** tab.
3. Click **START**. Note that the **Real Time** tab reflects the settings established during the capacitive length sensor demo. The samples collected are displayed graphically in real time.

4. Click **STOP** to stop the display of data.
5. Click **Quick Setup (CH1)**. This action enables Capacitive Channel 1, enables EXCB as the excitation output pin, and places the part in continuous conversion mode. In continuous conversion mode, the part directly measures any capacitance placed across the CIN1(+)/CIN1(-) and EXCB pins.

For complete information about this setup, click **Setup**. Alternatively, you can click **Registers**. This action displays a detailed register map of all available registers and reflects the current user settings. The **Registers** window can be used if a more detailed configuration of the **AD7746** device is required.



Figure 12. User Unit Setup Window

PERFORMING A NOISE ANALYSIS

With the quick setup for Capacitive Channel 1 still in place, click the **Analysis** tab. The **Analysis** window appears (see Figure 13). To perform a noise analysis, follow these steps.

1. Type the number of samples required and click **START**.
After the samples are collected, they can be displayed as a waveform or as a histogram. The average, RMS noise, p-p noise, RMS resolution, and p-p resolution values relating to the collected set of samples appear in the **Analysis (Codes)** box on the right side of the window. These values can be displayed in code, in capacitance, or in the user configured unit.
2. To save this set of collected samples, select **File > Save Binary Data**.
3. Select the directory and file name where you want to save the data. The default file name is **Binary Data.txt**.

A summary of the current configuration as well as the data for the selected number of samples in hexadecimal format is saved to the file.

SAVING AND RELOADING USER CONFIGURATIONS

You can save a configuration and reload it at a later time. To save any configuration, follow these steps:

1. Select **File > Save Settings**.
2. Select the directory and file name where you want to save the current user configuration. The default file name is **Settings.txt**. The user unit, user offset, and user range are saved together with the complete register map as it appears in the **Registers** window.

To reload these settings at any time, select **File > Load Settings**. A prompt appears and points, by default, to the previously saved user configuration **Settings.txt** file.



Figure 13. Analysis Window

SCHEMATICS AND ARTWORK

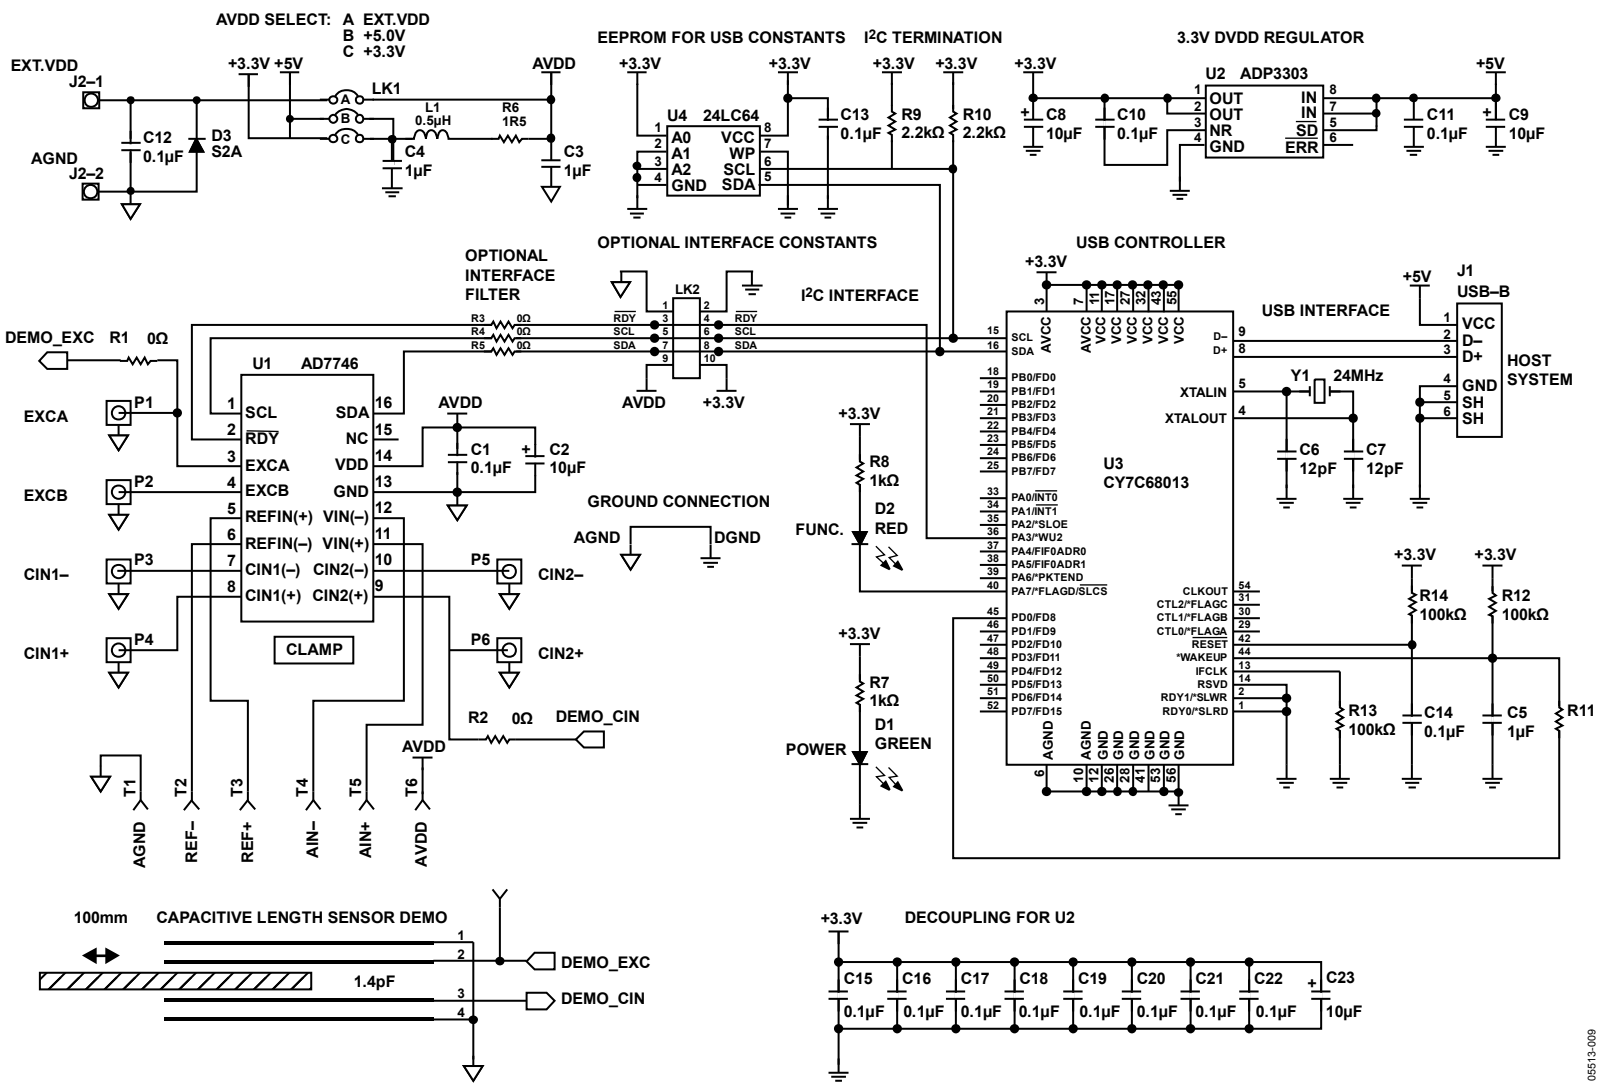


Figure 14. Evaluation Board Schematics

COMPONENT ID

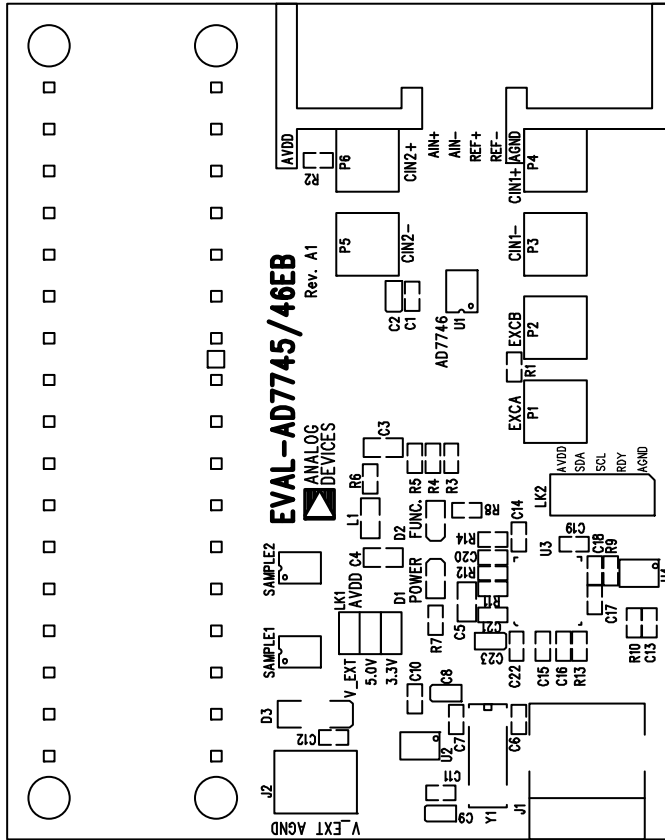


Figure 15. Evaluation Board Layout, Silkscreen

ORDERING INFORMATION

BILL OF MATERIALS

Table 2.

| Qty | Designator | Description | Manufacturer | Part No. |
|-----|----------------------|--|-----------------|------------------------|
| 3 | U1, Sample1, Sample2 | CDC for proximity sensing, 16-lead TSSOP | Analog Devices | AD7746RUZ |
| 1 | U2 | 3.3 V voltage regulator, low I _o , 8-lead SOIC | Analog Devices | ADP3303ARZ-3.3 |
| 1 | U3 | Microcontroller, EZ-USB FX2LP, 56-lead QFN | Cypress | CY7C68013A-56LFXC |
| 1 | U4 | EEPROM, I ² C, 64 kb, 8-lead SOIC | Microchip | 24LC64-I/SN |
| 1 | D1 | LED, green, 15 mcd, 572 nm, 0805 | Avago | HSMG-C170 |
| 1 | D2 | LED, red, 10 mcd, 626 nm, 0805 | Avago | HSMS-C191 |
| 1 | D3 | Diode, 50 V, 1.5 A, SMB | Vishay | S2A-E3/52T |
| 14 | C1, C10 to C22 | Capacitor, ceramic, SMD, 100 nF, X7R, 16 V, 0603 | AVX | CM105X7R104K16AT |
| 4 | C2, C8, C9, C23 | Capacitor, tantalum, SMD, 10 μF, 6.3 V, TAJ-A | AVX | TAJA106K006RNJ |
| 3 | C3 to C5 | Capacitor, ceramic, SMD, 1 μF, Y5V, 10 V, 0603 | Yageo | CC0603ZRY5V6BB105 |
| 2 | C6, C7 | Capacitor, ceramic, SMD, 12 pF, NP0, 50 V, 0603 | Yageo | CC0603JRNPO9BN120 |
| 5 | R1 to R5 | Resistor, SMD, 0 Ω, 0603 | Multicomp | MC 0.063W 0603 0R |
| 1 | R6 | Resistor, SMD, 1.5 Ω, 1%, 0603 | Multicomp | MC 0.063W 0603 1% 1R5 |
| 2 | R7, R8 | Resistor, SMD, 1 kΩ, 1%, 0603 | Multicomp | MC 0.063W 0603 1% 1k |
| 2 | R9, R10 | Resistor, SMD, 2.2 kΩ, 1%, 0603 | Multicomp | MC 0.063W 0603 1% 2k2 |
| 3 | R12 to R14 | Resistor, SMD, 100 kΩ, 1%, 0603 | Multicomp | MC 0.063W 0603 1% 100k |
| 1 | L1 | Ferrite bead, SMD, 300Z, 200 mA, 0805 | Sigma Inductors | BMB2A0300AN1 |
| 1 | Y1 | Crystal, 24 MHz, 12 pF, CMS-8 series | ECS | ECS-240-12-20A-TR |
| 1 | J1 | Connector, USB type Mini-B | Molex | 56579-0576 |
| 1 | J2 | Terminal block with screws, pitch 5 mm | Camden | CTB5000/2 |
| 4 | P1 to P4 | Connector, SMB, 50 Ω | Multicomp | 24-14-2-TGG |
| 1 | LK1 | Straight header, 2 × 3-pin, pitch 2.54 mm | Harwin | M20-9980346 |
| 1 | LK2 | Straight header, 2 × 5-pin, pitch 2.54 mm | Harwin | M20-9980546 |
| 4 | Jumper socket | Jumper socket, red; insert in these locations: LK1 (5.0 V), LK2 (SDA, SCL, RDY) | Harwin | M7566-05 |

ORDERING GUIDE

| Model | Description |
|-----------------------------|------------------|
| EVAL-AD7746EBZ ¹ | Evaluation Board |

¹ Z = RoHS Compliant Part.

ESD CAUTION



ESD (electrostatic discharge) sensitive device.

Charged devices and circuit boards can discharge without detection. Although this product features patented or proprietary protection circuitry, damage may occur on devices subjected to high energy ESD. Therefore, proper ESD precautions should be taken to avoid performance degradation or loss of functionality.

NOTES

NOTES

NOTES

I²C refers to a communications protocol originally developed by Philips Semiconductors (now NXP Semiconductors)

©2005–2011 Analog Devices, Inc. All rights reserved. Trademarks and registered trademarks are the property of their respective owners.
EB05513-0-11/11(A)



www.analog.com