



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China




Freescale and the Freescale logo are trademarks of Freescale Semiconductor, Inc., Reg. U.S. Pat. & Tm. Off. All other product or service names are the property of their respective owners. © 2015 Freescale Semiconductor, Inc. FRDMFXSMULT2BQFC REV 1 920-75788 REV A

 **freescale**
For more information, visit freescale.com/sensortoolbox

FRDM-FXS-MULT2-B

FRDM-FXS-MULT2-B

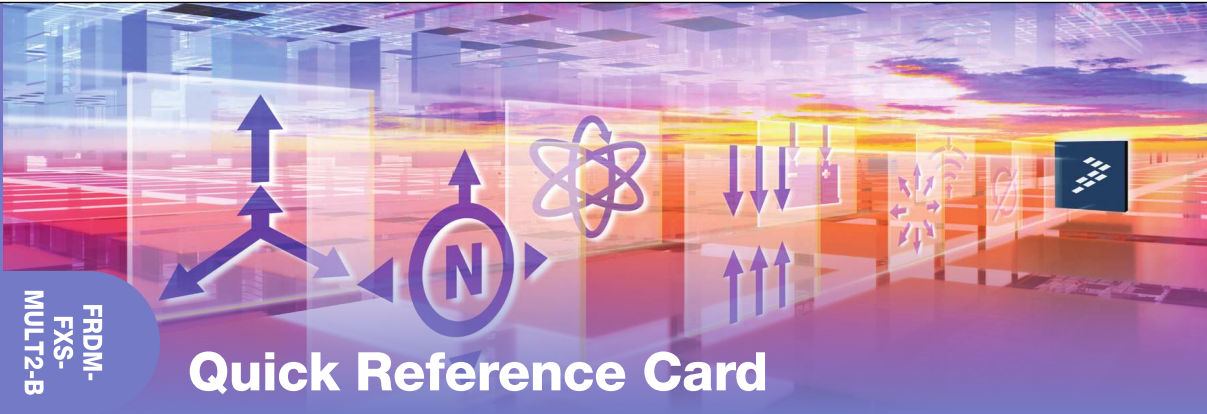

FRDM-FXS-MULT2-B

Quick Reference Card

Freescale Freedom Development Board

Enabled for sensor fusion with FXAS21002C, FXOS8700CQ, MAG3110, MMA8652FC, MPL3115A2, MMA9553L, and FXLS8471Q as part of the Freescale Freedom development platform



 **Get Started**
Download tools and documentation under **Jump-Start Your Design** at freescale.com/sensortoolbox



Get to Know the FRDM-FXS-MULT2-B



Learn more at freescale.com/sensortoolbox

FREESCALE FREEDOM PLATFORM

MAG3110
3-axis magnetometer
10 DFN (2 x 2 x 0.85 mm)

MMA8652FC
3-axis accelerometer
10 DFN (2 x 2 x 1 mm)

MPL3115A2
Pressure sensor
8 LGA (5 x 3 x 1.1 mm)


FXAS21002C
3-axis digital angular
rate gyroscope
24 QFN (4 x 4 x 1 mm)

FXOS8700CQ
6-axis linear accelerometer
and magnetometer
16 QFN (3 x 3 x 1.2 mm)

FXLS8471Q
3-axis SPI accelerometer
16 QFN (3 x 3 x 1 mm)

MMA9553L
Motion-sensing pedometer
16 LGA (3 x 3 x 1 mm)

- 1 Verify package contents:
 - FRDM-FXS-MULT2-B Freescale Freedom development board
- 2 Connect the FRDM-FXS-MULT2-B Freescale Freedom development board to a development board, such as the FRDM-K64F (or any Arduino R3 compatible board). Refer to the Freescale Freedom development board Quick Start Guide for driver information.
- 3 Plug one end of a USB cable into the SDA port on the assembly. Plug the other end of the cable into the USB port on the computer.
- 4 Download and install the latest Sensor Toolbox software at: freescale.com/sensortoolbox
- 5 Start the Sensor Toolbox software.
For more information, go to: freescale.com/sensortoolbox

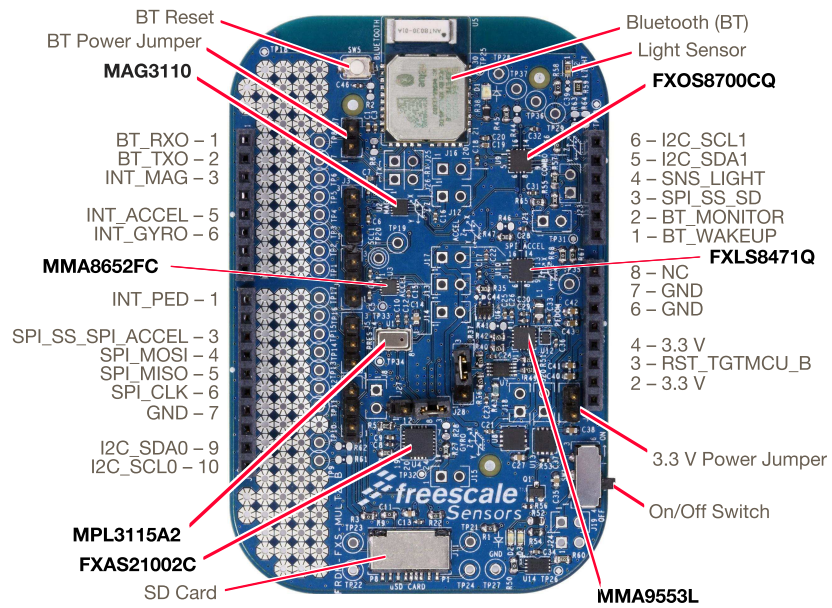

Get to Know the FRDM-FXS-MULT2-B



Learn more at freescale.com/sensortoolbox