

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



## Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China









For more information, visit freescale.com/ sensortoolbox

**FRDM** STBC-A8471 resscale and the resscale logic are rademarks of Freescale Semiconduct leg. U.S. Pat. & Tm. Off. All other product or service names are the property of their respective owners. © 2015 Freescale Semiconductor, Inc. FROMSTBCA9471QRC REV 1 120-28984 REV A

## FRDMSTBC-A8471

FRDM 5TBC-FRDM

FXLS8471Q 3-axis linear accelerometer 3-Axis Sensor Toolbox Development Board

 
Quick Reference




documentation under Download tools and Get Started

\*\* freescale

FREESCALE FREEDOM PLATFORM



- Connect the FRDMSTBC-A8471 development board to a Freescale Freedom development board, such as the FRDM-KL25Z (or any Arduino R3 compatible board). Refer to the Freescale Freedom development board Quick Start Guide for driver information.
- Plug one end of a USB cable into the SDA port on the assembly.
  Plug the other end of the cable into the USB port on the computer.
- Download and install the latest Sensor Toolbox software at: freescale.com/sensortoolbox
- 5 Start the Sensor Toolbox software.

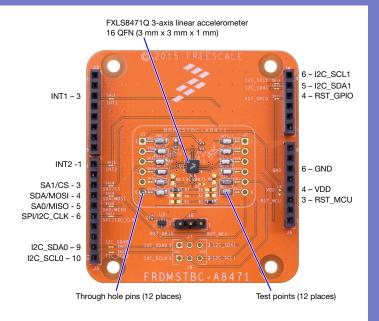

Get to Know the FRDMSTBC-A8471

\*\* freescale

Learn more at freescale.com/sensortoolbox