



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



## Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China





**NOTE**

All numerical values are in metric units [with U.S. customary units in brackets]. Dimensions are in millimeters [and inches]. Unless otherwise specified, dimensions have a tolerance of  $\pm 0.13$  [ $\pm 0.005$ ] and angles have a tolerance of  $\pm 2^\circ$ . Figures and illustrations are for identification only and are not drawn to scale.

**1. INTRODUCTION**

This specification covers the requirements for application of TE Connectivity (TE) HDP series connector system. HDP20 features quick connect-disconnect bayonet coupling, single hole bulkhead mounting, silicone seals, and a rear insertion/rear removal contact system.

The HDP20 Series is a heavy duty rated, environmentally sealed, composite shell, multi-pin connector. The composite thermoplastic shell is ideal in applications where chemicals can damage a connector housing. HDP20 features quick connect-disconnect bayonet coupling, single hole bulkhead mounting, silicone seals, and a rear insertion/rear removal contact system.

Basic terms and features of this product are provide in Figure 1 and 2 for standard and reverse configuration, respectively. HDP Series are available in size 18 and 24. See Figure 3 for pin arrangements.

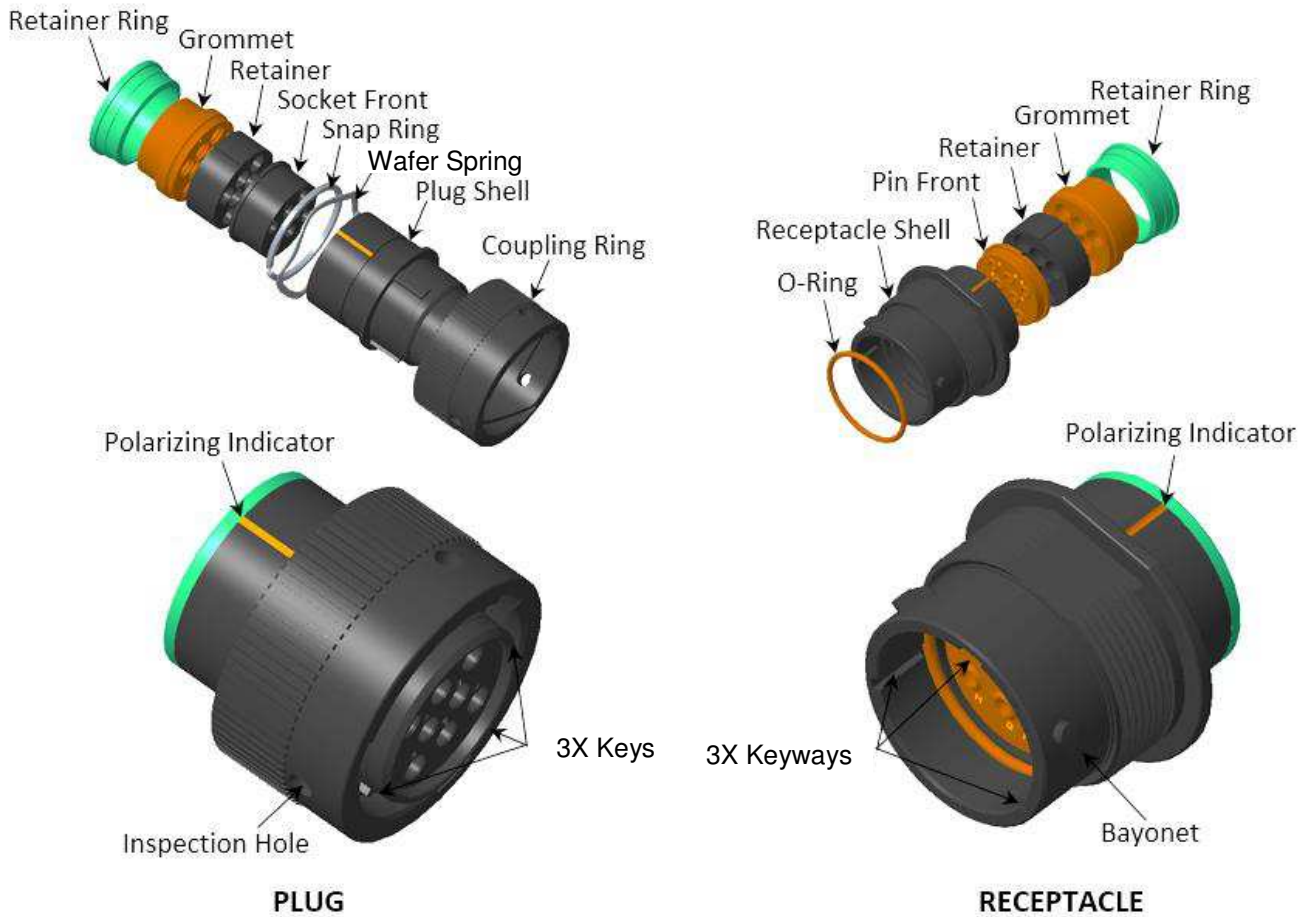


Figure 1 (Standard Configuration)



**Note**

The polarizing indicator is same color as shell. The color is shown only to highlight the feature.



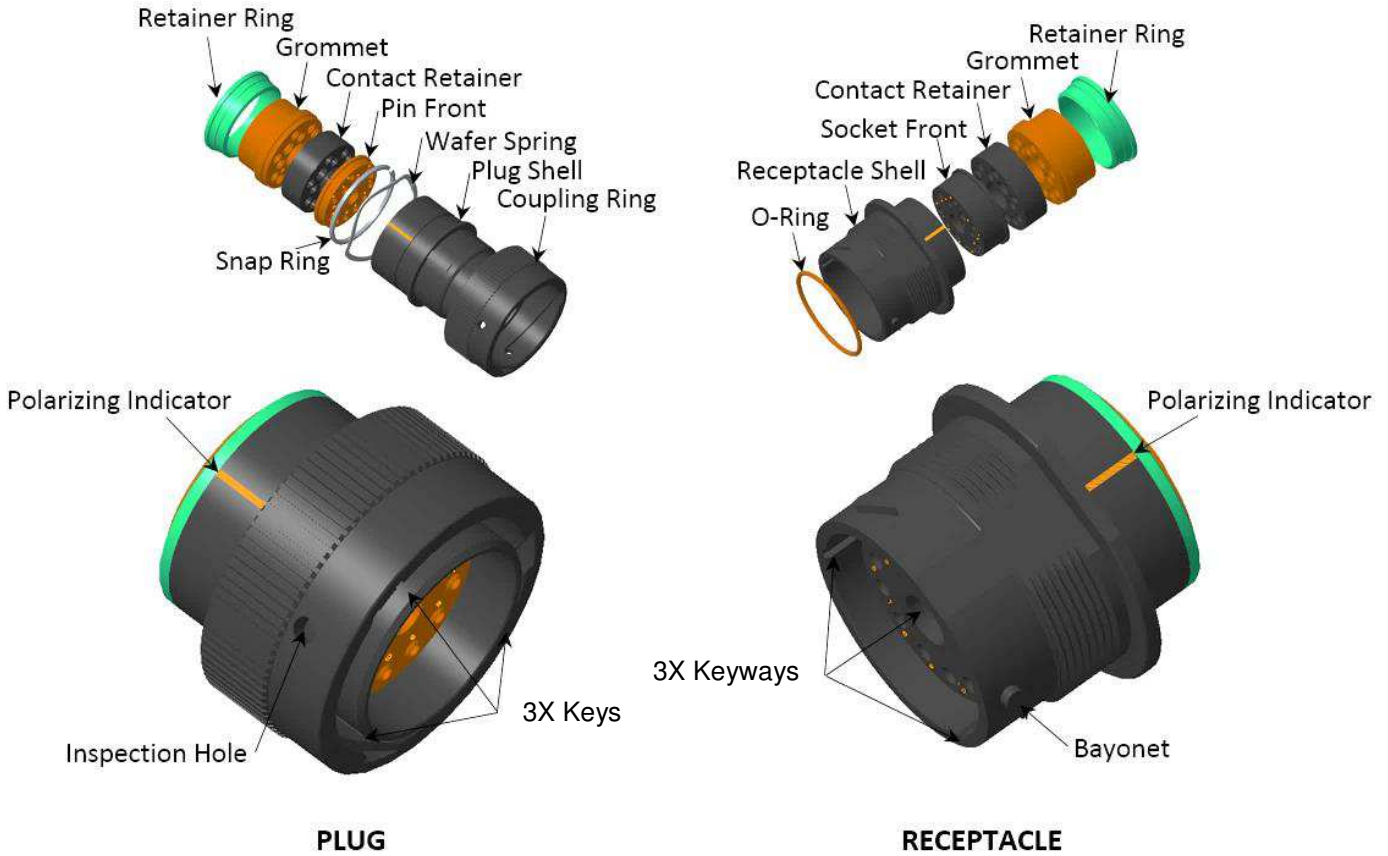



Figure 2 (Reverse Configuration)



**Note**

The polarizing indicator is same color as shell. The color is shown only to highlight the feature.

1.1 Product Dimensions

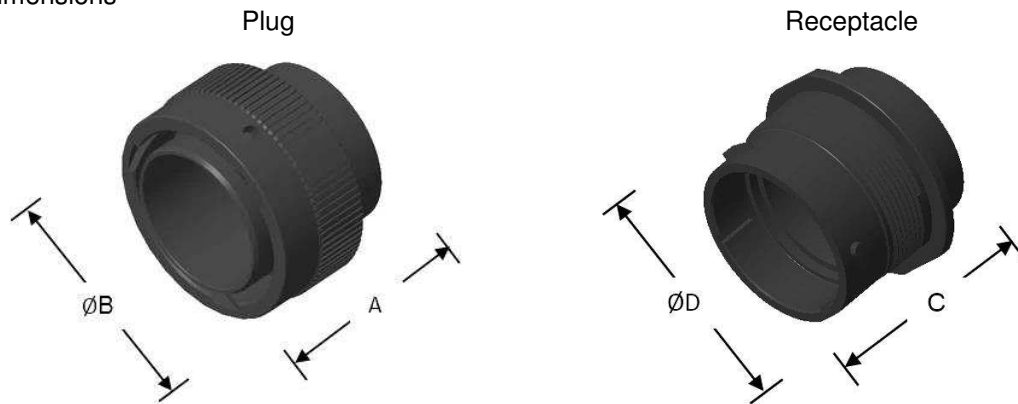

Shell Size	Overall Length A	Overall Height ØB	Overall Length C	Overall Height ØD
18	1.521 [38.63]	1.700 [43.17]	1.648 [41.86]	1.750 [44.45]
24	1.521 [38.63]	1.950 [49.53]	1.648 [41.86]	2.000 [50.80]

## 2. REFERENCE MATERIAL

### 2.1 Revision Summary

See section 8

### 2.2 Customer Assistance

Reference Product Base Part Numbers, HDP24-18-XXP/SX-XXXX, HDP24-24-XXP/SX-XXXX, HDP26-18-XXP/SX-XXXX, HDP26-24-XXP/SX-XXXX. Where XX is pin arrangement, X is seal type (N,T,E), XXXX is modification code. Product Code EQ91 is representative of DEUTSCH HDP series connector system. Use these number will identify the product line and help you obtain product and tooling information when visiting [www.te.com](http://www.te.com) or calling the number at the bottom of page 1.

### 2.3 Drawings

Customer drawings for product part numbers are available from [www.te.com](http://www.te.com). Information contained in the customer drawing takes priority.

Product Drawing	Description
HDP24-18-XXP/SX	Size 18 Receptacle
HDP24-24-XXP/SX	Size 24 Receptacle
HDP24-18-14PE-C041	Size 18 Receptacle
HDP24-18-6P/SX-C030	Size 18 Receptacle
HDP24-18-6PX	Size 18 Receptacle
HDP24-18-XP/SX-L017	Size 18 Receptacle
HDP24-18-XXP/SX-L015	Size 18 Receptacle
HDP24-18-XXP/SX-L024	Size 18 Receptacle
HDP24-24-7PN-C038	Size 24 Receptacle
HDP24-24-7PN-CL18	Size 24 Receptacle
HDP24-24-7PN-CL19	Size 24 Receptacle
HDP24-24-7PN-CL22	Size 24 Receptacle
HDP24-24-91PX-P064	Size 24 Receptacle
HDP24-24-XXP/SX-L015	Size 24 Receptacle
HDP24-24-XXP/SX-L017	Size 24 Receptacle
HDP24-24-XXP/SX-L024	Size 24 Receptacle

Product Drawing	Description
HDP26-18-XXP/SX	Size 18 Plug
HDP26-18-14SE-CL20	Size 18 Plug
HDP26-18-6P/SX-C030	Size 18 Plug
HDP26-18-6SN-CL16	Size 18 Plug
HDP26-18-6SN-CL21	Size 18 Plug
HDP26-18-6SX	Size 18 Plug
HDP26-18-XP/SX-L017	Size 18 Plug
HDP26-18-XXP/SX-L015	Size 18 Plug
HDP26-18-XXP/SX-L024	Size 18 Plug
HDP26-24-XXP/SX	Size 24 Plug
HDP26-24-7SN-C038	Size 24 Plug
HDP26-24-7SN-C018	Size 24 Plug
HDP26-24-7SN-C019	Size 24 Plug
HDP26-24-7SN-C022	Size 24 Plug
HDP26-24-91SE-L024	Size 24 Plug
HDP26-24-91SX-L015	Size 24 Plug
HDP26-24-91SX-P064	Size 24 Plug
HDP26-24-91SX-PL04	Size 24 Plug
HDP26-24-XXP/SX-L015	Size 24 Plug
HDP26-24-XXP/SX-L017	Size 24 Plug
HDP26-24-XXP/SX-L024	Size 24 Plug

## 2.4 Specifications

- 108-151015 HDP Series Product Specification
- 114-151000 Application Specification for DEUTSCH Size 16 S&F Pin & Socket.
- 114-151001 Application Specification for DEUTSCH Size 16 S&F Pin & Socket.
- 114-151002 Application Specification for DEUTSCH Size 12 S&F Pin & Socket.
- 114-151003 Application Specification for DEUTSCH Size 20 S&F Pin & Socket.
- 0425-205-0000 Application Specification for DEUTSCH Size 4-20 HD Solid Pin & Socket.
- 0425-013-1800 Arrangements for Shell Size 18
- 0425-014-2400 Arrangements for Shell Size 24

## 2.5 Instructional Material

Instruction sheets (408-series) provide product assembly instructions or tooling setup, and operation procedures and customer manuals (409-series) provide machine setup and operating procedures. Instructional material that pertain to this product are:

- 408-151007 DEUTSCH Extraction Tools for Rear-Release Connectors.

## 3. REQUIREMENTS

### 3.1. Safety

Do not stack product shipping containers so high that the containers buckle or deform.

### 3.2. Storage

#### A. Ultraviolet Light

Prolonged exposure to ultraviolet light may deteriorate the chemical composition used in the product material.

#### A. Shelf Life

The product should remain in the shipping containers until ready for use to prevent deformation to components. The product should be used on a first in, first out basis to avoid storage deterioration could adversely affect performance.

#### B. Chemical Exposure

Do not store product near any chemical listed below as they may cause stress corrosion cracking in the material.

Alkalis	Amines	Carbonates	Nitrites	Sulfur Nitrites	Tartrates
Acids	Ammonia	Citrates	Phosphates	Sulfur Compounds	




#### NOTE

*Resistance depend on chemical concentration, temperature, and exposure medium..*

### 3.3 Characteristics


A. Part Numbering system.

#### HDP 26 – 24 – 21 S X - XXXX

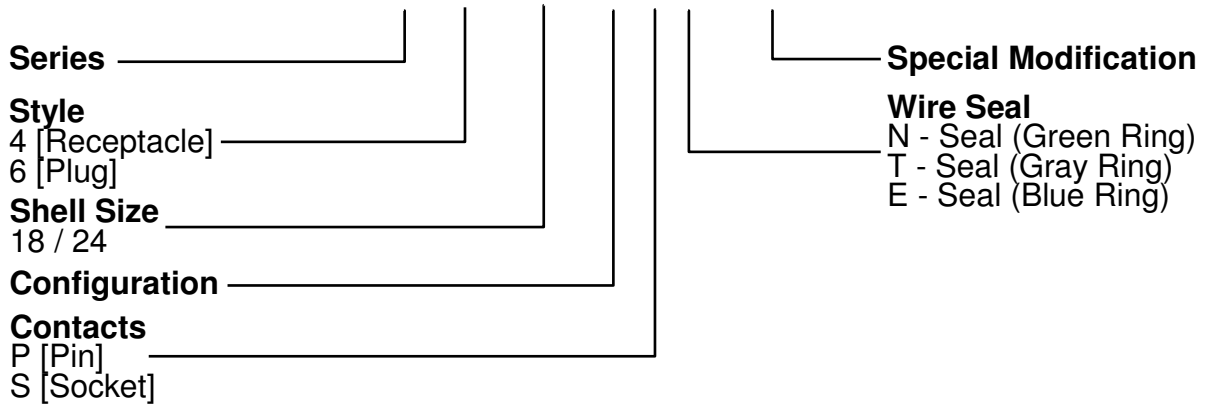


B. Pin Arrangements

Size 18 (See 0425-013-1800 for contact cavity marking)

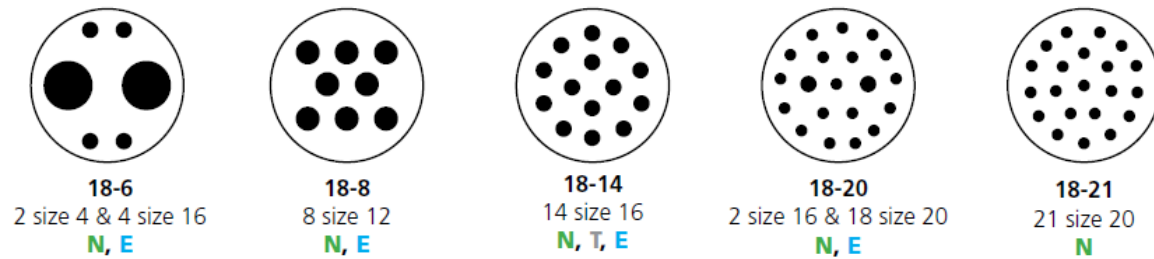


Size 24 (See 0425-014-2400 for contact cavity marking)

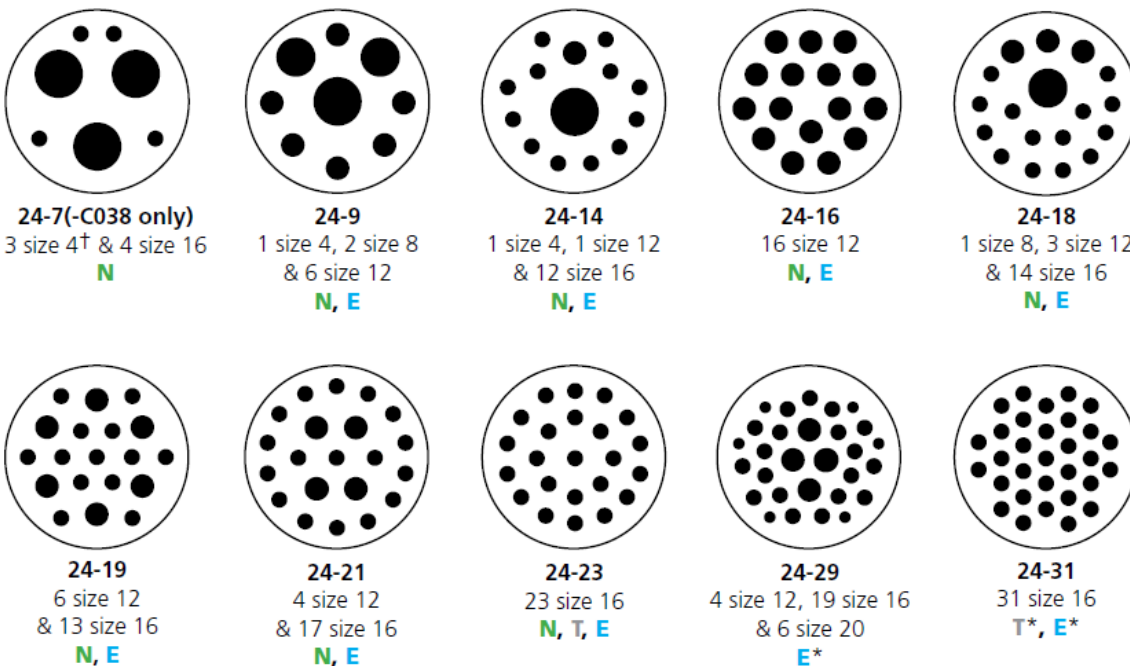

†Requires size 4 contact part number, 5960-203-04\*\*(Pin) and 5962-203-04\*\*(Socket)

\*Modified seal, see drawing.

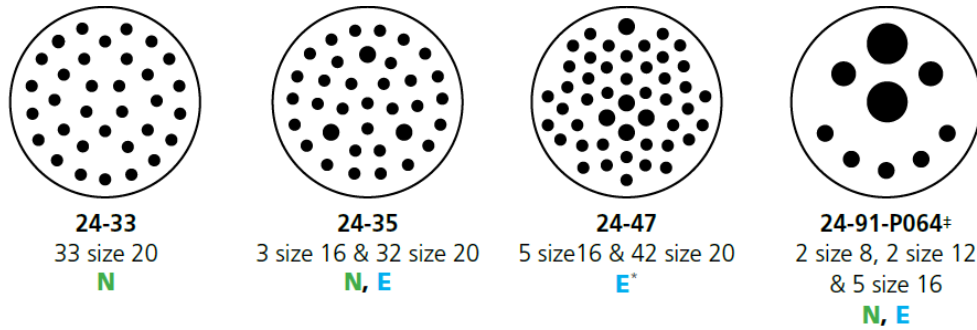

‡Without P064 modification, plug cavities 4 and 5 are internally connected.

Figure 3 Pin Arrangements

### C. Materials

Retainer Ring: PA66 10GF (Green, Gray, Blue)  
 Grommet: VMQ (Red-Orange)  
 Contact Retainer: PEI (Black)  
 Snap Ring: Steel  
 Socket Front: PEI (Black)  
 Pin Front: TPE (Red-Orange)  
 Plug Shell: PA66 10GF (Black)  
 Receptacle Shell: PA66 10GF (Black)  
 Wafer Spring: Steel  
 Coupling Ring: PA66 10GF (Black)

### D. Sealing Range

Contact Size	N-Seal Green Ring	T-Seal Gray Ring	T-Seal Modified*	E-Seal Blue Ring	E-Seal Modified*
20 14-22 AWG [2.5-0.35mm <sup>2</sup> ]	.040-.095 [1.02-2.41]	.040-.095 [1.02-2.41]	-	.040-.095 [1.02-2.41]	.040-.083 [1.01-2.10]
16 14-20 AWG [2.0-0.5mm <sup>2</sup> ]	.100-.134 [2.54-3.40]	.088-.134 [2.23-3.40]	.088-.106 [2.24-2.69]	.053-.120 [1.35-3.05]	.053-.103 [1.35-2.62]
12 10-14 AWG [6.0-2.0mm <sup>2</sup> ]	.134-.170 [3.40-4.32]	.113-.170 [2.87-4.32]	-	.097-.158 [2.46-4.01]	.097-.158 [2.46-4.01]
8 8-10 AWG [10.0-5.0mm <sup>2</sup> ]	.190-.240 [4.83-6.10]	.170-.240 [4.32-6.10]	-	.135-.220 [3.43-5.59]	-
4 6 AWG [16.0-13.0mm <sup>2</sup> ]	.280-.292 [7.11-7.42]	.261-.292 [6.63-7.42]	-	.261-.292 [6.63-7.42]	-
4 4 AWG [25.0-21.0mm <sup>2</sup> ]	.311-.420 [7.90-10.67]	-	-	-	-

\*Arrangements 24-29, 24-47 and 24-31 are only available with modified seals.  
 Arrangement 24-31 modified E-Seal= 0.053 – 0.106 [1.35 – 2.69]


### E. Sealing Plugs

Open cavities provide pathways for contaminants to enter the connectors. To maintain seal integrity, any unused cavity must be filled with the appropriate size sealing plug.

Part Number	Contact Size	Material	Color	Description	Sealing Plug
114019	4	VMQ	Red-Orange		
114018	8	PBT	White		
114017	12, 16	PBT	White		
0413-217-1605	16	PBT	White	Locking	
0413-003-1605	16	PBT	Blue		
0413-204-2005	20	PBT	Red		

### F. Keying Pins.

Keying pins are solid plastic rods used to help prevent mis-mating of like connectors in close proximity. Keying pins are inserted into the retention fingers of an empty socket cavity. Once installed, the keying pin blocks a mating contact pin from being inserted. The contact pin will be blocked before the coupling device mates the connectors, helping to prevent the mis-mating of like connectors. Proper usage requires that the corresponding mating pin be omitted and a sealing plug inserted in the rear cavity of the mating connector. Individual applications will vary, and testing should be done to determine the best pattern arrangement to help prevent improper connector mating.

Part Number	Contact Size	Material	Color	Description	Sealing Plug
0413-216-2005	20	PBT	Red	Locking	
0413-215-1605	16	PBT	White		
0413-214-1205	12	PBT	Yellow		

Note: Multiple keying pins may be required to help prevent unintentional forced mating.



G. Modifications

Mod	Description
C018	Cavities blocked (11, 18, 19), N/E seal options
C019	Cavities blocked (1, 2, 8, 9), N/E seal options
C022	Cavities Blocked (A, D, J, M), with reduced diameter seals (E seal)
C030	4 size 16 cavities blocked (1, 2, 5, 6)
C038	3 size 4, 4 size 16, special size 4 AWG contacts
C041	Receptacle with diagnostic keying
CL16	Four size 16 cavities blocked (1, 2, 5, 6) and ring adapter for back
CL18	3 size 4, 4 size 16, special size 4 AWG contacts and ring adapter for backshell
CL19	3 size 4, 4 size 16, special size 4 AWG contacts and threaded adapter for backshell
CL20	Plug with diagnostic keying
CL21	4 size 16 cavities blocked (1, 2, 5, 6) and threaded adapter for backshell
CL22	3 size 4, 4 size 16, special size 4 AWG contacts and wide threaded adapter for backshell
L015	Threaded adapter for backshell
L017	Ring adapter for backshell
L024	Wide threaded adapter for backshell
P064	24-91 arrangement without internal jumper
PL04	24-91 arrangement without internal jumper and ring adapter for backshell

The L015, L017, L024 adapter modifications provide simple, low cost assembly solutions for applications that require a backshell or conduit. The adapters are designed to be used with the backshell of your choice.



C030 Modification.

Size 18 shell, 2 pin connector that accept size 4 solid contacts rated up to 100 amps for each cavity.



C041 / CL20 Modifications.

C041: size 18 shell, 14 pin connector with a data link key and reduced diameter seals on the receptacle.

CL20: size 18 shell, 14 pin connector includes a ring adapter, reduced diameter seal, and a data link key on the plug.



H. Mounting Hardware.

DEUTSCH lockwashers and panel nuts are available to aid in mounting the HDP20 Series connectors. The lockwashers are used to add tension between the threads and the nut to provide a secure mount. The lockwasher and the panel nut should be used together.


LOCKWASHER



Shell Size	Part Number	OD
18	2414-002-1886	1.892 [48.06]
24	2414-001-2486	2.080 [52.83]

Material: Spring Steel, Tin plate  
 Operating temperature is -55°C to +125°C [-67° to +257°F].

PANEL NUT

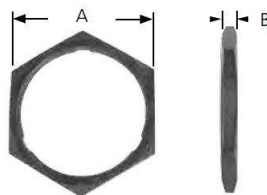


Shell Size	Part Number	A	B
18	2411-002-1805	1.685 [42.80]	.250 [6.35]
24	2411-001-2405	1.875 [47.63]	.250 [6.35]

Material: PEI  
 Operating temperature is -55°C to +125°C [-67° to +257°F].

I. Mounting.

RECEPTACLE MOUNTING

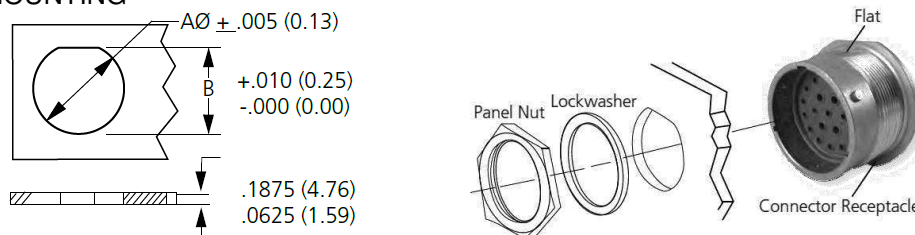


Shell Size	AØ	B
18	1.507 [38.28]	1.442 [36.63]
24	1.696 [43.08]	1.632 [41.45]

### D HOLE PUNCH.

The D hole punch is a hand tool used to cut a D shaped hole. The D shaped hole allows the connector to be securely mounted and prevents the connector from spinning.



**Punchable Material:**  
Up to .078" mild steel or aluminum. Up to .1875" plastic, wood, paneling, or other soft material.  
**Tool Material:**  
A2 material heat treated to a Rockwell hardness of 60 to 62.  
**Tool Size: (rough dimensions)**  
5.5"L x 2"H x 2" D  
**Sharpening:**  
The tool can be sharpened as needed.  
**Usability:**  
A .625" minimum pilot hole is required to accommodate the draw stud. Air tools can be used.

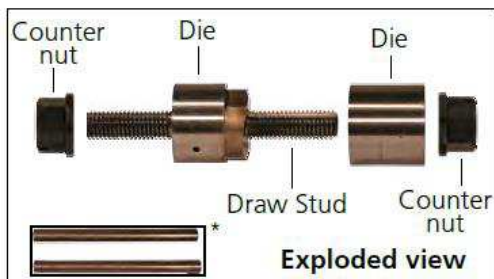

The rods included with the "D" hole punch are used to remove the cutout and are not used in the cutting process.

Shell Size	Part Number
18	18-D-PUNCH
24	24-D-PUNCH

### J. Accessories

Several accessory items can be used to complement the connectors such as PVC boots, plastic backshells, neoprene closed cell gaskets, and plastic protective caps. Accessories are designed to complete the application and meet a wide array of design requirements such as solutions for mounting, providing additional protection, and offering increased aesthetics.

### BOOTS

Slip-on boots are not only aesthetically appealing, but also provide increased protection from dirt, paint overspray, and pressure washing.

HD30-24BT



Part Number	Description
HD30-18BT	18 shell size boot, gray
HD30-18BT-BK	18 shell size boot, black
HD30-18BT-90-BK	18 shell size boot, 90° bend, black
LC-90BT-HT	18 shell size boot, 90° bend, high temperature material, yellow
HD30-24BT	24 shell size boot, gray
HD30-24BT-BK	24 shell size boot, black
HD30-24BT-90-BK	24 shell size boot, 90° bend, black
MT-90BT-HT-24	24 shell size boot, 90° bend, high temperature material, yellow

Material: PVC  
Operating temperature is -29°C to +100°C [-20° to +212°F].

**PROTECTIVE DUST CAPS**

Protective caps are available for receptacle. An optional rubber and steel lanyards are available to protect the connector while not mated.



Shell Size	Part Number	Description
18	HDC26-18	Plug cap for receptacle protection, environmentally sealed
24	HDC26-24	

Material: PA66

Operating temperature is -55°C to +125°C [-67° to +257°F].

**BACKSHELL AND ADAPTERS FOR L017 MODIFICATION**



Shell Size	Orientation	L017 Backshell Part Number	Conduit Size
18	Straight	2428-016-1805	13, 17, 19 (mm) NW
	90°	2428-015-1805	13, 17, 19 (mm) NW
24	Straight	2428-008-2405	1"
	90°	2428-004-2405	1"
24	Straight	2428-010-2405	17, 19, 23, 26 (mm) NW
	90°	2428-011-2405	17, 19, 23, 26 (mm) NW

Material: PA66

Operating temperature is -55°C to +125°C [-67° to +257°F].

**THREADED ADAPTER FOR L015 MODIFICATION**



Shell Size	Conduit Adapter Part Numbers		Conduit Size
24	Seal Ring: SRN21	Cap Nut: CN21	22 (mm) NW

Material: Seal Neoprene, Cap Nut PA66

Operating temperature is -40°C to +134°C [-40° to +273°F].



### BACKSHELL FOR L015 MODIFICATION

Designed to screw onto connectors with the L015 modification, which adds a threaded adapter. The rigid, durable backshells offer a high level of protection, provide strain relief, and improve aesthetics.



Shell Size	Cable Diameter	Backshell	Compression Nut
24	.430-.570 [10.92-14.48]	M902-2243	M902-2053
	.570-.710 [14.48-18.03]	M902-2244	M902-2054

Material: PC/PBT

Operating temperature is -40°C to +134°C [-40° to +273°F].

### BACKSHELLS FOR L024 MODIFICATION

Designed to screw onto connectors with the L024 modification, which adds a wide threaded adapter. The rigid, durable backshells offer a high level of protection, provide strain relief, and improve aesthetics.



Shell Size	Orientation	L024 Backshell Part Number
18	Straight	2428-025-1805
24		2428-024-2405

Material: PA66

Operating temperature is -55°C to +125°C [-67° to +257°F].

### GASKETS

Moisture, dirt, salt, sand, and road debris can all work their way into electrical panels through unsealed mounting flanges. These rugged high quality gaskets form a tight seal between the panel face and connector flange to help keep out destructive elements. The gaskets have a thickness of .125.



Shell Size	Part Number
18	16-04978
20	16-04477

Material: Closed Cell Sponge


Operating temperature is -57°C to +107°C [-70° to +225°F].

### 3.4 Contact Insertion

- The crimped contacts must meet these specification:
  - 114-151000, DEUTSCH size 16 S&F
  - 114-151001, DEUTSCH size 16 S&F
  - 114-151002, DEUTSCH size 12 S&F
  - 114-151003, DEUTSCH size 20 S&F
  - 114-151006, DEUTSCH size 12 S&F
  - 0425-205-0000, DEUTSCH size 4-20 Solid
- Ensure the correct connector configuration is being used before inserting contacts.
  - Standard Configuration: Pins used in receptacle; Sockets used in plug.
  - Reverse Configuration: Sockets used in receptacle; Pins used in plug.



- Push contacts straight into the grommet until a positive stop is felt. The contact will lock into place. A slight tug on wire will confirm that it is properly locked in place.

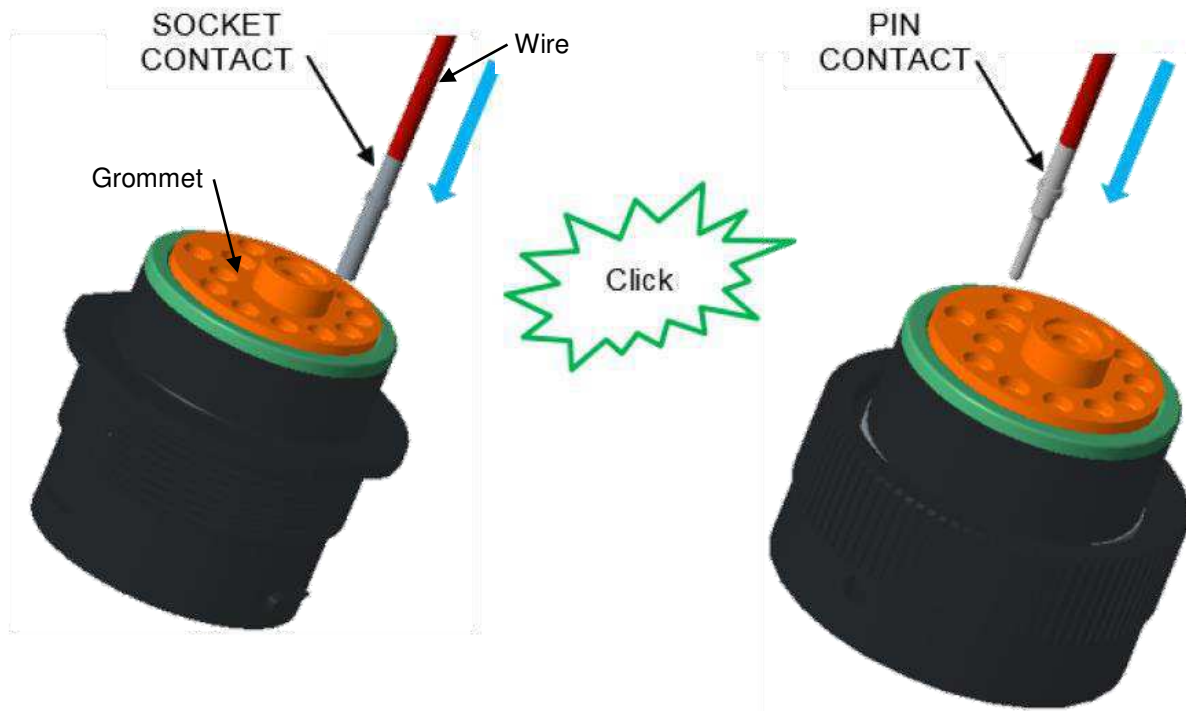

- i** Note
- Wire insulation outside diameter must meet connector wire sealing range per section 3.3.D.
  - Insertion tool, M15570-16 (size 16) or M15570-20 (size 20) may be needed for  $\leq 20$  AWG wire.

### 3.5 Contact Insertion Tool

Insertion tools are used to help insert small gage wired contacts into connectors that utilize a round shoulder contact retention system. Insertion tools are compact, easy-to-use and made with durable plastic to insert wired contacts without damage to wire, insulation, rear grommet seal or connector housing.

#### 1. USING THE TOOL

1. Insert the wired contact into the colored end wire entry slot and gently pull back until the contact locking shoulder is against tool.
2. Push the tool/wired contact assembly into the connector rear until the contact is felt snap into position within the retainer.
3. While holding the wire forward, gently pull remove tool out.
4. A slight tug on wire will confirm the contact is properly locked in place.

Contact Size	Part Number	Mil-Spec	Color Insertion	Insertion Tool
16	M15570-16	M81969/14-03	Blue	
20	M15570-20	M81969/14-11	Red	



**CAUTION**

*Do not twist or insert the insertion tool at an angle; otherwise, damage to the cavity retention finger(s) will result.*


### 3.6 Contact Removal

DEUTSCH removal tools are designed to simplify contact removal and field service repair in connectors that utilize a round shoulder contact retention system. Removal tools are compact, easy-to-use, and manufactured of heavy duty plastic to remove contacts without damage to the wire, insulation, connector seals, or connector body.

Each extraction tool is designed to extract individual DEUTSCH solid and stamped and formed (S&F) pin and socket contacts from rear-release connectors. See 408-151007 for more information on extraction tool.

#### 1. USING THE TOOL

1. From the rear of the connector, align the tool tip with the contact cavity of the contact to be removed. Place the wire of the contact over the tool wire entry slot and apply light pressure on the wire until it enters the wire entry slot. See Figure 6, Detail A.
2. Slide the tool along the wire and into the contact cavity until the tool tip engages the contact and resistance is felt. See Figure 6, Detail A.
3. Gently pull the tool with the wire until the contact is removed. See Figure 6, Detail B.

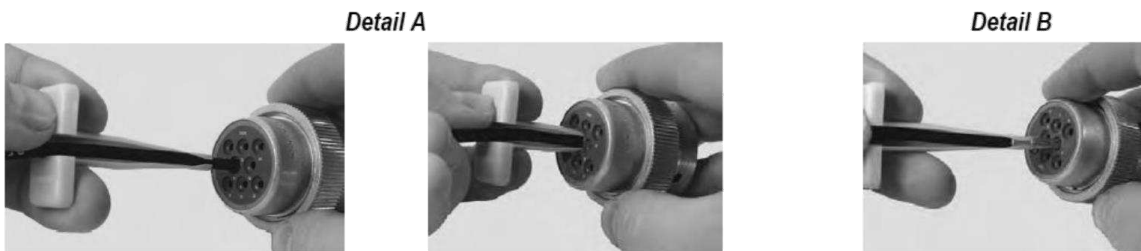

**CAUTION** Do not twist or insert the extraction tool at an angle; otherwise, damage to the cavity retention finger(s) will result.



Part Number	Contact Size	Wire Gauge Range	Color
0411-027-0405	Size 4	4 AWG	Black
114009	Size 4	6 AWG	White
114008	Size 8	8-10 AWG	Green
0411-353-0805	Size 8 for HD Box	8-10 AWG	Green Extended
114010	Size 12	12 AWG	Yellow
0411-337-1205	Size 12	12 AWG Extra Thin Wall (E-Seal)	Orange
0411-291-1405	Size 16	14-16 AWG	Green
0411-310-1605	Size 16	16-20 AWG	Light Blue
0411-336-1605	Size 16	16-20 AWG Extra Thin Wall (E-Seal)	Dark Blue
0411-240-2005	Size 20	20-22 AWG	Red




### 3.7 Sealing Plug, Locking Sealing Plug and Keying Pin Installation
 
#### Sealing Plug Installation


##### Step 1:

Holding the sealing plug with large diameter end away from the connector, gently apply downward pressure to force the sealing plug into the cavity.



##### Step 2:

With perpendicular motion, apply downward pressure to the large diameter end of the sealing plug.

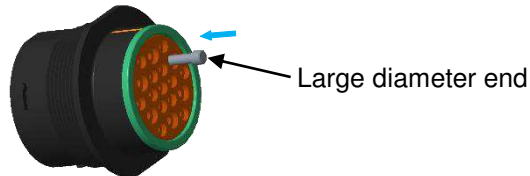

##### Step 3:


Apply pressure until sealing plug is forced to stop by contact with rear grommet. Visually inspect the sealing plug to confirm it is flush with cavity opening.



#### Locking Sealing Plug Installation


##### Step 1:

Holding the sealing plug with locking shoulder end towards the connector, gently apply downward pressure to force the sealing plug into the cavity.

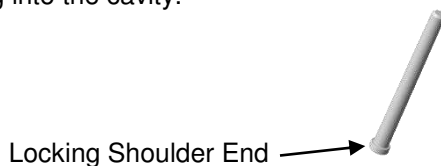

##### Step 2:

With perpendicular motion, apply downward pressure to the small diameter end of the sealing plug.

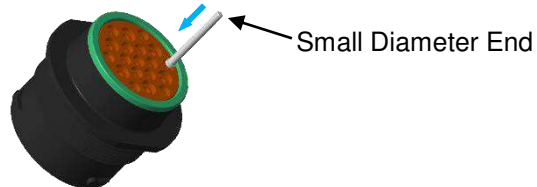

##### Step 3:


Apply pressure until sealing plug locks into place. A slight tug on the sealing plug will confirm it is locked into place.



### Keying Pin Installation


Step 1:

Holding the keying pin with large diameter end towards the connector, gently apply downward pressure to force the sealing plug into the cavity.

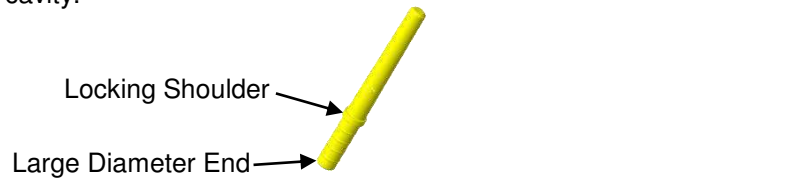

Step 2:

With perpendicular motion, apply downward pressure to the small diameter end of the sealing plug.

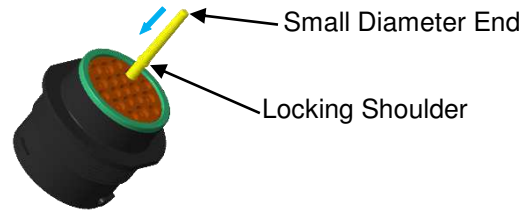


Step 3:

Apply pressure until keying pin locks into place. A slight tug on the sealing plug will confirm it is locked into place.



### 3.8. Connector Mating

To mate the plug and receptacle, the plug keys and receptacle keyways must align as shown in figure. Once aligned, it is pushed until it reaches the inner base of the connector and the Coupling Ring is screwed until the guides are observed through the holes in the Coupling Ring.

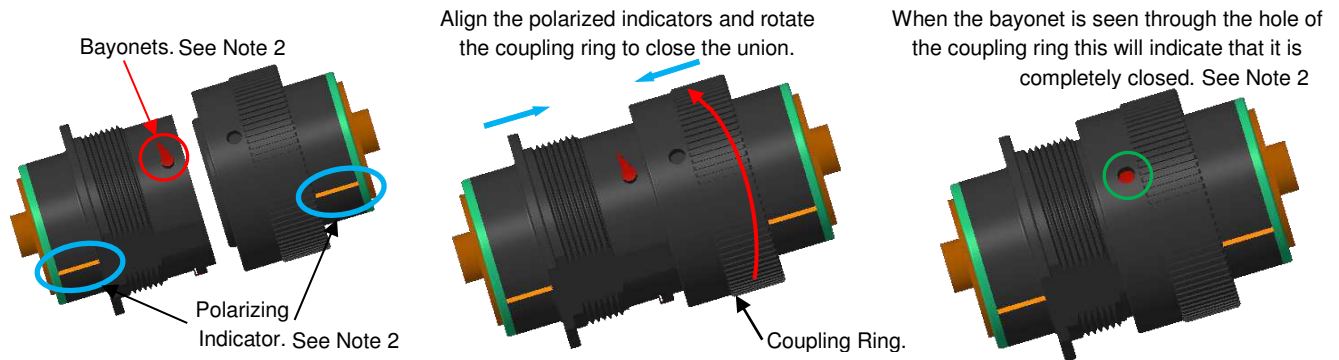

Polarized indicators serve as guides to make the connection between the connectors, each connector has an internal guide that makes the holes of the cavities are aligned but these are not visible to the naked eye, so the polarized indicators help us connect the connectors in better shape.




**Note 1**  
It is not recommended to use dielectric grease on either plug or receptacle. The HDP connectors are guaranteed to seal and perform per 108-151015 product performance without the application of grease or other foreign substance.



**Note 2**  
The polarizing indicator and bayonet is same color as shell. The color is shown only to highlight the feature.

### 3.9. Connector Unmating

To uncouple the HDP connector, turn coupling ring counterclockwise. This will unlock the lock and allow them to separate.

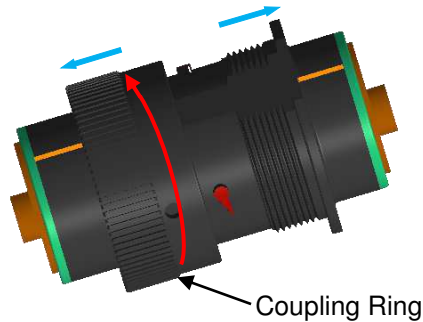

To separate the connectors uncouple the Coupling Ring counterclockwise to unmate, follow the connector as indicated by the arrows.



Note


The polarizing indicator and bayonet is same color as shell. The color is shown only to highlight the feature.

### 3.10. Backshell, Adapter, Boot, Gasket, Protective Dust Cap Installation and Removal

See section J for part numbers.

#### L017 BACKSHELL

1. To install the backshell or adapter, it must first be in the open position as shown. The slots on the backshell will line up and fit onto the flange on the housing. Slide one half of the backshell onto housing as shown. Orientation of the opening is important on the plug housing; backshells may be oriented as desired on receptacles. HDP connector plug is shown as an example. Use the same method to install the backshell on all housings.

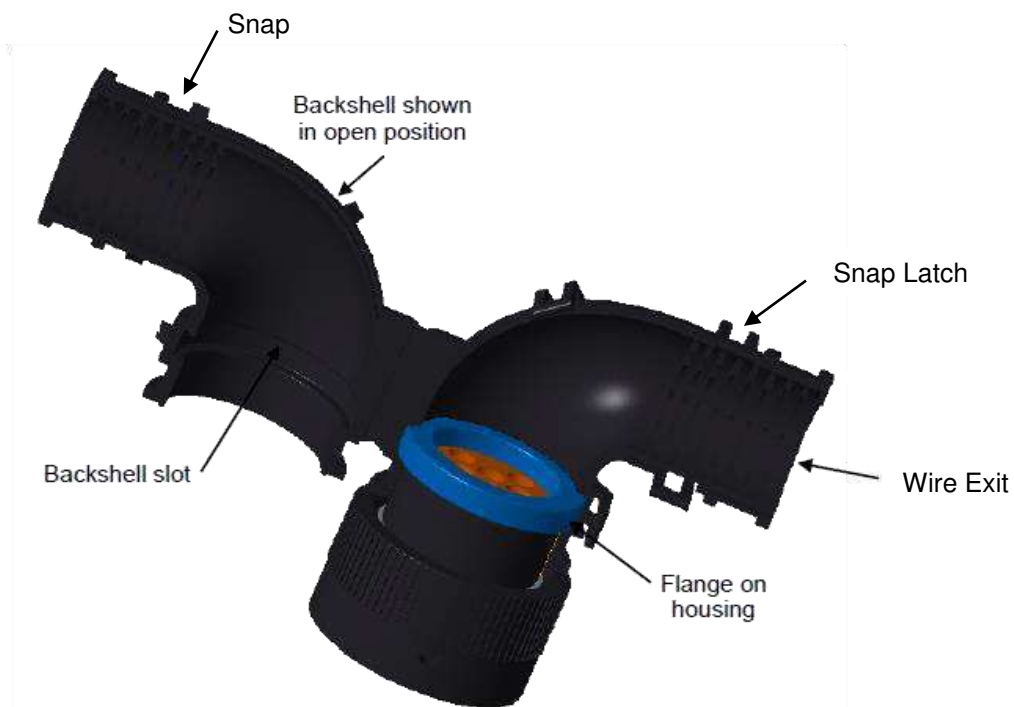

2. To close the backshell, rotate other half and line up the slots in the backshell line up with flange on housing (as described in previous step). Before snapping shut, make sure convoluted tubing (if used) is captured within the inner grooves. If no convoluted tubing is used, make sure any wires are not pinched in the backshell. There are four snaps that need to engage in order to properly snap shut the backshell.



4. To remove the backshell, disengage all four snaps by wedging a DT-RT1 tool or small flat head screwdriver under the snap latch, lift until disengaged the pry the backshell open.





## L015 BACKSHELL AND ADAPTER

1. The first step for the installation of backshell and compression nut starts with the insertion of wires in the connector, once inserted the wires are passed through the backshell.



2. The second step is to screw the backshell on the back of the connector and hand tight. The connector has a threaded adapter which the backshell is threaded on.



3. As a third step the wires will be passed through the compression nut and this will be screwed in the back part of the backshell in this way the wires will be secured. Hand tight compression nut.



### Cap Nut and Seal Ring.

Cap Nut and Seal Ring is similar to the backshell. Insert the wires in the connector then pass the wires through the Seal Ring and Cap Nut. Screw the Cap Nut unto the threaded adapter, hand tight.




### L024 BACKSHELL

First insert the wires into the connector. Next pass through the wires through the backshell then screw the backshell onto the threaded adapter and hand tight. If needed, install tie wrap and cut off excess.



### BOOT

First insert the wires into the connector. Next, cut off the end of the boot as needed then pass through the wires through the boot. Slide the boot onto the connector. If needed, attach a tie wrap on the end of the connector and boot. Trim tie wrap as needed.

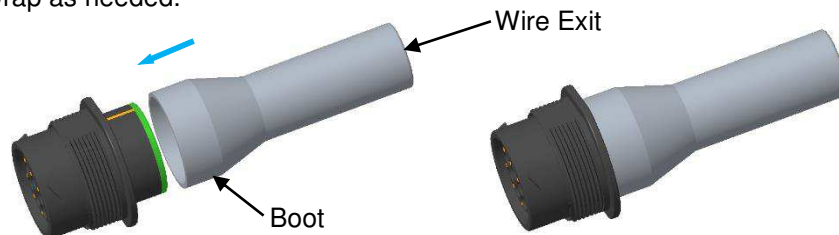


### GASKET

Install the gasket onto the connector in front of the flange. Next install into panel mounting hole. See section 3.9 for panel installation.




### PROTECTIVE DUST CAP

To mate the protective cap to the receptacle, align the bayonets on the receptacle to the openings on the cap. Turn clockwise until a snap is felt. Remove in reverse steps.

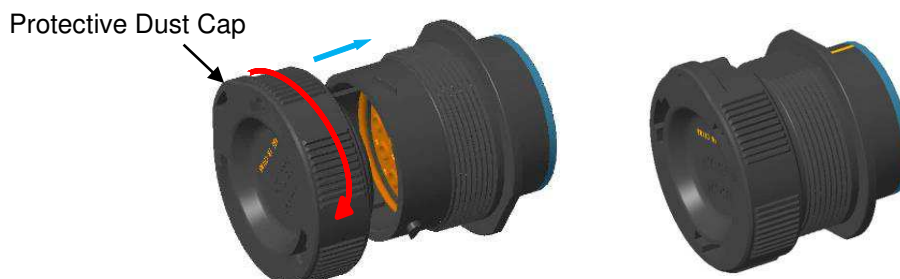


### 3.11. Panel Installation

- The receptacles may be mounted to a panel as shown. A locking feature on the housing may be used to orient the connector on the panel, but the panel cutout must contain the proper tab in order to properly utilize this feature. If a gasket is used, ensure the gasket is installed onto the housing before inserting mating side through the panel cutout.

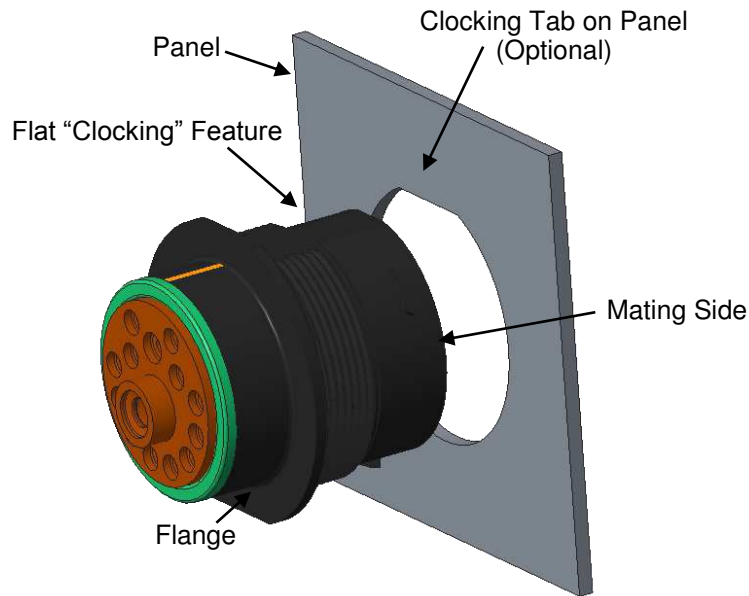

- Install Lock Washer and Panel Nut. Secure the receptacle to the panel using the recommended mounting torque.

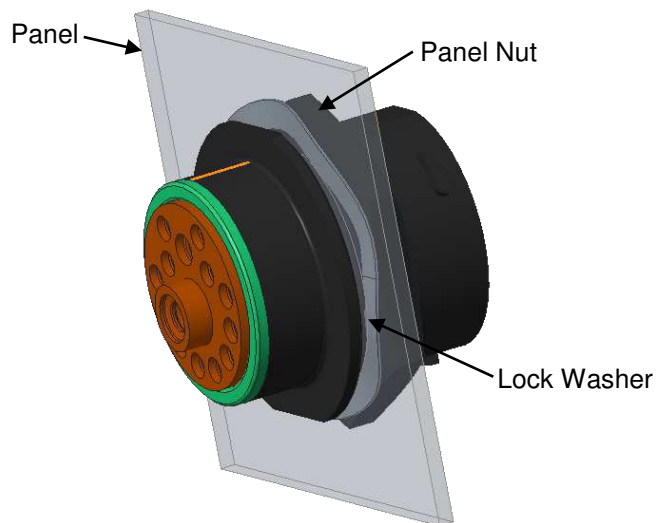

**i** Note:  
Do not cross thread panel nut or over torque panel nut

**i** Note  
The polarizing indicator and bayonet is same color as shell. The color is shown only to highlight the feature.

Panel Nut Mounting Torque			
Shell size	Mounting torque	Socket Size	Tool Speed Max
18	45-55 IN. LB. [5.1-6.1 N.M]	1-11/16"	5 RPM
	65-75 IN. LB. [7.4-8.4 N.M]	1-7/8"	

### 3.12. Replacement and Repair

Damaged or defective connectors must not be used. These connectors cannot be repaired.

### 4. QUALIFICATION

Refer to product specification 108-151015 for qualification and approved agency.

### 5. TOOLING


Refer to the following application specifications for reference on all pins and sockets contact termination tooling

- 114-151000, DEUTSCH size 16 S&F
- 114-151001, DEUTSCH size 16 S&F
- 114-151002, DEUTSCH size 12 S&F
- 114-151003, DEUTSCH size 20 S&F
- 114-151006, DEUTSCH size 12 S&F
- 0425-205-0000, DEUTSCH size 4-20 Solid

### 6. HELPFUL HINTS


**Helpful hint**

Proper wire outside diameters help provide water tight seals.

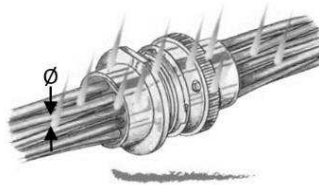


**Helpful hint**

Proper wire routing assures water tight seal performance

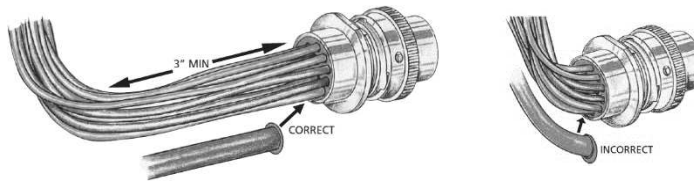


**Helpful hint**

Making the socket contact side the "hot side" can reduce the danger of electric shock.

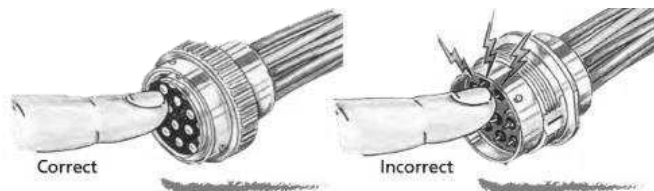


**Helpful hint**

Pulling lightly on the wire after it is snapped in place will assure the contact is locked.

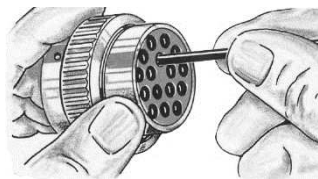


**Helpful hint**

Sealing plugs are used to seal the connector when all the cavities are not used by wires.

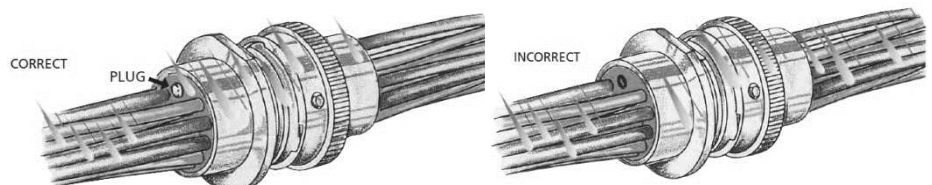


**Helpful hint**

Mounting connectors horizontally allows proper water drainage.

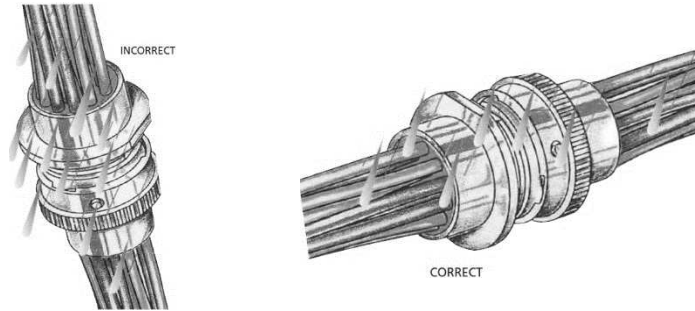


**Helpful hint**

Planned wire routing and clamp points can reduce harness cost by eliminating strain reliefs.

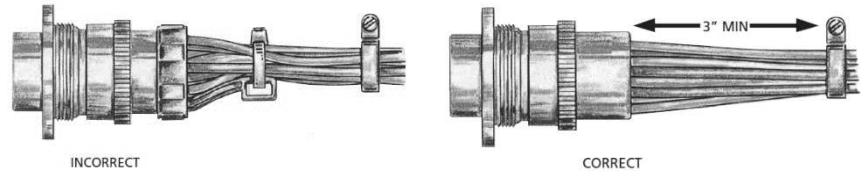


**Helpful hint**

Attaching the connector to a structure eliminates straining the electrical system in service.

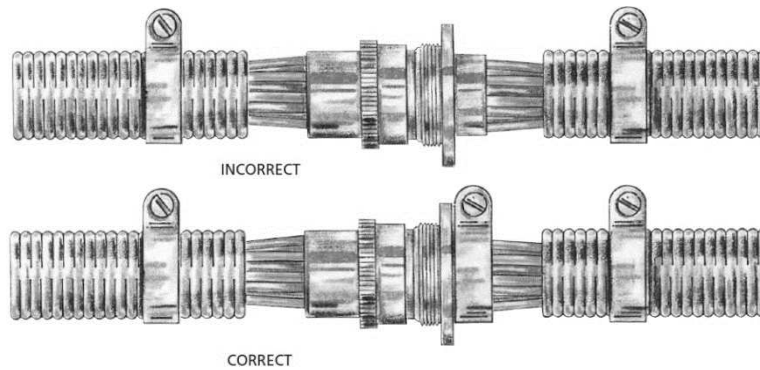


**Helpful hint**

Tie wraps and tape away from the rear of the connector will allow the wire to be sealed properly.

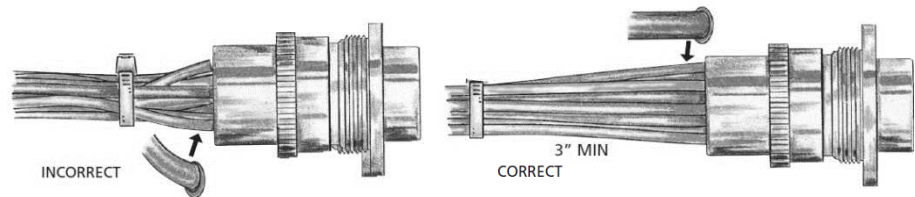


**Helpful hint**

Harness design should permit filling the connector cavities from the center out in order to provide support for the center of the harness and to allow easier connector assembly.

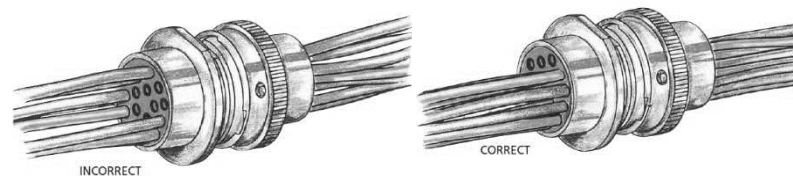

**Helpful hint**

A contact removal tool taped or tie wrapped to the harness will make it easily available should repairs be needed.

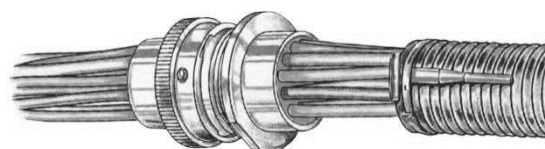

## 7. VISUAL AID

Below shows a typical application of the HDP Series Connector. This illustration should be used by production personnel to ensure a correctly applied product. Applications which DO NOT appear correct should be inspected using the information in the proceeding pages of this specification and in the instruction material shipped with the product or tooling.

