

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China











KPTSG

PA19739A02 REV: 06 2-2016

GRIPPER REPLACEMENT KIT FOR PPTS INSTALLATION INSTRUCTIONS

© Panduit Corp. 2016

The KPTSG Gripper Replacement Kit replaces the current gripper in the event of reduced performance or excessive wear caused by extended usage. Follow the step-by-step instructions below.

CONTENTS:

<u>ITEM</u>	<u>QTY.</u>	<u>DESCRIPTION</u>
22	1	Gripper Housing Assembly
14	1	Screw
	1	Removable Threadlocker
		(for MSDS sheet, see www.loctite.com)
	1	PVC Tubing

REPLACING THE GRIPPER HOUSING ASSEMBLY (Refer to Customer Repair Drawing, WB23312D01 which is on reverse side

WB23312D01 which is on reverse side.)

WARNING: Always disconnect the air source from the tool <u>before</u> disassembly of the tool. **Never** connect the air source to the tool or actuate the tool until the tool is fully reassembled.

- Remove and retain the screw from the back end of the tool. Reduce tension on the tool by flipping the selector knob to the MIN setting and turning the selector knob counterclockwise until the knob loosens.
- 2. Place the tool on a table with the right side of the tool face down and the nose end to the left. Remove the three (3) housing screws using a Phillips screwdriver, and lift off the housing cover.
- 3. Remove the lever arm pivot pin and the trigger link pin. Carefully lift out the lever arm and the cylinder/link plate assembly.
- 4. Slide the PVC tubing (included) over the gripper housing assembly and onto the cylinder shaft. Carefully grip the cylinder shaft at the tubing protected area in a brass jaw vise (to prevent damage to the shaft surface). Grip the shaft as close to the gripper housing assembly as possible. Unscrew the gripper housing assembly using a 5/16" open-end wrench.
- Apply Removable Threadlocker (included) on the new gripper housing assembly threads.
 Tighten the new gripper assembly on the cylinder shaft and remove the assembly from the vise.
 Remove the PVC tubing from the cylinder shaft and discard the tubing.
- 6. Carefully position the cylinder/link plate assembly in the tool. Position the trigger link and install the trigger link pin. Position the lever arm and install the lever arm pivot pin. Position the trigger and replace the housing cover. Fasten cover using the three (3) housing screws and tighten until snug.
- 7. Replace the screw at the back end of the tool. Readjust tool tension to the desired setting.

E-mail: techsupport@panduit.com



Technical Support: 1-800-777-3300

Page: 1 of 1

