



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts,Customers Priority,Honest Operation,and Considerate Service",our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



## Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China




# Quick Manual for Type YD EVK



# TypeYD EVK- Setup1




1. Download and Install the driver of URAT-USB FTDI from below site.  
<http://www.ftdichip.com/Drivers/D2XX.htm>

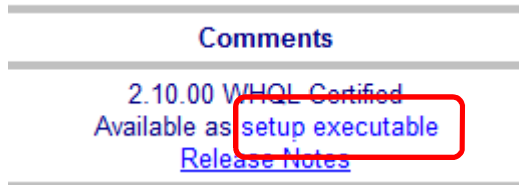

click setup executable for file download

2. Install SNIC.exe on provided CD for file extraction and setup.exe for PC tool.  
2.1 File extract to click SNIC.exe included in CD  
Files are extracted in C:¥SNIC if installed with default set.

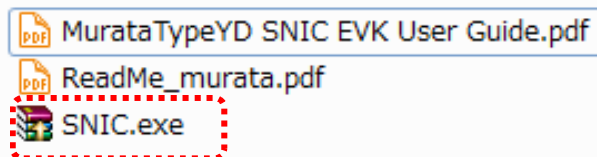


- 2.2 Install C:¥SNIC¥Tools¥SNIC monitor¥ setup.exe for PC tool

# Serial 2 WiFi Test - 1


## 1. STA EVB Pin check for **S2W mode**

Refer to below document for the meaning of Serial 2 WiFi and Serial Through WiFi  
C:\¥SNIC¥SNIC\_UART¥Documents¥ Murata SNIC Serial Interface Specification.pdf

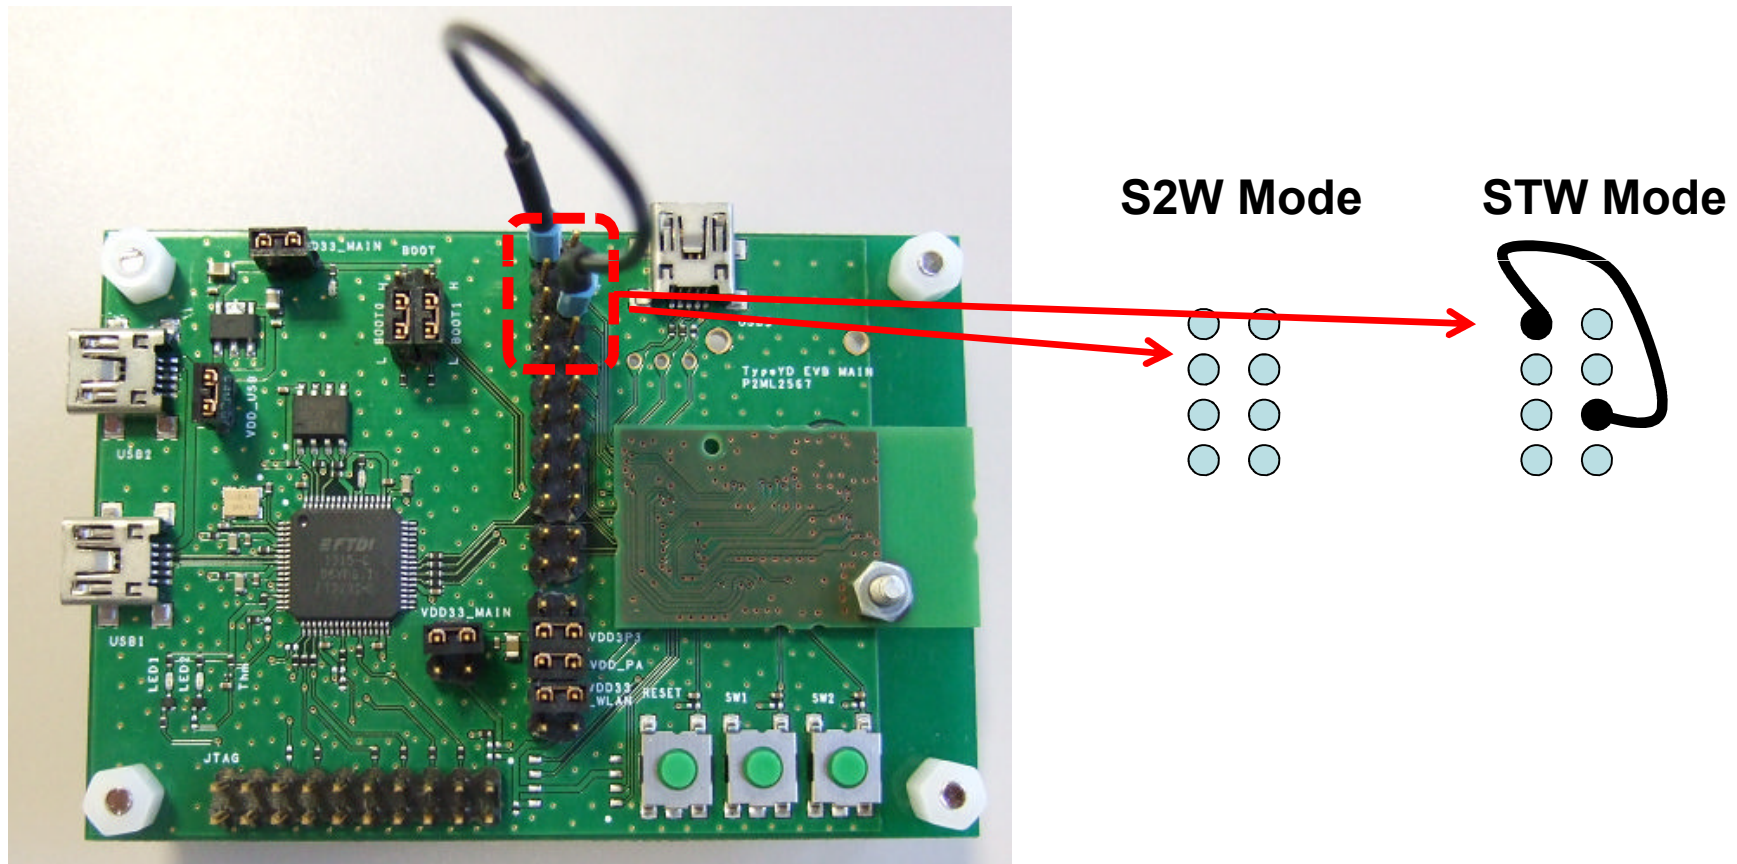


# Serial 2 WiFi Test - 2

2. Connect the EVB with the computer with the mini USB cable.  
If power supplied, system will start automatically.

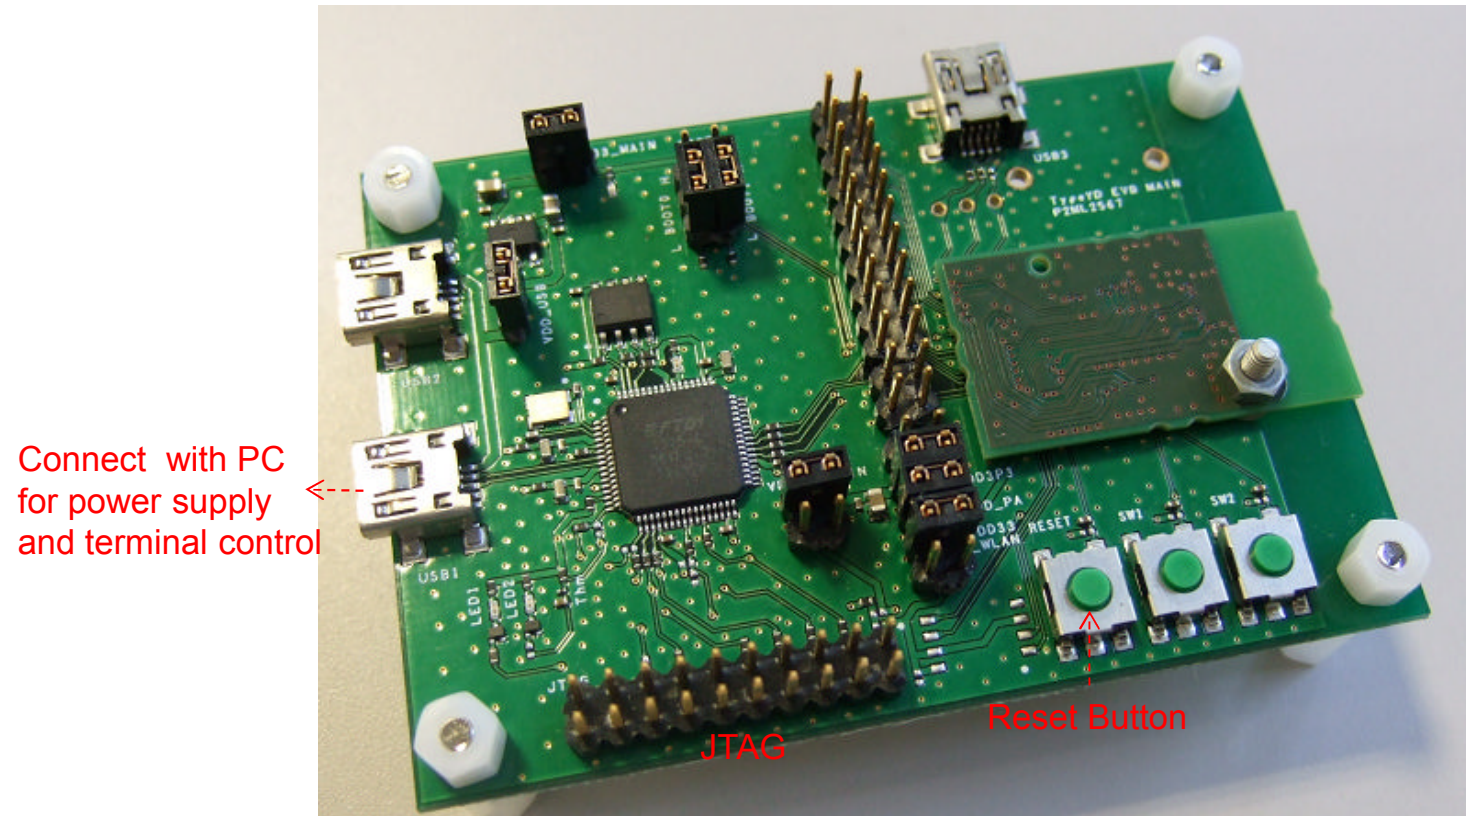


# Serial 2 WiFi Test - 3

3. Start up Test tool [SNICMonitor] ICON on desktop and set up as below.

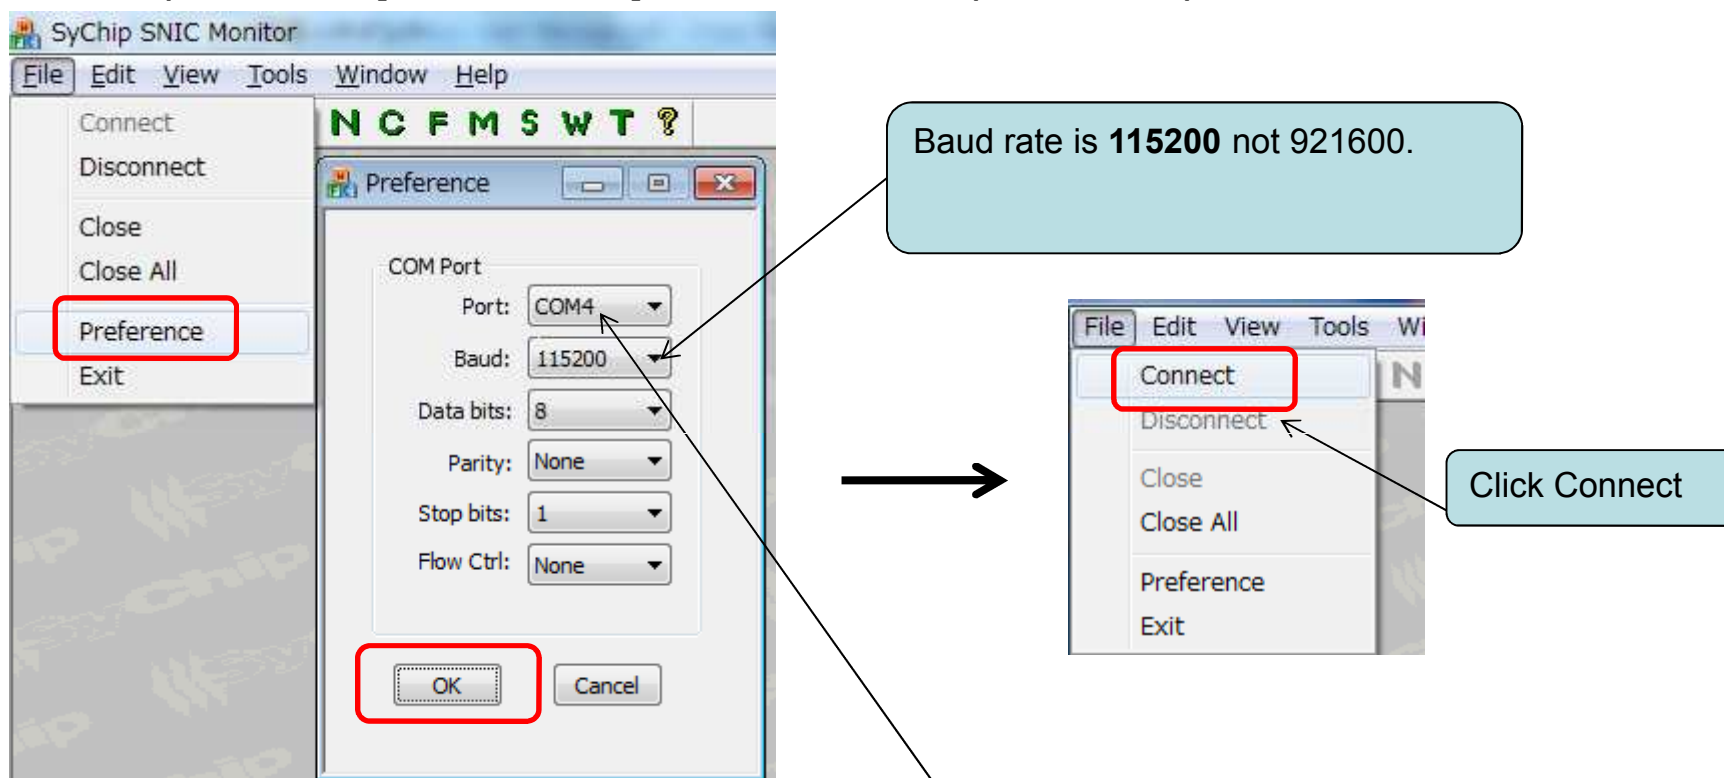


 2 COM port is detected on PC's device driver.  
Upper COM port is used for this test. Please set COM4 as below example



# Serial 2 WiFi Test - 4

## 4. Debug command and GUI command control

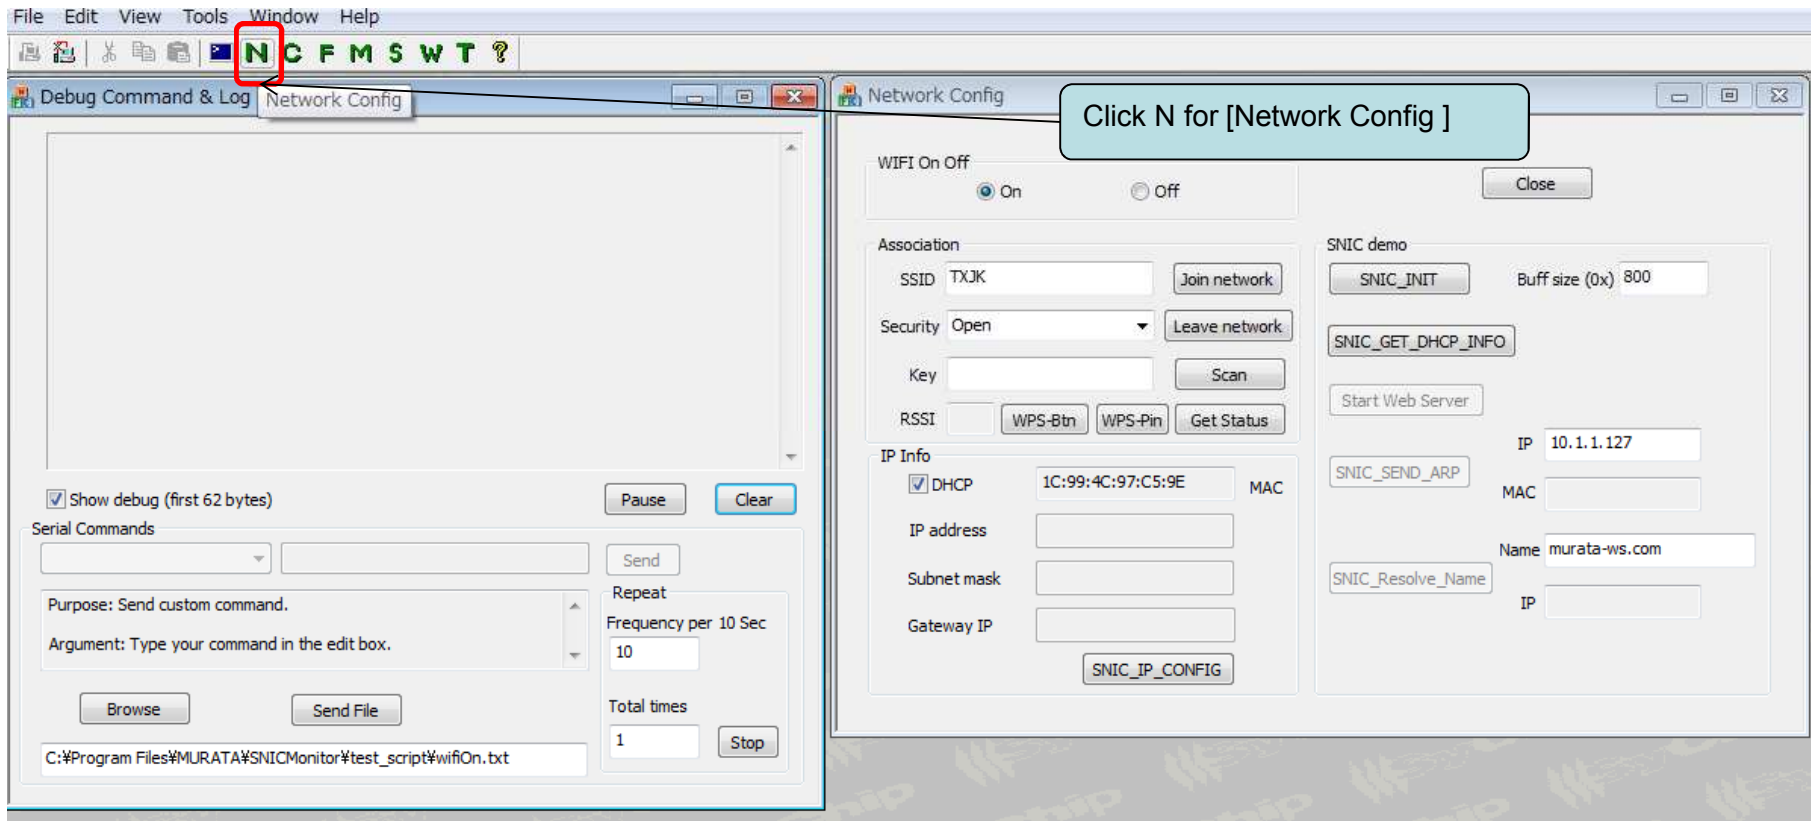


- Debug Command & Log is for log display and command send control
- Network Config is for GUI command control

# Serial 2 WiFi Test - 5

## 5. For WiFi On Test


-There are two method for Wifi On with GUI control and command send control

### 5.1 GUI control

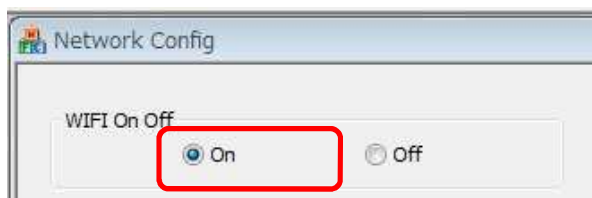

Click On of WIFI OnOff

### 5.2 Command send control

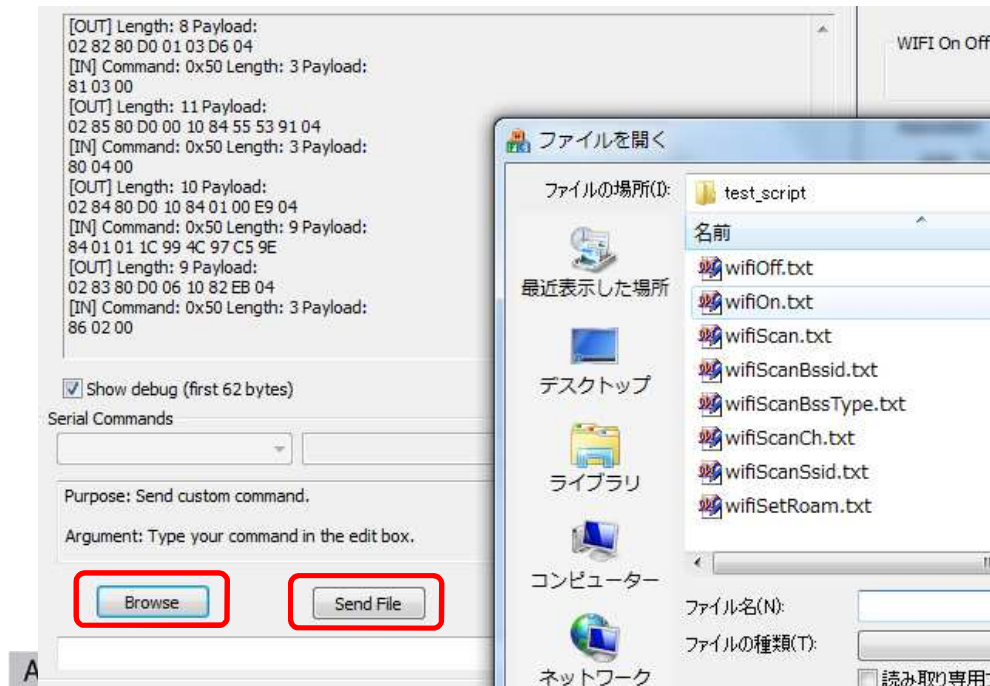

Click Browse

->select script file the

**C:¥Program**

**Files¥MURATA¥SNICMonitor¥test\_script¥wifiOn.txt**

-> Click Send File




# Serial 2 WiFi Test - 6

## 6. For SCAN and AP connect


-There are two method also as [4. For WiFi On Test]

### 6.1 GUI control

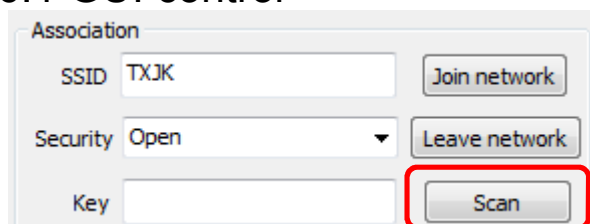

Click Scan Button

### 6.2 Command send control

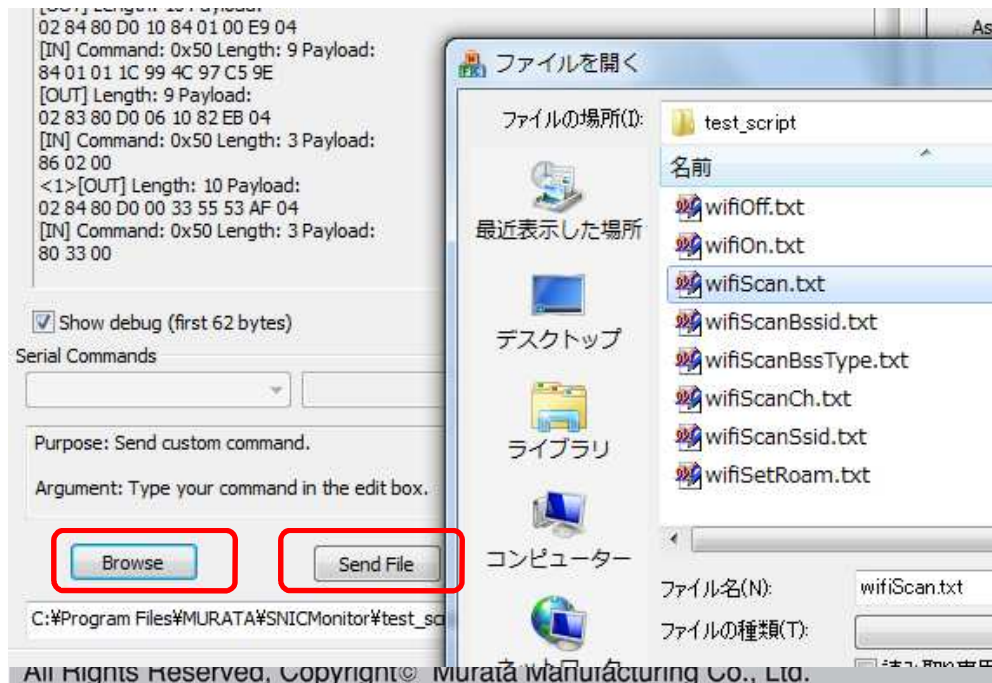

Click Browse

->select script file the

C:\Program

Files\MURATA\SNICMonitor\test\_script\wifiScan.txt

-> Click Send File

# Serial 2 WiFi Test - 7



## 7. For more test

Do as same method [4 & 5. For SCAN and AP connect] page for more test.


And also we can edit and make script file.

Please refer to

C:\¥SNIC¥SNIC\_UART¥Documents¥Murata SNIC Serial Interface Specification.pdf  
for command list and specification


# Serial Through WiFi Test - 1

1. This is a TEST set image.

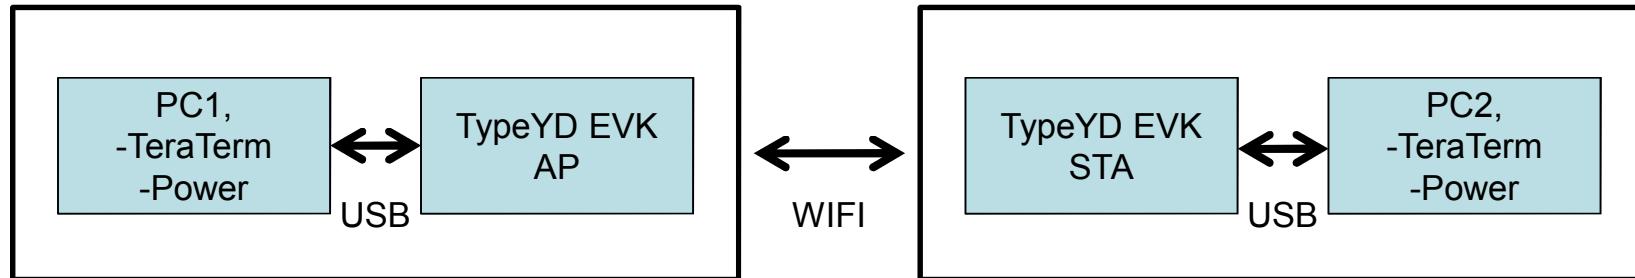



# Serial Through WiFi Test - 2

## 2. EVB AP and STA Pin check for STW mode

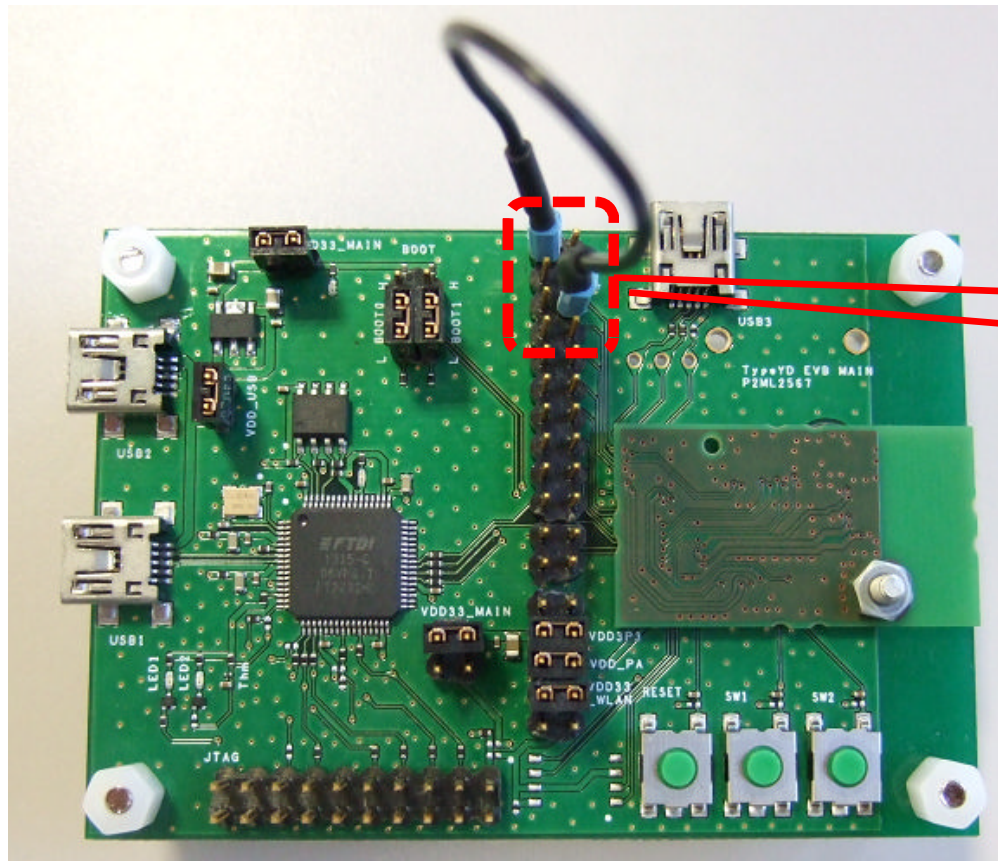


S2W Mode

 STW Mode

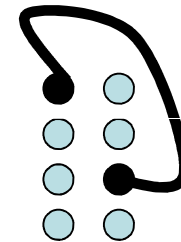


# Serial Through WiFi Test - 3

 3. Connect AP and STA's EVB with the mini USB cable to the each computer
4. And then start up teraterm on each PC (setup COM port with baud rate 115200).  
2 COM port is detected. Upper COM port is used for this test  
Please set COM4 as below example



5. AP and STA establish TCP connection. Wait for LED1 (green) to turn on to indicate that the connection is established

Connect with PC  
for power supply  
and terminal control

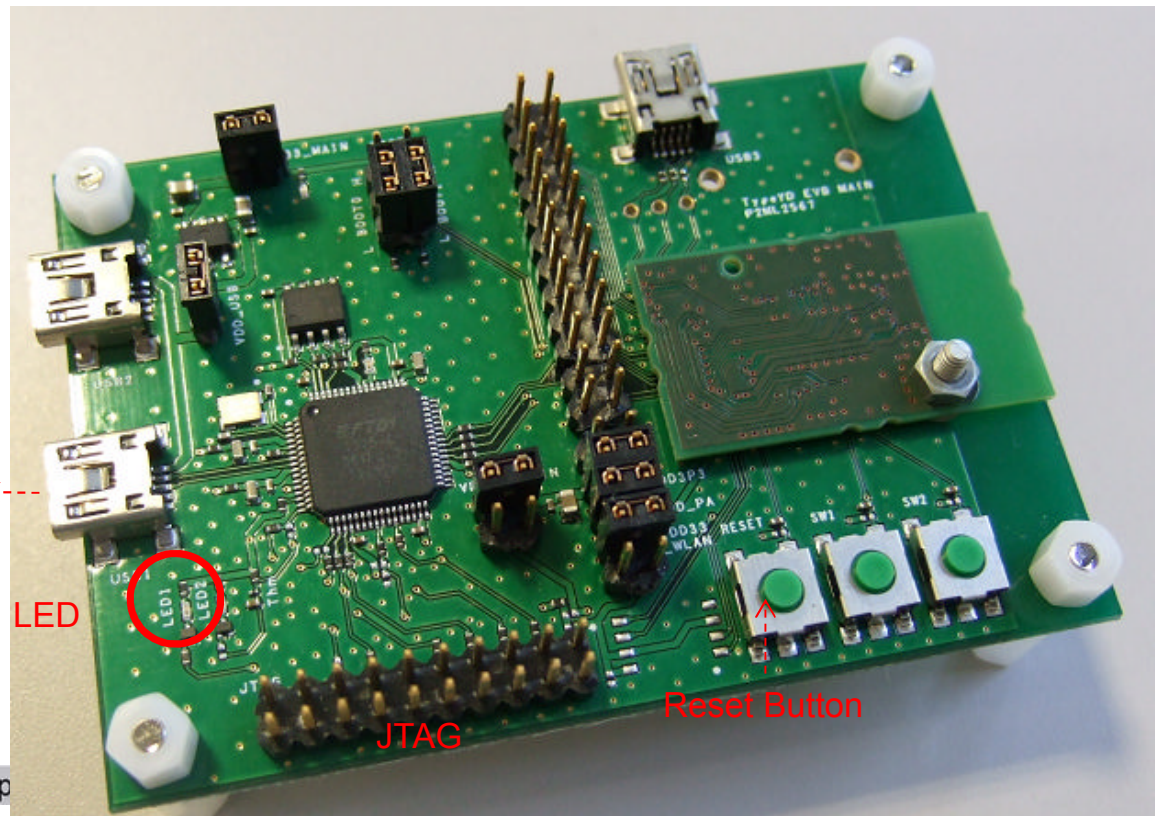

# Serial Through WiFi Test - 4




6. If any key is clicked on the PC1 terminal ,  
clicked characteristic is appeared on the PC2's terminal.  
PC2 is received data from PC1 through WiFi.

Refer to this document for detail test

C:\¥SNIC¥SNIC\_UART¥Documents¥ Murata SNIC UART Serial Interface User Manual.pdf



# Type YD EVK- Schematic

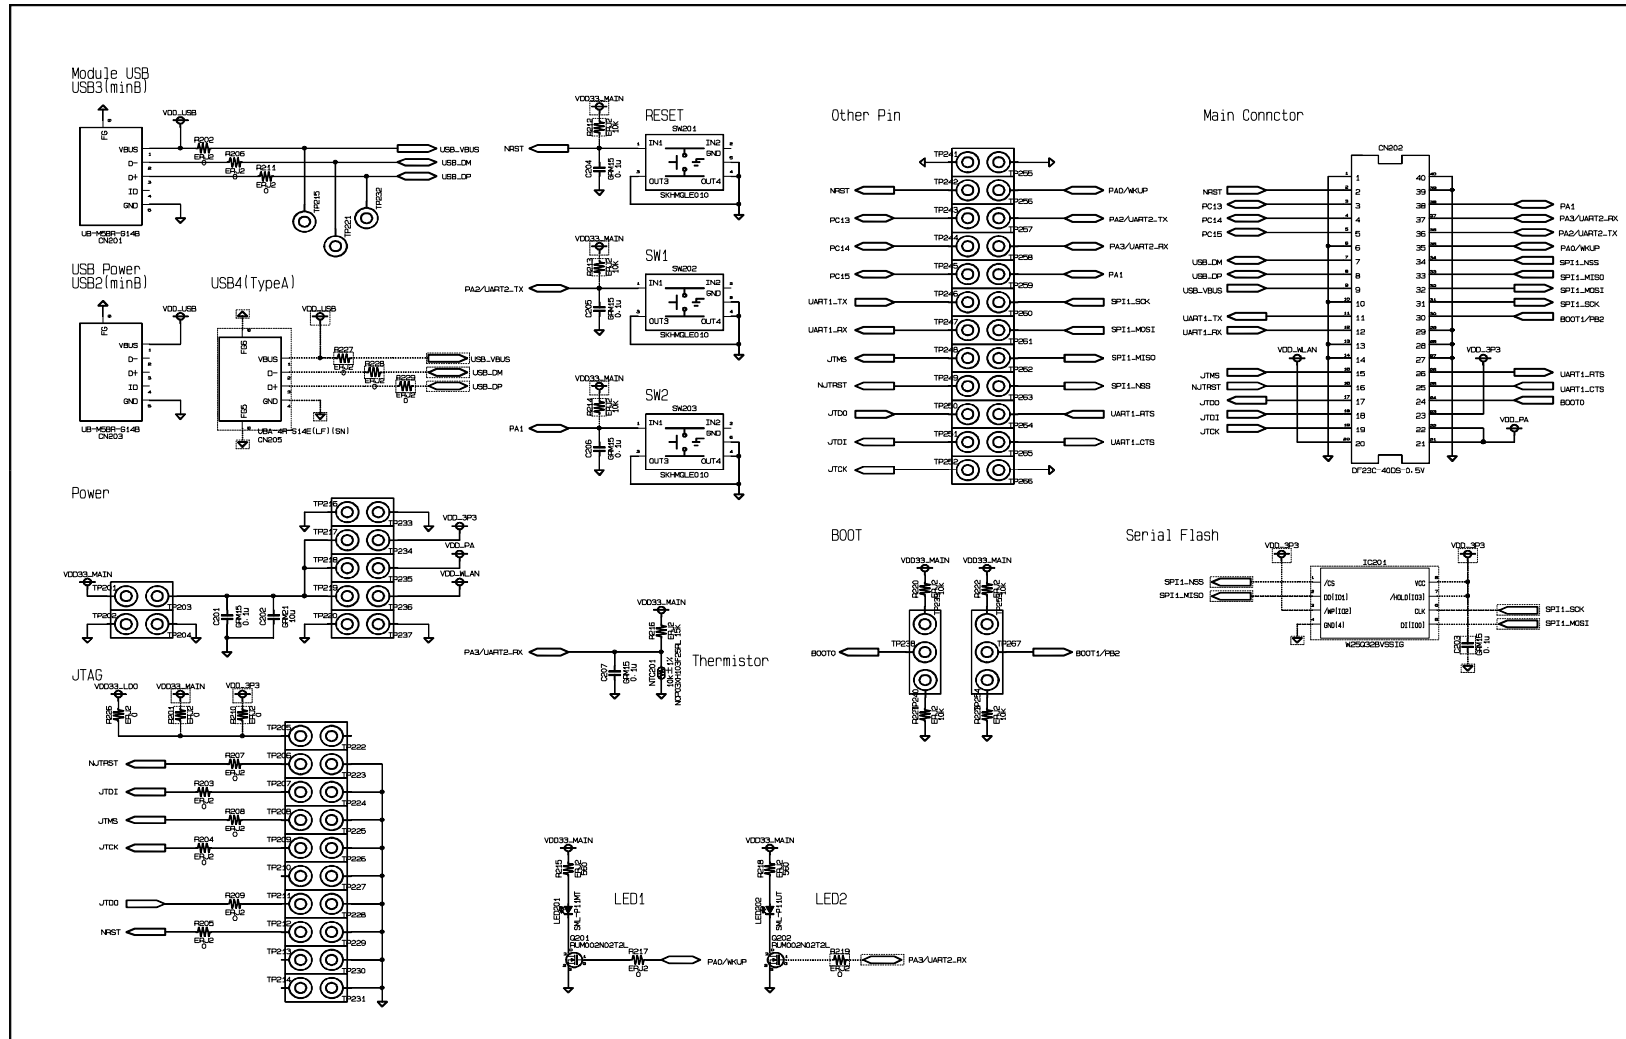



# Type YD EVK- JTAG

Murata EVK has JTAG pins with below specification.

- Pin number : 20 pins
- Pin pitch : 2.54mm

