imall

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832 Email & Skype: info@chipsmall.com Web: www.chipsmall.com Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



Digital Display with Wire-saving Serial Transmission Function (B7A Output)

- Single-color (red or green) and three-color (red, green, or orange selectable) displays with a character height of 80, 120, or 200 mm are available for a variety of applications and locations.
- Thin design with a 39.5-mm depth for the 120-mm model is perfect for saving space in equipment and devices.
- Decimal display including negative sign (-) display with signal codes is possible.

Ordering Information

List of Models

Models with 80 mm-high Characters

Display contents	Туре		Logic input	Display color	Model	
Decimal	Front		Negative	Red	M7E-08DRN2	
	mounting	8		Green	M7E-08DGN2	
Hexadecimal	Front			Red	M7E-08HRN2	
	mounting	8		Green	M7E-08HGN2	

Models with 120 mm-high Characters

Display contents	Туре		Logic input	Display color	Model
Decimal	Rear		Negative	Red	M7E-12DRN1
	mounting	\mathbf{Q}		Green	M7E-12DGN1
		Ľ,		Red/green/orange	M7E-12DKN1
	Front	Ņ		Red	M7E-12DRN2
	mounting	R		Green	M7E-12DGN2
		Ξ.		Red/green/orange	M7E-12DKN2
Hexadecimal	Rear mounting	ĨĮ		Red	M7E-12HRN1
		\mathbf{Q}		Green	M7E-12HGN1
		1. 1.		Red/green/orange	M7E-12HKN1
	Front	ļ		Red	M7E-12HRN2
	mounting	R		Green	M7E-12HGN2
		Ξ.		Red/green/orange	M7E-12HKN2

Models with 200 mm-high Characters

Display contents	Display contents Type Logic		Logic input	Display color	Model
Decimal	Rear	Q	Negative	Red	M7E-20DRN1
	mounting			Green	M7E-20DGN1
		<u> </u>		Red/green/orange	M7E-20DKN1
Hexadecimal	Rear	Ξ		Red	M7E-20HRN1
	mounting			Green	M7E-20HGN1
		<u>.</u>		Red/green/orange	M7E-20HKN1

Connectable PLCs

M7E mo	odel	PLC's output method					
Display	Logic	Logic Static output					
	input	PNP output	NPN output				
Decimal	Negative	Not connectable	Connectable				
Hexadecimal	Negative	Not connectable	Connectable				

■ Accessories (Order Separately) **Harness Connector**

Dimensions	Model
70 mm	M7E-WH0111A
500 mm	M7E-WH0511A
1,000 mm	M7E-WH1011A



Specifications

Ratings

Rated p	ower si	upply	24 VDC		
Allowable voltage fluctuation range			90% to 110% of rated voltage		
Current consumption (per display)			M7E-08 (at 24 VDC) Red LED: 120 mA max. Green LED: 160 mA max.		
			M7E-12 (at 24 VDC) Red LED: 200 mA max. Green LED: 330 mA max. Red/Green LED (orange: lit): 330 mA max.		
			M7E-20 (at 24 VDC) Red LED: 420 mA max. Green LED: 500 mA max. Red/Green LED (orange: lit): 500 mA max.		
Input level			High: 4 V to power supply voltage Low: 0 to 1.5 V		
Ambier	Ambient temperature		Operating: -10 to 55°C (with no icing) Storage: -25 to 70°C (with no icing)		
Ambier	nt humic	lity	Operating: 35% to 85% (with no condensation)		

Characteristics

Insulation resistance	100 $M\Omega$ min. (at 500 VDC) between each terminal and mounting panel						
Dielectric strength	500 VAC, 50/60 Hz for 1 min between each terminal and mounting panel						
Noise immunity (See note.)	Power terminal: ±500 V Input terminals: ±500 V (normal mode) ±1,500 V (common mode)						
Vibration resistance	Destruction: 10 to 55 Hz, 0.75-mm double amplitude						
Shock resistance	Destruction: 300 m/s ²						
Degree of protection	IEC IP40 (portion on panel surface)						

Note: 1. Initial values

2.

 Impulse conditions:

 Rise time:
 1 ns +10% max.

 Pulse width:
 100 ns, 1 μs

 
 Polarity:
 Positive, negative, asynchronous to power frequency, 100 Hz repeat frequency.

Installation

■ Cables

Refer to M7E Options for information on using cables (OMRON XW2Z-R C, XW2Z-RY C, and XW2Z-RO-C-C).

■ M7E-WH□11A **Harness Connector**



l	Model
70 mm	M7E-WH0111A
500 mm	M7E-WH0511A
1,000 mm	M7E-WH1011A

Input Codes

Negative Logic Standard Unit

				Input	signal				Output display condition				
Connector pin No. (CN1)	1	(14)	(13)	(12)	(1)	5	6						
Terminal symbol	LE	D	С	В	Α	DP	BI	RBI	RBO	Decimal	Hexadecimal		
nput signals	н	н	н	н	н	н	н	L	L	Blank	Blank		
	Н	Н	н	н	Н	н	н	н	н	۵	0		
	Н	Н	н	н	Н	L	н	*	н	۵	۵.		
	н	Н	н	н	L	н	н	*	н	1	1		
	Н	Н	н	L	Н	н	н	*	н	2	2		
	н	Н	н	L	L	н	н	*	н	3	3		
	Н	н	L	н	н	н	н	*	н	ч	ч		
	Н	Н	L	н	L	н	н	*	н	5	5		
	н	Н	L	L	Н	н	н	*	н	5	5		
	н	Н	L	L	L	н	н	*	н	ŋ	7		
	Н	L	н	н	Н	н	н	*	н	8	8		
	Н	L	н	н	L	н	н	*	н	3	9		
	н	L	н	L	Н	н	н	*	н	-	8		
	Н	L	н	L	L	н	н	*	н	Blank (See note 1.)	6		
	Н	L	L	н	Н	н	н	*	н	DP lights at serial input. (See note 2.)	٢		
	н	L	L	н	L	н	н	*	н	DP lights at serial input. (See note 3.)	d		
	н	L	L	L	н	н	н	*	н	Blank (See note 1.)	٤		
	Н	L	L	L	L	Н	н	*	н	Blank (See note 1.)	۶		
	*	*	*	*	*	L	н	*	н	•	•		
	*	*	*	*	*	*	L	*	н	Blank (See note 1.)	Blank (See note 1.)		
	L	*	*	*	*	*	н	*	н	(See note 4.)	(See note 4.)		

* Either low or high. All inputs are pulled up internally. Therefore high can be open.

Note: 1. Only the numeral will be OFF. (There is no relationship to the decimal point.)

Only the numeral will be OFF if there is parallel input with CN1. The decimal point will be lit if there is B7A serial input with TB1.
 Only the numeral will be OFF if there is parallel input with CN1. The decimal point will be OFF if there is B7A serial input with TB1.
 Only the numeral will be OFF if there is parallel input with CN1. The decimal point will be OFF if there is B7A serial input with TB1.
 The previous statuses of A to D before LE goes low will be held. There is no relationship to the decimal point. The LE latch function will not, however, operate at the time of serial transmission.

Terminal Arrangement/Functions

1. Input Terminal TB1


Terminal symbol	Name	Function
+V	Power supply	Positive (+) power-supply terminal.
GND	Power supply	0 V power-supply terminal.
SI	Serial data input	B7A serial data received

CN1 (Connector: XG4C-2031 for 80-mm Models, XG4A-2034 for 120-mm/200-mm Models)

Terminal No.	XG4- 2034 pin No.	Terminal symbol	Name		Function				
1	(20)	LE1	Control input	1st-digit latc	h input: The previous display is held when this signal is input.				
2	(18)	LE2	Control input	2nd-digit late	ch input: The previous display is held when this signal is input.				
3	(16)	LE3	Control input	3rd-digit latc	h input: The previous display is held when this signal is input.				
4	(14)	LE4	Control input	4th-digit latc	h input: The previous display is held when this signal is input.				
5	(12)	DP	Data input	The decimal	point lights. Operates independently of the LE signal.				
6	(10)	BI	Control input	Blank input:	Turns OFF all the displays.				
7	(8)	R	Control input	Color select	or input: Red is lit when low is input (See note.)				
8	(6)	G	Control input	Color selector input: Green is lit when low is input (See note.)					
9	(4)	GND	Power supply	0 V power-supply terminal. (Terminals 9 and 19 are connected internally.)					
10	(2)	+V	Power supply	 Positive side (+) power-supply terminal. (Terminals 10 and 20 are connected internally.) 					
11	(19)	A	Data input	A (2 ⁰)					
12	(17)	В	Data input	B (21)	The value and symbol corresponding to the input code				
13	(15)	С	Data input	C (2 ²)	signal are displayed. Refer to the list of input codes for the contents of display.				
14	(13)	D	Data input	D (2 ³)					
15	(11)	NC	Open						
16	(9)	NC	Open						
17	(7)	NC	Open						
18	(5)	NC	Open						
19	(3)	GND	Power supply	0 V power-supply terminal. (Terminals 9 and 19 are connected internally.)					
20	(1)	+V	Power supply	Positive side internally.)	(+) power-supply terminal. (Terminals 10 and 20 are connected				

Terminal Arrangement

Models with 120/200-mm-high Characters

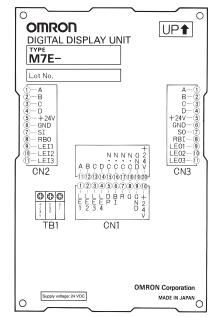

Note: If the R and G of the multi-color display are set low, the Unit will display in orange.

2. Multi-digit Connection Terminals CN2, CN3


Terminal		CN2	(IN)		CN3 (OUT)
No.	Symbol	Name	Function	Symbol	Name	Function
1	A	Data input	A (2 ⁰)	A	Data output	A (2 ⁰)
2	В	Data input	B (2 ¹)	В	Data output	B (2 ¹)
3	С	Data input	C (2 ²)	С	Data output	C (2 ²)
4	D	Data input	D (2 ³)	D	Data output	D (2 ³)
5	+V	Power supply	Positive side (+) power- supply terminal	+V	Power supply	Positive side (+) power- supply terminal
6	GND	Power supply	0 V power- supply terminal	GND	Power supply	0 V power- supply terminal
7	SI	Control input	B7A serial data received	SO	Control output	B7A serial data transmitted
8	RBO	Control output	Zero-suppress output (See note 3.)	RBI	Control input	Zero-suppress input (See note 3.)
9	LEI1	Control input	1st-digit latch input	LEO1	Control output	2nd-digit latch output
10	LEI2	Control input	2nd-digit latch input	LEO2	Control output	3rd-digit latch output
11	LEI3	Control input	3rd-digit latch input	LEO3	Control output	4th-digit latch output

Note: 1. The CN2 or CN3 Multi-digit Connector must be used for serial transmission and dynamic control with the B7A Link Terminal. Refer to page 5 for details. To use zero suppression, refer to page 8. Use the CN2 and CN3 for connection with the M7E only.

2. Use the following connectors for the connector terminals: CN1: XG4M-2030 or equivalent CN2 and CN3: M7E-WH□11A Refer to *CN1 Terminal Arrangement* for the pin numbers. Refer to page 2 for the dedicated harness.

3. Refer to the list of input codes for RBO or RBI control.

 
CN1 Terminal Arrangement



- Note: 1. The numbers in parentheses are the pin numbers for the XG4C-2031 Connector for Models with 80-mm-high Characters and for the XG4A-2034 Connector for Models with 120/200-mm-high Characters.
 - 2. Connectors
 - Flat-cable Connector: XG4M-2030


 Connectors for Loose Wires with Crimp Terminals: XG5M-2032-N (Applicable wire gauge: AWG24) XG5M-2035-N (Applicable wire gauge: AWG28 to AWG26)

Models with 80 mm-high Characters

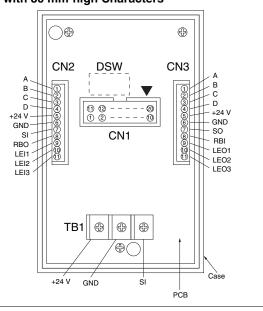


Block Diagram

Note: Circled numbers are the connector pin numbers.

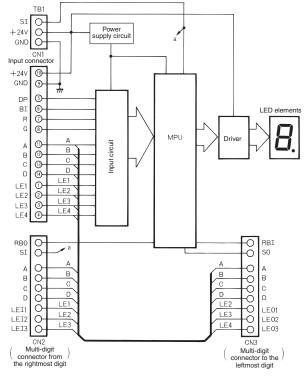

Signal Input Circuit

 Negative Logic Model



Operation Examples of Zero Suppression Zero suppression operates when the display is 0, RBI is low, and the decimal point is not lit. Then low is output to RBO. Zero suppression is not required and the RBI input and RBO output of each digit are open. Example 1: Example 2: Zeros are suppressed only for the digits on the left of the digit where the decimal is lit when both zero suppression and a decimal point are being used. Fourth digit Third digit Second digit First digit ŗ 17 17 ſ Example 1 1_1 ORBI RBOO ORBI RBOC ORBI RBOO ORBI RBOC 5 171 Example 2 DF L. ORBI RBOO **Ó**RBI RBOÓ ORBI RBOÇ

Note: Use RBO output for the connection with RBI input only.

OMRON


External Connections


Refer to Block Diagram on page 4 and Terminal Arrangement/Functions on page 3 for external connections for each Unit.

PLC Connections

Refer to your PLC operation manual before connecting the PLC.

Static Control

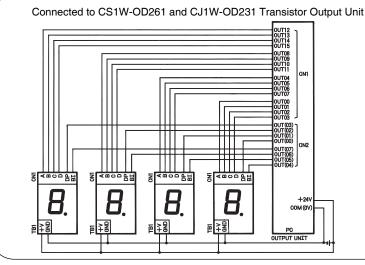

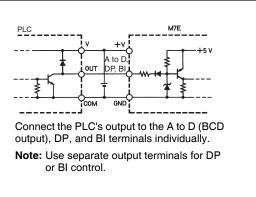

A to D DP, LI

· Connect the PLC's output to the A to D (BCD

Latch control is set with the LE1 to LE4 terminals of

output) terminals of the rightmost digit.

The terminals correspond as follows:

LE1: Rightmost digit (example: 1's digit)

LE2: Second digit (example: 10's digit)

LE3: Third digit (example: 100's digit) LE4: Forth digit (example: 1,000's digit)


the rightmost Unit.

PLC

M7F

-Dynamic Control -


Connected to C200H-OD215 (Static Mode) Transistor Output Unit

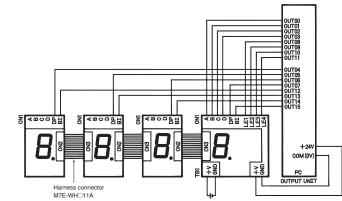

Note: 1. The display colors of the three-color displays must be selected individually.

- 2. In static mode, ladder programming is required for latch control.
- If the cycle time of the PLC is too short, its relationship with the ON/OFF response time of the M7E may not work well. Set a minimum cycle time or otherwise adjust the cycle time accordingly.
- 4. The reception of orders for C200H-OD215 was discontinued at the end of March 2017. The recommended replacements are the CS1W-OD231 and CJ1W-OD231, but they not Dynamic Output Units. Therefore, ladder programming will be required to use them as replacements.

B7A Link Terminal

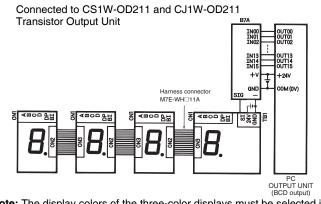

- By supplying power to a single display, all the displays will be supplied with power.
- The B7A's serial output must be connected to the SI terminal of the rightmost TB1.
- Use OMRON's M7E-WH□11A Harness Connectors or equivalent to connect all Units.
- The DP and BI terminals can be controlled by transmitting the following special data Hexadecimal C data: Turns ON the decimal point of the relevant
- digit. Hexadecimal D data: Turns OFF the decimal point of the

relevant digit. Hexadecimal F data: Deletes the display (Bl control) of the

relevant digit.
Use the B7A Link Terminal with a normal I/O delay of 19.2 ms. The B7A with short I/O delay cannot be used.


Note: The display colors of the three-color displays must be selected individually.


Serial Transmission with B7A Link Terminal

A series of models incorporating a communications (serial transmission) function is available.

By using the B7A Link Terminal (PLC connector model), the Units can be connected to the PLC with ease. The 16-point B7A Link Terminal allows the control of a maximum of four digits over two wires.

Power Supplies Placed on Both the Transmitting and Receiving Sides

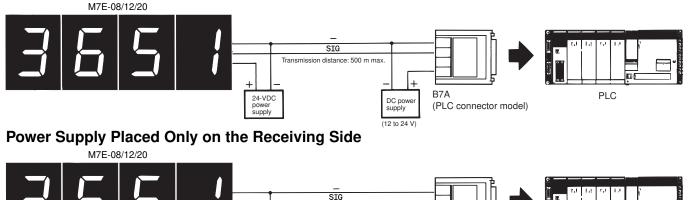

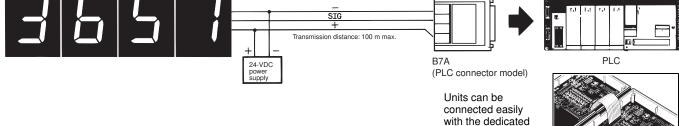

Available Link Terminal Models

Transmission side	Wiring	No. of I/O points	Connectable M7E Display Units	
B7A-T10S1	Screw terminal model	10	2	Note
B7A-T10S3	Screw terminal model	10	2	
B7A-T10M2	Module model	10	2	
B7A-T6A1	Screw terminal model	16	4	
B7A-T6B1	Screw terminal model	16	4	
B7A-T6C1	Screw terminal model	16	4	
B7A-T6D2	Module model	16	4	
B7A-T6E3	Connector model	16	4	
B7A-T3E3 (See note 2.)	Connector model	32	8	
C200H-B7A (See note 3.)	Screw terminal model	$16 \times \Box$ ports	$4 \times \Box$ ports	
CQM1-B7A (See note 3.)	Screw terminal model	$16 \times \Box$ ports	4 × □ ports	
CJ1W-B7A (See note 3.)	Screw terminal model	$16 \times \Box$ ports	4 × □ ports	1
CS1W-B7A (See note 3.)	Screw terminal model	$16 \times \Box$ ports	4 × □ ports	1

Transmission Path

Transmission distance:

A maximum transmission distance: A maximum transmission distance of 500 m is possible by using the VCTF 0.75 x 2C Cable if power is supplied independently to the Input and Output Link Terminals.

A maximum transmission distance of 100 m is possible by using the VCTF 0.75 x 3C Cable if a single power supply is connected to the Input or Output Link Terminal, in which case the current flow on the power lines (positive and negative lines) is 1.8 A maximum.

Transmission delay: A maximum of 50 ms for data display after the B7A's input signal becomes definite.

Minimum Input Time

Use an input time of 80 ms min. to the Input Unit for the B7A.

Signal Allocation

B7A-M7E Corresponding Pin List

The B7A's switch terminals correspond to the M7E's parallel input signals as follows:

B7A switch terminal	M7E parallel input		
A0 A1 A2 A3	First digit (1's digit)	A B C D	
A4 A5 A6 A7	Second digit (10's digit)	A B C D	
A8 A9 A10 A11	Third digit (100's digit)	A B C D	
A12 A13 A14 A15	Fourth digit (1000's digit)	A B C D	

Note: A maximum of two Display Units can be connected when the 10-point B7A Link Terminal is used and a maximum of four Display Units can be connected when the 16-point B7A Link Terminal is used.

- e: 1. Use the B7A Link Terminal with a normal I/O delay of 19.2 ms. The B7A with short I/O delay cannot be used.
 - 2. The connection of the 32-point connector model is as follows:

	SIG1	
PLC connector		
model 32 points	SIG2	
[

3. For details on corresponding models, refer to each applicable model's catalog.

Errors

harness

- No signal transmission is available due to the disconnection of the transmission path (the SI 1. or GND wire).
- The waveform is greatly distorted due to 2. external noise interference or because the transmission path is longer than the permissible transmission path.

Error Indication

When an error results, "-" will be displayed and the display will flash. After the condition returns to normal, reception data will be displayed.

Display after Error Correction

After the condition returns to normal, the display will be reset automatically and reception data will be displayed.

M7F

Serial Transmission Control Examples

 1234 is displayed. 			5. 4.2-1 is displayed.					
Note: The transmission data is hexadecimal.		Transmission data \rightarrow Display	4.	2	-	1	(Numeral setting	
Transmission data \rightarrow Display 1234	1 2 3 4		42A1 6. The displayed decimal point w	ill be	OFF			is possible.)
2. –123 is displayed.			Transmission data \rightarrow Display	4	2	-	1	
Transmission data \rightarrow Display $\begin{bmatrix} - & 1 & 2 & 3 \\ 123 & & \end{bmatrix}$	7	DDDD						
			7. Changing the numeral and dec	, , , , , , , , , , , , , , , , , , , ,			,	
3. 12.34 is displayed.	-	(It is, however, impossible to change the numeral and decimal point on the same digit simultaneously.)						
Transmission data \rightarrow Display DCDD	- 1. 2 3	(The decimal point is controlled first.)	Transmission data \rightarrow Display C311	4	3	1	1	
Transmission data \rightarrow Display12.34(Numeral data is transmitted next.)	`	8. Turn OFF the display by sending data F.						
	transmitted next.)	Transmission data \rightarrow Display	4	3	1	4	(The decimal	
 9.876 is displayed. 			DDDD		-			point is OFF.)
Transmission data \rightarrow Display CDDD	1 2. 3 4	(The decimal point is controlled first.)	Transmission data \rightarrow Display 32F1	3	2		1	(Display turns OFF with F transmission.)
Transmission data \rightarrow Display 9876	9. 8 7 6	(Numeral data is transmitted next.)	Note: DP and BI control using set hexadecimal.	rial tra	ansn	nissio	on is	not displayed in

A Variety of Control Operations with Short-circuit Sockets

By removing the rear cover of the Display Unit and setting the XJ8A-0211 Short-circuit Socket, the following control operations are possible.

- 1. DP (J5) - - Decimal Control
 - · Short-circuit the DP (J5) terminals with a short-circuit socket so that the decimal point will be always lit.
 - The short-circuit socket is short circuited at the factory (i.e., normally lit). Open the short-circuit socket if external control or lighting are not required
- 2. RBI (J9) - - - Zero Suppression Control TER (J11)
 - When the zero suppression function is not used, the RBI (J9) terminals must be open. The TER (J11) terminals can be either short-circuited or open.
 - When zero suppression is not used, the RBI (J9) terminals of the M7E Digital Display Unit for the leftmost digit must be short-circuited, those of all the other M7E Digital Display Units must be open, the TER (J11) terminals of the M7E Digital Display Unit for the rightmost digit must be open, and those of all the other M7E Digital Display Units must be short-circuited.

Example of Zero Suppression Setting for Four Digits on the M7E (120/ 200-mm Model)


Note: To use zero suppression, CN2 and CN3 must be connected with an M7E-WHD11A Harness Connector.

In static mode, ladder programming is required for latch control. If latch control is not used, cut the data I/O lines (pins 1 to 4) on the Harness Connector.

1

OFF

OFF

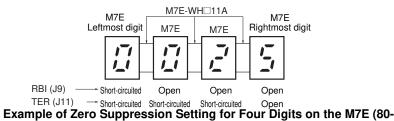

1

|_|


OFF

ON

]_[

ON

ON

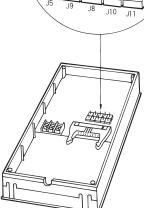


Short-circuit

socket

80-mm Model

 DIP Switch



- · Pins 1 to 4 are all factory-set to OFF.
- · Pins 5 and 6 are factory-set for brightness adjustment. Do not change the setting of these pins; the brightness will change.

3. R (J8) Display Color Control (Three-color Model Only) G (J10)

RBI

TER

mm Model)

 Short-circuit the R (J8) terminals with a short-circuit socket so that the display will be lit in red. • Short-circuit the G (J10) terminals with a short-circuit socket so that the display will be lit in green.

OFF

ON

- Short-circuit the R (J8) as well as G (J10) terminals with two short-circuit sockets so that the display will be lit in orange.
 - Note: When the R (J8) as well as G (J10) terminals are open, the display will be OFF if the CN1 Input Connector has not been connected yet.
- Note: 1. All the terminals are short-circuited before shipping. Short-circuit or open the terminals according to the application.
 - 2. Single-color (red or green) models do not incorporate the R (J8) and G (J10) terminals.
 - These terminals must be open when controlling the DP (J5), R (J8), and G (J10) terminals externally by inputting signals from the CN1. (The short-circuit socket will take precedence.)
 All the terminals J5 to J11 are connected to GND.
 - The 80-mm Model uses DIP switches. ON: Short-circuited OFF: Open 5. (SEL1 and SEL2 are switches to adjust brightness.)

 
Zero Suppression

To use zero suppression, first connect the CN3 and CN2 connectors on the M7E to the M7E-WH 11A Harness Connector. Then, set the DIP switch on the M7E-08 (80-mm model) or short the required pins with short-circuit sockets on the M7E-12 (80-mm model) or M7E-20 (200-mm model).

Zero Suppression for 80-mm Models

To use zero suppression, turn ON the RBI and TER pins on the DIP switch on the M7E for the most-significant digit, turn OFF the RBI and TER pins on the DIP switch on the M7E for the least-significant digit, and then turn the RBI pin OFF and the TER pin ON on the DIP switches on the M7E for the other digits.

DIP Switch





- Pins 1 to 4 are all factory-set to OFF.
- Pins 5 and 6 are factory-set for
- brightness adjustment. Do not change the setting of these pins; the brightness will change.


To use zero suppression, CN2 and CN3 must be connected with the M7E-WH□11A Harness Connector.


In static mode, ladder programming is required for latch control. If latch control is not used, cut the data I/O lines (pins 1 to 4) on the Harness Connector.

  Example of Zero Suppression Setting for Four Digits on the M7E (80-mm Model)





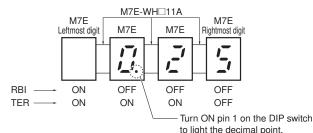

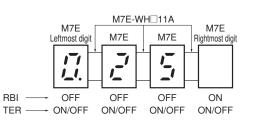


Zero Suppression for 120/200-mm Models

To use zero suppression, short-circuit the RBI and TER pins with the short-circuit sockets on the M7E for the most-significant digit, and leave these pins open on the M7E for the least-significant digit. For the M7E for other digits, leave the RBI pin open and short-circuit the TER pin.

By removing the rear cover of the Display Unit and setting the XJ8A-0211 Short-circuit Socket, the following control operations are possible.

To use zero suppression, CN2 and CN3 must be connected with the M7E-WH□11A Harness Connector.


In static mode, ladder programming is required for latch control. If latch control is not used, cut the data I/O lines (pins 1 to 4) on the Harness Connector.

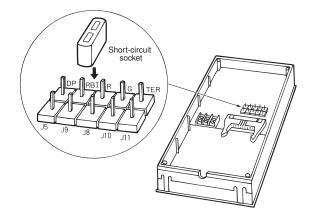

1. DP (J5) ----- Decimal Control

- Short-circuit the DP (J5) terminals with a shortcircuit socket so that the decimal point will be always lit.
- The short-circuit socket is short circuited at the factory (i.e., normally lit). Open the short-circuit socket if external control or lighting are not required
- 2. RBI (J9) TER (J11) ---- Zero Suppression Control • When the zero suppressio
 - When the zero suppression function is not used, the RBI (J9) terminals must be open. The TER (J11) terminals can be either short-circuited or open.
 - When zero suppression is not used, the RBI (J9) terminals of the M7E Digital Display Unit for the leftmost digit must be short-circuited, those of all the other M7E Digital Display Units must be open, the TER (J11) terminals of the M7E Digital Display Unit for the rightmost digit must be open, and those of all the other M7E Digital Display Units must be short-circuited.
- Note: 1. All the terminals are short-circuited before shipping. Shortcircuit or open the terminals according to the application.
 - 2. Single-color (red or green) models do not incorporate the R (J8) and G (J10) terminals.
 - **3.** These terminals must be open when controlling the DP (J5), R (J8), and G (J10) terminals externally by inputting signals from the CN1. (The short-circuit socket will take precedence.)
 - 4. All the terminals J5 to J11 are connected to GND.


Example of Zero Suppression Setting for Four Digits on the M7E (120/200-mm Model)

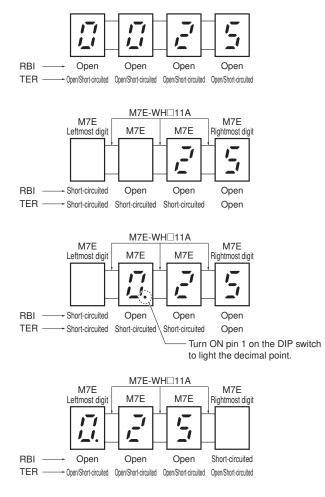

Operation

 
Operation Timing (Input Signal Timing)






■ Operation Chart

The following example shows the relationship between each input terminal and the display condition.

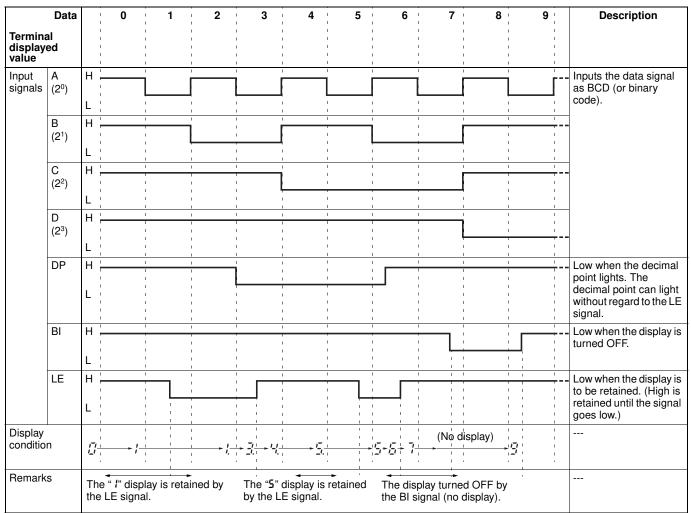


Dimensions

Note: All units are in millimeters unless otherwise indicated.

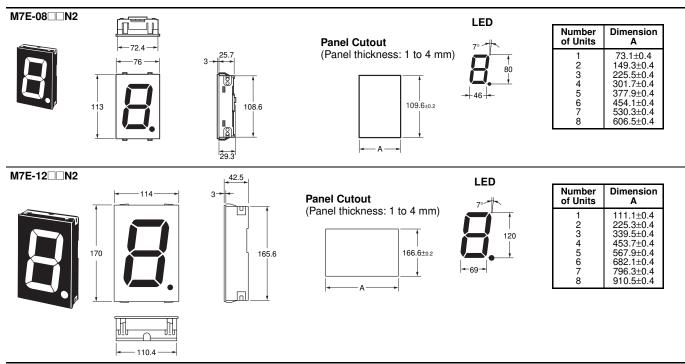

Note: Tolerance is ± 0.4 mm unless otherwise specified.

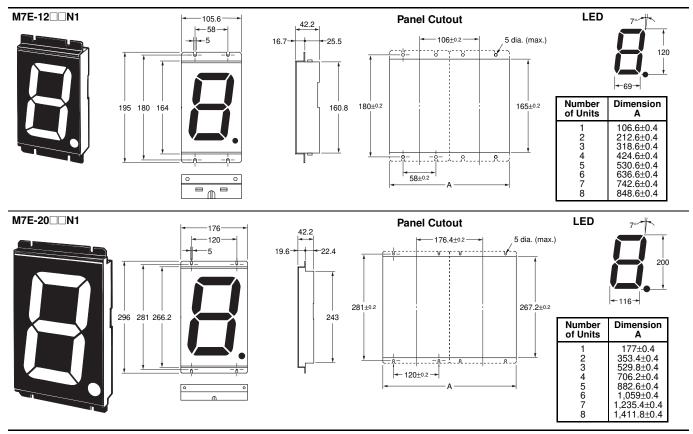

Note: Tolerance is ± 0.4 mm unless otherwise specified.

Safety Precautions

Precautions for Correct Use

Environment

- Use the switches in locations that are not subject to organic solvents (thinner, benzene, etc.), strong alkali, strong acid, sunlight, corrosive gases, water, and oil.
- Use the units in areas not subject to vibration or shock in excess of specifications.

<u>Wiring</u>

• When wiring with terminals or a connector, remove the rear cover of the M7E and connect the M7E to the terminals or connector properly, and be sure not to leave any wire cuttings inside the Display Unit.



• Make sure that no wire is more than five meters long when wiring the B7A link terminal.

Mounting

When mounting Display Units to a box, make slits on the rear part and the top of the box for ventilation. If there is no proper ventilation, the life of each Display Unit may be shortened.

Connecting Cable

When connecting an XG4M-2030 or XG4M-2030-T G79 Cable to a Digital Display with 80-mm-high Characters, an XG4Z-0002 Lock Lever can be used.

ALL DIMENSIONS SHOWN ARE IN MILLIMETERS.

To convert millimeters into inches, multiply by 0.03937. To convert grams into ounces, multiply by 0.03527.

Read and understand this catalog.

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

Warranties.

(a) Exclusive Warranty. Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.

(b) Limitations. OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE

PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE.

Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) Buyer Remedy. Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty.

See http://www.omron.com/global/ or contact your Omron representative for published information.

Limitation on Liability; Etc.

OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY.

Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.

Suitability of Use.

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

Programmable Products.

Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.

Performance Data.

Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.

Change in Specifications.

Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.

Errors and Omissions. Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.

In the interest of product improvement, specifications are subject to change without notice.

OMRON Corporation Industrial Automation Company