### imall

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



### Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832 Email & Skype: info@chipsmall.com Web: www.chipsmall.com Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China









## To our valued customers

I want to express my thanks to you for being interested in our products and for having confidence in MikroElektronika.

The primary aim of our company is to design and produce high quality electronic products and to constantly improve the performance thereof in order to better suit your needs.

We hope you'll have great fun with the Buggy, and that it'll be a great learning experience as well.

Nebojsa Matic, Owner and General Manager of MikroElektronika





### Table of contents

Introduction	6	Motors	20
Package contains	7	Power supply	21
It has the look and the features	8	mikroBUS <sup>™</sup> sockets	22
Assembling	10	click <sup>™</sup> boards	23
Choose your driver	17	Firmware	24
clicker 2 & mikromedia pinout	18	Android app	24
clicker 2 – a click™ board two-seater	19	Schematic	25
Lights	20	What's Next?	26

### Introduction

For years we have been honing our expertise in designing powerful and easy to use hardware development tools. Our reputation was forged, in part, on our range of mikromedia boards and the ever-growing line of click<sup>™</sup> boards. This time, we've put all that experience to use, and put it on wheels the Buggy is a four-wheel robotics workstation that takes advantage of all the innovations we came up with in recent years: it employs a clicker 2 / mikromedia pinout that makes it compatible with a wide range of microcontroller architectures. Then we added mikroBUS<sup>TM</sup> sockets giving you the choice of over 100 click<sup>™</sup> boards to enhance the four-wheeler and make it your own with various sensors and communication boards. We also published a free Android App for remotely controlling the Buggy and we made the code available to you. Finally, we took great care to provide you with the relevant documentation to make it easy to start working on your Buggy projects right away. Hence this manual. **Enjoy**.



Package dimensions: L 277mm, W 232mm, H 56mm



Package weight: ~800-850g



**Power supply** 3.7V, 2000mAh LiPo battery

Four-wheel clicker 2 or mikromedia workstation



Three additional click<sup>™</sup> board sockets, additional outputs, mounting holes



Open source Android App to jump-start your development



### Package contains



The kit contains 1) the main panel with circuitry, motors, lights, and the mikromedia connector; 2) a pair of battery holder tabs; 3) two side panels and a horizontal bar; 4) three mikroBUS<sup>m</sup> plates; and 5) four wheels.

### It has the looks...



### ... and the features



### Assembly

With basic soldering skills you'll assemble the Buggy in no time. Check out the "package contains" section on page 7 to make sure you have everything prepared. Then proceed with step 1 and all the way through. SRSPATSIP JI 40.3000mah E BUGGY



**STEP 1** - Remove wheels from one side

The Buggy's main board is packed in the box with wheels attached. Remove both wheels from the left side of the board, by pulling on them.



**STEP 2 -** Connect the battery

Pull the battery wire under the rail and attach it to the battery connector.



STEP 3 - Insert the battery

Push the whole battery under the rail. Be careful not to pinch the wire. The battery should fit squarely between Buggy's four motors.



STEP 4 - Insert battery holder tabs

Look for the two smallest pieces of PCB in the box. Those are the supporting tabs that keep the battery in place. Pick either one and place it in the sockets on either side of the board, so that the curved side is facing outwards



STEP 5 - Solder battery holder tabs

Hold the battery-holder tab and flip the main board so that the battery is now facing downwards. Solder the tab. Repeat step 4 and 5 for the second battery-holder tab.



STEP 6 - Reattach the wheels

The axle and the socket on the wheel are not completely round, so be careful to correctly align them before pushing the wheel towards the axle. 

**STEP 7 -** Insert mikroBUS<sup>™</sup> socket plates

The Buggy comes with three additional mikroBUS<sup>™</sup> socket plates. Pick either one and slip it inside one of the three slits on the main board, marked mikroBUS 1, mikroBUS 2, and mikroBUS 3.



**STEP 8 -** Solder mikroBUS<sup>™</sup> socket plates

While holding the mikroBUS<sup>TM</sup> socket plate inside the slit with your finger, flip the Buggy. Solder the plates, making sure to cover each of the eight contact points. Repeat steps 7 and 8 for the remaining two plates.



STEP 9 - Set side panels in place

Next, position the two side panels. You won't be soldering them yet, but pay attention to place the panels in the correct direction: the lower part faces forward, where the white and yellow LEDs are.



STEP 10 - Attach top bar

The top bar connects the two side panels and keeps the Buggy rigid, while also providing slots for soldering additional electronics. Notice that each side panel has four different slots for placing the top bar. You can use whichever one suits you best.



STEP 11 - Solder top bar

Solder the top bar to each side panel. You can always unsolder it later if you'd like to to change its position.



STEP 12 - Solder side panels

With the top bar soldered, flip the Buggy. Solder the two side panels to the main board; there are two contact points for each panel, one in each corner of the main board. Now flip the Buggy back on its wheels. You're done assembling!





# BUGGY

A motorized development platform

www.mikroe.com/buggy



### Choose your driver

Now that you've assembled the Buggy, the only remaining thing is to put a microcontroller in the driver's seat. You have two types of choices: (1) clicker 2 is a compact development platform with a MCU and two mikroBUS<sup>TM</sup> sockets (2) mikromedia is a multimedia development system with a 320x240 TFT touchscreen and a rich set of onboard modules. Both of these boards are available for different microcontroller architectures.



If you want to remotely control your Buggy, you'll also need a communications click<sup>TD</sup> board with a wireless transceiver module (Wi-Fi or Bluetooth work well).

### clicker 2 & mikromedia pinout



The Buggy carries a standard clicker 2/mikromedia pinout with a pair of 1x26 connection pads. However, to make the Buggy easier to program, some of the pins have descriptive labels that point out their functions in relations to the motors, lights and so on.

### clicker 2 – a click<sup>™</sup> board two-seater



Available for several MCU architectures, clicker 2 is a compact development kit with two mikroBUS<sup>TM</sup> sockets for click<sup>TM</sup> board connectivity. You can use it to quickly build your own gadgets with unique functionalities and features. It's an ideal Buggy driver because it lets you leverage the huge potential of click<sup>TM</sup> boards, our constantly expanding range of over 100 add-on boards.

# Lights

Just like a real car, the Buggy has a set of front and rear lights for signaling and for lighting the way. These lights are routed in a way that makes them easier to program should you develop your own firmware for the Buggy. They're grouped in three sets based on function: (1) The pair of white LEDs on the front are headlights, with two modes of brightness; (2) The red LED brake lights on the rear also have two brightness levels; and (3) the two pair of yellow LED signal lights are grouped by left and right side.

Highlighted above are the five pins that control the lights. TURN L and TURN R regulate the signal lights. H.LAMPS turns on the headlights and rear lights at low intensity. Activate both the M.BEAM and



#### Pins for controling Buggy's light

H.LAMPS at the same time for brighter headlights. For brighter rear lights (stop lights), activate the BRAKE and H.LAMPS at the same time.



LED schematics

### Motors

The Buggy has a differential motor drive. The four DC motors are split by left and right axis (controlled by **DRV833RTY** motor drivers, **U6** and **U7**, one for each side). Steering takes place when you vary the relative rate of rotation between the left and right side. This type of steering is simpler to manipulate if you'll be writing your own firmware for the Buggy. Also, when one pair of wheels is put in reverse while the other is in normal gear, the Buggy will start to spin, which wouldn't be possible otherwise.



To prevent the motors from drawing too much current from the battery (and in doing so prevent the other components from functioning properly) a few resistors are placed to limit current draw. Each motor can draw a maximum of 400 mA, for a total of 1.6 A for all four motors.

### Power supply

#### Battery charger

The Buggy runs on a 3.7V 2000mA battery. Once you install the battery, there's no need to take it out; charge it through the Buggy's USB port. A miniature single-cell, fully integrated Lilon, Li-Polymer charge management controller. **MCP73832** enables that. A red power indication LED will signalize when the battery is charging. Once charged, it'll turn off.

#### Screw teminals

The Buggy's expandability is not limited to mikroBUS<sup>TM</sup> sockets and click<sup>TM</sup> boards. You can attach a variety of sensors and antennas to its top bar. A pair of screw terminals will allow you to connect those additional components to the main power supply. Both 3.3V and 5V outputs are available. There's an additional pair of screw terminals that are analog inputs.

#### **ON/OFF** switch

The ON/OFF switch on the rear of the Buggy, between the USB port and the left rear lights, controls the main power supply. A clicker 2 board also has its own ON/OFF switch, which should be kept in the ON position in order for the main power supply switch to work. A green LED will indicate the presence of a power supply. When removing the clicker 2, keep both switches OFF.



### mikroBUS<sup>™</sup> sockets

Enhancing the Buggy with various sensors and communication modules is easy – you just plug a MikroElektronika click<sup>™</sup> board into one of the 3+2 available mikroBUS<sup>™</sup> sockets and you're good to go.

mikroBUS<sup>TM</sup> is a specially designed pinout standard with **SPI**, **I2C**, **Analog**, **UART**, **Interrupt**, **PWM**, **Reset and Power supply pins**. It has two 1x8 headers, each with VCC and GND power supply pads.

The Buggy comes with **three mikroBUS<sup>™</sup> sockets**, **two in the front**, **one in the rear**. If you connect a clicker 2 board to the Buggy you'll get two more sockets for a total o five mikroBUS<sup>™</sup> sockets.

There are **more than a 100 click**<sup>TM</sup> **boards available**. Each click<sup>TM</sup> board comes with a single module, and these vary from sensors to displays, audio to motor control, communication to fiber optics, even speech recognition.



Vertical mikroBUS<sup>™</sup> socket schematic

Learn more about the mikroBUS<sup>TM</sup> standard at www.mikroe.com/mikrobus



Front mikroBUS<sup>™</sup> plates



Rear mikroBUS<sup>™</sup> plate

### click<sup>™</sup> boards are plug-and-play!

For a few years now, MikroElektronika has been expanding their range of click<sup>™</sup> boards. Almost **each month several** new click<sup>™</sup> boards are released, carrying all types of sensors and communication modules. There are over a 100 click<sup>™</sup> boards to choose from. You'll be able to **expand** your Buggy with additional functionality with literally zero hardware configuration. Just plug and play.





BlueTooth click<sup>™</sup>



GPS click<sup>™</sup>



For the complete list of available click<sup>™</sup> boards, please visit:

www.mikroe.com/click

WiFi PLUS click"





microSD click<sup>™</sup>



MPU 9DOF click<sup>™</sup>



nRF C click<sup>™</sup>



Proximity click<sup>™</sup>





BUZZ click<sup>™</sup>

### Firmware

### Android application

If your clicker 2 board came with the Buggy as part of a kit, then you're all set – the firmware compatible with the Android app shown on the right is already installed.

If you've purchased only the Buggy by itself, no problem. Clicker 2 and mikromedia boards have a USB-HID bootloader which makes it easy to install the firmware. All you have to do is download the mikroBootloader application for your clicker 2 or mikromedia board, along with the firmware, all available from www.mikroe.com/buggy.



Edit the code for the Buggy App and make it your own – shown here is Android Studio, a popular Android platform IDE

A free open-source Android App for driving the Buggy is available from mikroe.com/buggy. The App talks to the Buggy through a wireless transceiver click<sup>™</sup> board (Bluetooth or Wi-Fi). It's a great starting point to develop your own original applications for the Buggy, just open the project in your Android SDK of choice (for example Android Studio, shown here). But first, spend some time driving the Buggy around from your smartphone or tablet, just for fun.

Wait for USB link	*	MCU Type		¥		
Connect Disconn	Disconnect	History Window	Ń			
<b>3</b> Choose HEX file	Browse for HEX	Waiting MCU response Connected.				
4 Start bootloader	Begin uploading			÷		

#### mikrobootloader application

Then turn off the Buggy, detach the clicker 2 board, plug it to your computer via USB, and follow the simple 4-step procedure in mikroBootloader.

If you're making your own custom firmware for the Buggy in mikroC<sup>™</sup>, mikroBasic<sup>™</sup> or mikroPascal<sup>™</sup>, you'll also upload it with the mikroBootloader.



Install the app on your smartphone or tablet and take your Buggy to the road



### Schematic









MOTO REAR LEFT (RL)

M

VCC- IN







FAUCI BING BING

