

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China









OM11051

Accurate Real-Time Clock Evaluation Kit

- At power up (after connecting the USB cable to the LPCXpresso Board), the word "CLOCK" flashes on the screen for one second and then the time is displayed on the screen in the format: HH--MM--SS.
 This is the Clock Mode.
- 2. At any time, pressing the TS button will initiate the MCU to read the timestamp information from the RTC and display it on the LCD. This is the **Timestamp Mode**. Thereafter, pressing the TS button again will initiate the MCU to read the new time stamp information from the RTC and update the screen with the new timestamp information. However, if SEL, UP or DOWN switch is pressed, when the time stamped data is displayed on the screen, the word "CLOCK" will flash on the screen for one second and then the current time will be displayed on the LCD and the unit will return to the Clock Mode (Step 1).
- 3. Pressing UP or DOWN will cycle through the different operational modes.
 - In the Clock Mode, the word "CLOCK" flashes on the LCD for one second and then the time is displayed on the LCD in the format:

HH--MM--SS.

- In the Date Mode, the word "DATE" flashes on the LCD for a second and then the date is displayed on the LCD in the format: MM/DD/YY.
- In the Alarm Mode, the word "ALARM" flashes on the LCD for a second and then the alarm time is displayed on the LCD in the format: HH--MM--SS.
- In the Countdown Mode, the word "COUNTER" flashes on the LCD for a second and then the countdown time is displayed on the LCD in the format: HH--MM--SS. The countdown begins and the display is updated every second. The user may program the countdown time from 00--00--00 to 00--04--15 in increments or 1 second.

Once the user is done programming, the countdown begins. If the countdown reaches zero (00--00--00), the display flashes and toggles between the words "COUNTER" and "FINISH".



- "FORMAT" flashes on the screen for a second and then the selected time format is displayed on the LCD. The different time formats to select from are 24H (Default at power up), 12H / PM, and 12H / AM.
- In the Power Mode, the phrase "PWR ON" is displayed on the LCD. The user may switch to LOW PWR Mode (LCD driver off but MCU on), by:
 - Pressing SEL to display the phrase "LOW PWR?" on the LCD.
 - ii. Pressing the UP switch for LOW PWR and then SEL to enter Low Power Mode.
 - iii. After pressing SEL the first time and the phrase "LOW PWR?" is displayed on the LCD, if the user presses the DOWN switch, the phrase "PWR / ON" is displayed again on the screen and pressing SEL will return to the starting point in the Power Mode.

In the **LOW PWR Mode** (LCD driver off but MCU on), pressing SEL, UP, or DOWN wakes up the MCU, flashes the word "CLOCK" on the screen for one second, reads the current time from the RTC, and displays it on the LCD. This puts the unit back in the **Clock Mode** (step 1).

In the **Low PWR Mode**, pressing the TS switch wakes up the MCU, reads the timestamp data from the RTC and displays it on the LCD. This puts the unit back in the **Timestamp Mode**

- (step 2).
- In the Advertising Mode, the following words flashes on the LCD for a second and cycle through continuously: WELCOME, NXP, LOW PWR, CLOCK, PCF2127A, LCD, PCF8562.
- 4. In the Clock, Date, Alarm, Countdown,
 Format, and Power Modes, pressing SEL
 will put the unit into the respective
 Programming Mode. In the Programming
 Mode, the variable being programmed will
 blink as the user sets the desired value.
 While the variable is blinking, pressing UP
 once will increment the variable to the next
 step and pressing DOWN once will
 decrement the variable to the previous
 step. If the user holds the UP or DOWN
 switch, the scroll speed increases.

After the desired value is set and the user presses the SEL switch, the next variable to be programmed will blink. When all variables have been programmed, the word "FINISH" flashes on the LCD three times and then the display returns to the previous mode prior to entering the **Programming Mode**.

- 5. At anytime, if there is an alarm, the word "ALARM" flashes on the screen until the user presses SEL, UP, or DOWN switch. At which time, the interrupt will be cleared and the blinking will stop.
- During operation, the unit may be powered via the USB connector (cable included) or a coin-cell battery (included).
- 7. This demonstration kit may also be used to evaluate the PCF2129A or the PCA2129 accurate real-time clock devices by swapping the device under evaluation with the PCF2127A device on board.



