

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



## Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China







# PAxxSO1-OT Data Sheet


## xx pin SO Socket/xx pin DIP 0.6" plug

### Supported Device/Footprints

Using this adapter, the 32 and 40 pin SO EPROM packages can be programmed on DIP programmers.

Device		Footprint		
Mfgr	Device	Package	Programmers	Plug
Many	32 pin	SO	Many	40 pin DIP
"	40 pin	"	"	"

Both SOP sockets accept packages with the dimensions listed below:

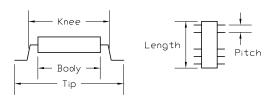

Body	Knee	Tip	Pitch	Length
11.4mm typ	12.4mm typ	14.1mm typ	1.27mm	n/a
11.8 max		14.3 max.		

#### Adapter Parts & Part Numbers

The following chart shows the various socket and board part numbers that make up these adapters.

Adapter	Socket	Board
PA32SO1-OT	32SD-01	32SO-01
PA40SO1-OT	40SD-01	40SO-01

#### **Adapter Construction**

The adapter is made up of 2 sub-assemblies. They assemble via connectors making the adapter modular. This way the sub-assemblies can be replaced when they wear out.

When disassembling the adapter take care not to bend the pins. When reassembling the adapter note the pin 1 indicators to align the parts correctly.

#### **Test Socket**

Open top SO socket:

for PA32SO1-OT:

Enplas Part #: OTS-32-1.27-01 LSC Part #: 32SD-01


for PA40SO1-OT:

Enplas Part #: OTS-40-1.27-01 LSC Part #: 40SD-01

#### 32SO-01 or 40SO-01

Accepts the test socket and connects to the 32 or 40 pin DIP footprint.

#### **Adapter Dimensions**

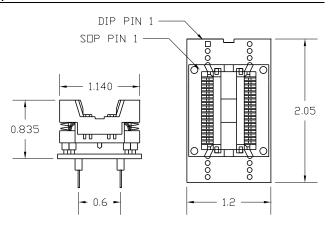

(The PA40SO1-OT is shown)

### **Adapter Wiring**

The following chart shows the connections from the SO device to the adapter's DIP plug.

On PA40SO1 -OT Only:

DEVICE	PLUG
1	1
3	3
2 3 4 5 6 7	2 3 4 5 6 7
5	5
6	6
7	7
8	8
9	9
10	10
11	11
12	12
13	13
14	14
15	15
16	16
17	17
18	18
19	19
20	20
21	21
22	22
23	23
24	24
25	25
26	26
27	27
28	28
29	29
30	30
31	31

32

32

DEVICE	PLUG
33	33
34	34
35	35
36	36
37	37
38	38
39	39
40	40