



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts,Customers Priority,Honest Operation,and Considerate Service",our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832


Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



Raspberry Pi Camera Mount

 PIM012

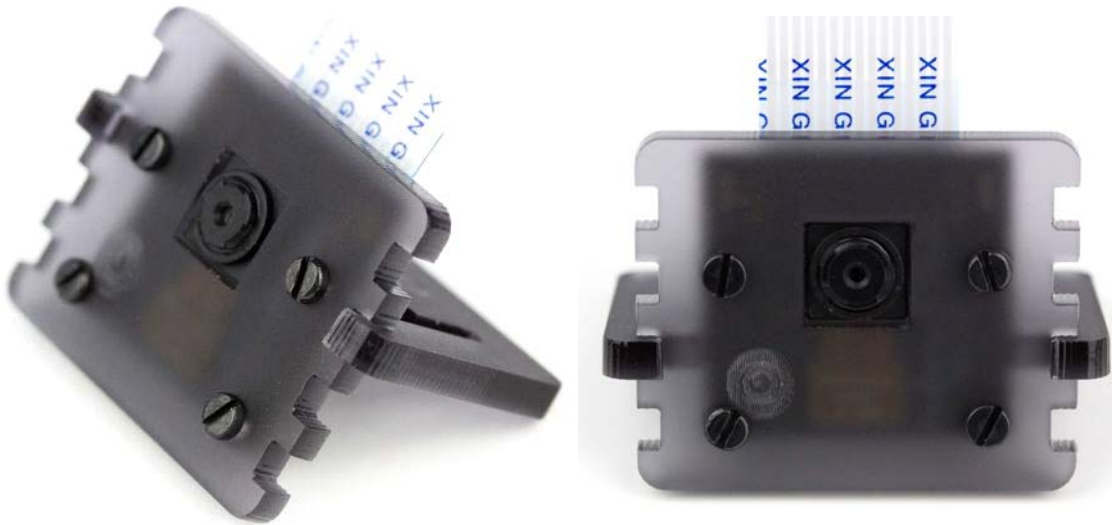

A stylish, small, and adjustable mount for your Pi Camera.

 
- Allows four different angles of repose.
- Four Screws to secure your camera
- Made from lush matte black acrylic
- 1/4 inch hole for tripod mounting.

Assembling the Camera Mount

The Camera Mount is a small no-frills mount ideal for desktop or light tripod use. It also avoids you having Sugru or Blu-tak on your precious camera board.

The kit comes with:

- 5x M2 nuts
- 5x M2 bolts
- 2x mount plates

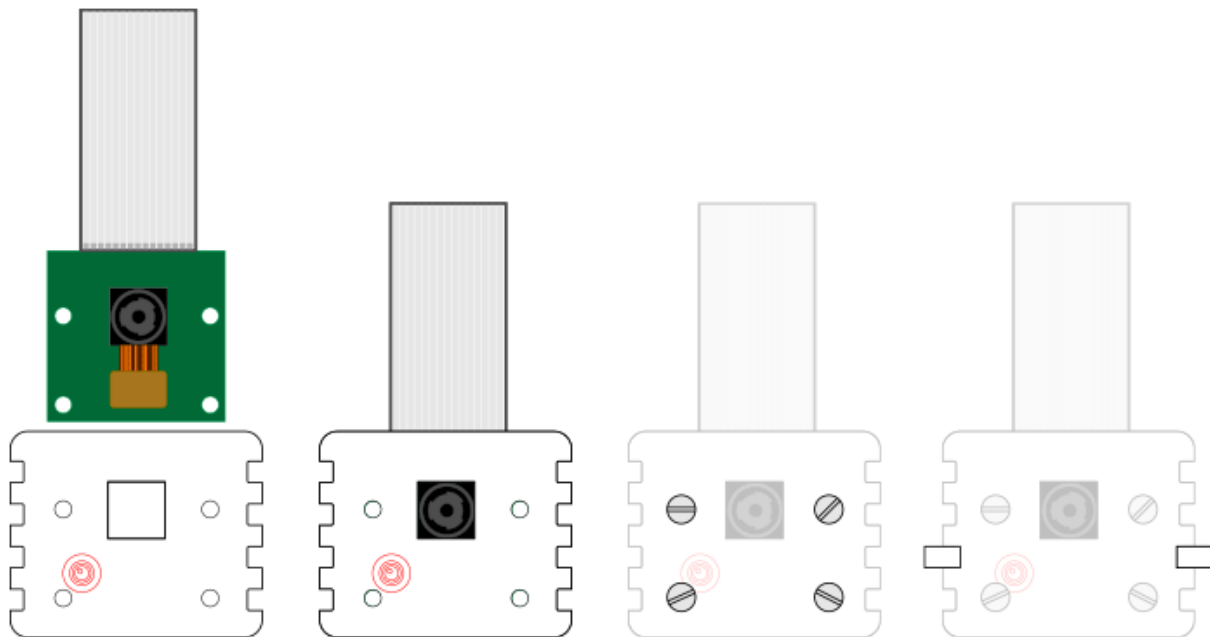

1. Attach board to large plate

Take the large plate, and place the camera module lens into the square hole, such that the screw holes on the camera module line up with the screw holes on the plate.

 
2. Screw it

Use the 4 nuts and bolts to attach the camera module to the plate. **Do not over tighten.** The module board must be straight, not bowed, under the pressure of the screws.

3. Second plate

Clips the second plate into one of the 4 sets of slots along the sides of the main plate. The set you choose determines the angle the camera rests at.

The ribbon cable should be at the top of the assembly.

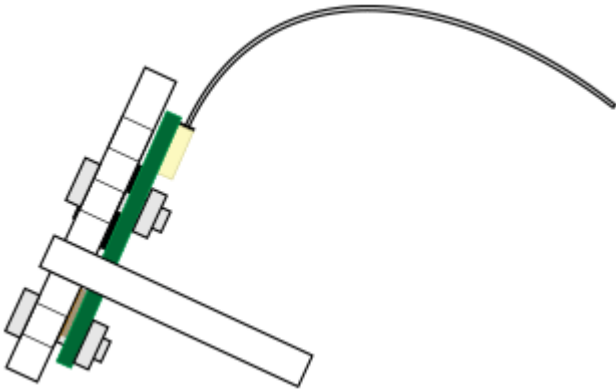

4. We'll fix it in software

The camera's natural orientation seems to be with the cable at the bottom, which is awkward with such a springy cable. You can use **raspistill -vf -o filename.jpg** to correct the orientation.

5. Tripods

To attach the camera mount to a tripod, clip the second plate to the lowest set of slots. Now place the hole in the second plate onto the tripod thread and gently screw until attached. The slight angle of the camera mount keeps the screw secure.