mail

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832 Email & Skype: info@chipsmall.com Web: www.chipsmall.com Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China





COMPACT SIZE HIGH PRECISION POWER ON-DELAY TIMERS

PMH

RoHS compliance



Features

• Using a dedicated IC, the operation time variance is ±0.5%.

• Using the slide, time range switching is easy. Moreover, the scale numbers on the dial and time units can be switched automatically.

					-
Button position Type					
	10M type	0.05S to 1.0S	0.5S to 10S	0.05M to 1.0M	0.5M to 10M
	30M type	0.15S to 3.0S	1.5S to 30S	0.15M to 3.0M	1.5M to 30M
	10H type	0.05M to 1.0M	0.5M to 10M	0.05H to 1.0H	0.5H to 10H
	30H type	0.15M to 3.0M	1.5M to 30M	0.15H to 3.0H	1.5H to 30H

• You can use for embedding if you use together with the appropriate flush type mounting frame designed for that purpose (sold separately).

Time selectable

Product types

Broduct name	Operating voltage	10M type	30M type	10H type	30H type
FIOUUCI Hame		Part No.	Part No.	Part No.	Part No.
	100 to 120 V AC	PMH-10M-AC120V	PMH-30M-AC120V	PMH-10H-AC120V	PMH-30H-AC120V
	200 to 240 V AC	PMH-10M-AC220V	PMH-30M-AC220V	PMH-10H-AC220V	PMH-30H-AC220V
DMH timer	12 V DC	PMH-10M-DC12V	PMH-30M-DC12V	PMH-10H-DC12V	PMH-30H-DC12V
FINIT UITIEI	24 V DC	PMH-10M-DC24V	PMH-30M-DC24V	PMH-10H-DC24V	PMH-30H-DC24V
	48 V DC	PMH-10M-DC48V	PMH-30M-DC48V	PMH-10H-DC48V	PMH-30H-DC48V
	100 to 110 V DC	PMH-10M-DC100V	PMH-30M-DC100V	PMH-10H-DC100V	PMH-30H-DC100V

Notes: 1. 24 V AC type can also be ordered. Please inquire about pricing and any other details.

2. If embedding, please use the flush type mounting frame for that purpose.

3. Please order with a "9" at the end of the part number for UL and CSA certified products. Please inquire about pricing and any other details.

Time range

Time range 1.0 3.0	Scale intervals		
1.0	0.05		
3.0	0.1		
10	0.5		
30	1		

Operation mode



General tolerance: $\pm 1.0 \pm .039$

Specifications

Tupo		PMH Timers			
туре		AC operating type	DC operating type		
Rated operating volta	age	100 to 120V, 200 to 240V (50/60Hz common)	12V, 24V, 48V, 100 to 110V		
Rated power consun	nption	Max. 3VA	Max. 2W		
Rated control capaci	ity	7A 250V AC (resistive load)			
Operation mode		ON-delay			
	Operating time fluctuation & Power off time change error	[Except 1s range] Within ±0.5%* [1s range]: Within ±(0.5%+10ms) (power off time change at the range of 0.1 s to 1 h)			
Time accuracy	Voltage error	[Except 1s range] Within ±0.5%* [1s range]: Within ±(0.5%+10ms) (at the operating voltage changes between -20 to +10%)			
	Temperature error	Within ±5% (at 20°C 68°F ambient temp. at the range of -10 to +50°C +14 to +122°F)			
	Setting error	Within ±10% (Full-scale value)			
Output arrangement		Timed-out 2 Form C			
Contact resistance (I	Initial value)	Max. 50mΩ (By voltage drop 6V DC 1A)			
Expected life	Mechanical (constant)	Min. 5×107			
(min. operations)	Electrical (constant)	Min. 2×10 ⁵ (at rated control capacity)			
Allowable operating voltage range		80 to 110% of rated operating voltage			
Insulation resistance	(Initial value)	Between input and output Min. 100M Ω Between contact sets (at 500V DC) Between contacts			
Breakdown voltage (Initial value)	2000Vrms for 1min Between input and output 2000Vrms for 1min Between contact sets 1000Vrms for 1min Between contacts			
Power off time		Max. 0.1s			
Vibration	Functional	10 to 55Hz: 1 cycle/min double amplitude of 0.5mm (10min on 3 axes)			
resistance	Destructive	10 to 55Hz: 1 cycle/min double amplitude of 0.75mm (1h on 3 axes)			
Shock	Functional	Min. 98m/s ² (4 times on 3 axes)			
resistance	Destructive	Min. 980m/s ² (5 times on 3 axes)			
Ambient temperature		−10 to 50°C +14 to 122°F			
Ambient humidity		30 to 85% RH (at 20°C 68°F, non-condensing)			
Ripple factor		_	Full-wave rectified (Approx. 48%)		

Dimensions (mm inch)

The CAD data of the products with a CAD Data mark can be downloaded from: http://panasonic-electric-works.net/ac

CAD Data



Terminal layouts and Wiring diagrams



• . Timed cut contact

••• : Instantaneous contact

Note: For the DC type, No. 2 terminal is (-). *For installation parts, please refer to "PMH TIMER OPTIONS" on page 168.

PMH TIMER OPTIONS

Flush Type

Flush type mounting frame

	Color	Model number	Front View (Installing onto control panel)	Mounting Hole Dimensions (Unit: mm inch)			
Appearance				Recommended Hole (For newly designed frame)	Applicable Mounting Hole (For installing in the old hole)		
62.8 ×	Gray	AT7851 N-TF-H-GR	1.890 2.283	48	48 1.890	R: 2.079	$\mathbf{R}: 2.079$
	Black	AT7852 N-TF-H-B		1.988^{+000} less 1.742^{+000}	2.165 $\frac{330}{100}$ less		
	Silver Gray	AT7853 N-TF-H-SG		*Distance between parallel drilled holes: 6.5 mm or more	1.772**** *Distance between parallel drilled holes: 5 mm or more		
62.8 2.472	Gray	AT7811 N-TF-K-GR	48 1.890 58 2.283	R: 2.079			
	Black	AT7812 N-TF-K-B		58 2.283	2.087±012 -39±03 -39		
	Silver Gray	AT7813 N-TF-K-SG		*Distance between parallel drilled holes: 11 mm or more			
62.8 2.472	Gray	AT7821 N-TF-YC-GR	1.969 74 2.913	50 1.969 2.913	R: 2.079	$\begin{array}{c} 2 \cdot \phi 4.5 \\ \hline 2 \cdot \phi \cdot 177 \\ \hline 1 \\ 2 \cdot \phi 1 \\ 1 \\ 1 \\ 2 \cdot \phi 1 \\ 1 \\ 1 \\ 2 \cdot \phi 1 \\ 1 \\ 1 \\ 1 \\ 2 \cdot \phi 1 \\ 1 \\ 1 \\ 1 \\ 1 \\ 1 \\ 1 \\ 1 \\ 1 \\ 1$	
	Black	AT7822 N-TF-YC-B			2.087 ^{±.012} + 39 ^{±03} +	$\begin{array}{c c c c c c c c c c c c c c c c c c c $	
	Silver Gray	AT7823 N-TF-YC-SG		*Distance between parallel drilled holes: 13 mm or more	1.535**** 1.713**** 1.732***** *Distance between parallel drilled holes: *Distance between parallel drilled holes: *Distance between parallel drilled holes: 13 mm or more 8.5 mm or more 8 mm or more		
62.8 2.472	Gray	AT7831 N-TF-Y-GR	58 2.283 88 3.465	2-\$4.5 2-\$.177 76**1 2.992**** 2.087**** *Distance between parallel drilled holes: 21 mm or more			

Notes:

1. The thickness of all applicable panels ranges from 1.0 to 3.5 mm .039 to .138 inch.

2. * indicates the distance between the mounting holes which are parallel cut on the panel.

Installation

1. Insert the mounting frame surface into the panel from its front surface.



Note: The panel which is installed onto the flush type mounting frame for the timer cannot be inserted. (However, the installation order is not specified when the flush type mounting frame (type S) is used.)

3. Hang the hooks on the timer base to secure the timer to the flush type mounting frame.



Removal

Remove the timer in the reverse order of installation.

8P cap





Features

1. The cover prevents the timer from operating improperly after setting the time. It also works as a compact dust cover.

2. The cover is applicable for all types of the fingertip flush type mounting frames for the compact timer.

• 8P cap When a flush type mounting frame is used for the exposed type, 8P cap should be installed.

Model number: AD8-RC





Installation

8p cap

Press the points on the protective cover (indicated by arrows) to bend the ribs, and hook the ribs inside the mounting frame window. The protective cover can be installed if the timer is inserted into the mounting frame.





The dimensions B and C are shown in the table below.

(Unit: mm,			
Mounting frame to be used	Dimension B	Dimension C	
Туре Н Туре К	13.1	52.8	
Type MHP Type MHP-M Type S	14.6	51.3	

• Rear terminal socket: M3.5 Applicable for 8-pin type Tolerance: ±1 ±.039

Model number: AT78041



When an applicable timer comes in contact with the collar of the mounting frame, stop the timer by pressing the upper and lower hooks in the direction indicated by arrow. Use rear terminal socket (AT78041) or 8P cap (AD8-RC) for the connection wiring.

PMH TIMER OPTIONS

■ Applicable for the exposed type plug-in and stand-up type timers (PMH) • DIN terminal socket: M3.5

Tolerance: ±0.5 ±.020

Model number: AT8-RFD

All types of our compact size timers can beeasily installed on the DIN rail by using this terminal socket.

When installing the terminal socket:



The height of the DIN rail should be added to the overall height A.

Mounting hole dimensions Without DIN rails



Wiring diagrams (TOP VIEW)



Note: Terminal number on the main body are identical to those on the terminal socket.

Mounting rail (Applicable for DIN and IEC standards)
Model number: AT8-DLA1

• Fastening plate Model number: ATA4806



GT pipe socket

Tolerance: $\pm 0.5 \pm .020$





Mounting hole dimensions



Pitch for installing the timer When installing the clips vertically, the pitch for the timer should be 79 mm 3.110 inch or more.

Accessory Used for the exposed type

 Used for the exposed type
 (Unit: mm inch), General tolerance: ±1 ±.039

 Image: Constraint of the exposed type
 • DIN terminal socket
 • Timer rear terminal socket
 • GT pipe socket

 Image: Constraint of the exposed type
 • JIN terminal socket
 • JIN terminal socket
 • GT pipe socket

 Image: Constraint of the exposed type
 • JIN terminal socket
 • JIN terminal socket
 • GT pipe socket

 Image: Constraint of the exposed type
 • JIN terminal socket
 • JIN terminal socket
 • GT pipe socket

 Image: Constraint of the exposed type
 • JIN terminal socket
 • JIN terminal socket
 • GT pipe socket

 Image: Constraint of the exposed type
 • JIN terminal socket
 • JIN terminal socket
 • GT pipe socket

 Image: Constraint of the exposed type
 • JIN terminal socket
 • JIN terminal socket
 • JIN terminal socket

 Image: Constraint of the exposed type
 • JIN terminal socket
 • JIN terminal socket
 • JIN terminal socket

 Image: Constraint of the exposed type
 • JIN terminal socket
 • JIN terminal socket
 • JIN terminal socket

 Image: Constraint of the exposed type
 • JIN terminal socket
 • JIN terminal socket
 • JIN terminal socket

 Image: Constraint of the exposed type
 • JIN terminal socket
 <t

For details, please refer to "PMH TIMER OPTIONS" on page 170.

Used for the flush type



For details, please refer to "PMH TIMER OPTIONS" on page 168.

PRECAUTIONS IN USING PMHTIMERS

Precautions during usage

In order to maintain the characteristics of PHM timer, do not remove the case.

■ Please use within an ambient temperature range of –10 to +50°C +14 to 122°F and in humidity no greater than 85% RH.

■ Prevent using PMH timer in such places where flammable or corrosive gas is generated, a lot of dust exists or considerable shock and vibration occur.

Since the main body cover is made of polycarbonate resin, prevent contact with organic solvents such as methyl alcohol, benzene and thinner, or string alkali materials such as ammonia and caustic soda.

Do not make direct solder connections to the round pins.

Carefully verify the terminal numbers when wiring the terminal socket and cap.

■ When rotating the knob, note that there are stoppers located just past the "0" side and the full scale side. Therefore, do not use unreasonable force.

■ Please use with a time setting that is no less than the minimum time limit. The minimum time limit is indicated on the dial by the s mark.

The contacts will not operate if the needle is adjusted to the "0" position when the power is off.

Phase synchronization for AC load switching

When timer output contact will be synchronized to the AC power phase, the electrical life may be compromised and locking (contact reset failure) may occur due to contact welding or contact transference. Therefore, please conduct tests using actual equipment.