



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



## Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



## INSTRUCTIONS:

### How to change filter

- 1 Carefully lift out the filter keeping disruption to a minimum.
- 2 Insert used filter into a plastic bag or box and dispose of properly.
- 3 Slide new filter into the top of the unit until the fan is fully covered.

### Location and mounting

- 1 Mount unit on a stable work surface equipped with an ac power supply.
- 2 Locate unit 6" to 8" (152 to 203mm) from work area.

### Maintenance

- 1 Unplug unit.
- 2 Remove filter from unit carefully.
- 3 Using a small brush clean fan and housing, being careful not to breath in the dust.
- 4 Make sure that the fan blades spin freely.

## CAUTIONS

This equipment is for industrial/laboratory use.

Indoor use only.

Altitude up to 6561 FT (2000 meters).

Maximum RH of 80% up to 88°F (31°C) decreasing 50% RH at 104°F (40°C).

Pollution degree 2 in accordance with IEC644.

Installation category II.

Temperature range 41°F (5°C) to 104°F (40°C)

The user must be aware that if the equipment is used in a manner not specified by the manufacturer, safety may be impaired.

If the supply cord is damaged, or servicing is required, this work must be carried out by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

 **JONARD TOOLS®**



SA-9-115

SA-9-E-115

# Fume Absorber Instruction Manual

 **JONARD TOOLS®**

134 Marbledale Road, Tuckahoe, NY 10707  
Tel 914.793.0700 | Fax 914.793.4527 | jonard.com

P/N 15183 REV .G

