

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China







Related Information

LASER SENSORS

PHOTOELECTRIC SENSORS

MICRO PHOTOELECTRIC SENSORS

> AREA SENSORS

IGHT CURTAINS SAFETY

PRESSURE / FLOW SENSORS INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASUREMENT SENSORS

STATIC ELECTRICITY PREVENTION DEVICES

> LASER MARKERS

> > PLC

HUMAN MACHINE INTERFACES

ENERGY CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Selection
Guide
Light Curtains
Safety
Components
Optical Touch
Switch
Control Units
Definition of
Sensing Heights

SF4B-C SF4C SF2C SF4B


SF2B

BSF4-AH80

Compact Light Curtain Type 4

SF4B-C SERIES

 Sensor selection guideP.497~

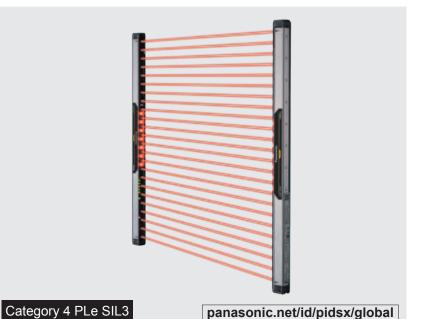







Conforming to OSHA / ANSI










Compact, light weight design, and advanced functionality in one package


Compact profile design, maximize the machinery opening area

The **SF4B-C** series is designed to fit onto an aluminum frame, maximizing the machinery opening area. It can even allow zero dead zone.

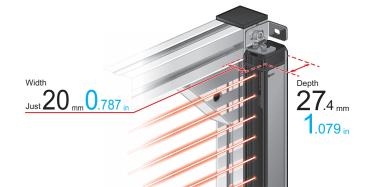


Side mounting

- The presence of light curtain does not narrow the opening area.
- The light curtain is thin, so its bulge from frame can be minimized.
- * When using standard mounting brackets (optional)

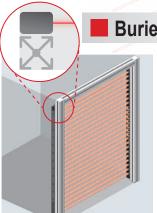

Buried mounting (side)

- The light curtain fits onto frame perfectly, even in embedded installations.
- The light curtain protrudes neither into the machinery opening nor outside the frame.
- The light curtain will not be damaged due to collision with workpiece.
- * When using standard mounting brackets (optional)

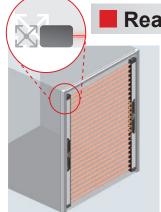

Rear mounting

- The light curtain fits onto a 20 × 20 mm 0.787 × 0.787 in aluminum frame perfectly.
- The light curtain does not protrude from the frame.
 - When using standard mounting brackets (optional)


Plastic × metal

The **SF4B-C** series features a proprietary double structure of a "plastic body" with a "metal inner frame" which lightens the weight while maintaining the durability.



Maximum protection height of 1,943.4 mm 76.512 in

Despite its compact, plastic body, the **SF4B-C** series features a metal inner frame that increases toughness and also keeps its enclosure not to curve. Protective heights range from 263.4 mm to 1,943.4 mm 10.370 in to 76.512 in.

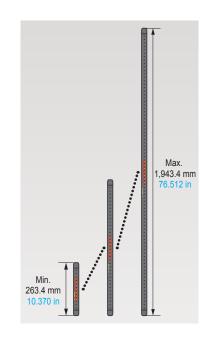

45% lighter* for easy installation in high places and when mounting long models

Thanks to its plastic body, the **SF4B-C** series is 45% lighter* than previous models with aluminum enclosures. This helps to reduce the overall weight of the equipment during transport and when shipping it overseas.

* Comparing SF4B-H80 <V2> with SF4B-H80CA-J05




Large multi-purpose indicator

SF4B-□CA-J05

The **SF4B-C** series incorporates a large multi-purpose indicator (orange) positioned around workers' eye level. The indicator shows the presence of the light curtain, helping to prevent unintentional beam interruption. The indicator can be used in a variety of applications such as a muting indicator and work indicator.

Exceptional visibility with wide angle

The large multi-purpose indicator shines brightly through the plastic body to ensure exceptional visibility.

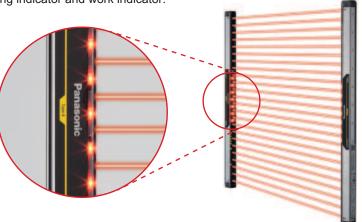

FIBER SENSORS

LASER SENSORS

PHOTOELECTRIC SENSORS

MICRO PHOTOELECTRIC SENSORS

AREA SENSORS

IGHT CURTAINS / BAFETY COMPONENTS

PRESSURE / FLOW SENSORS INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASUREMENT SENSORS

STATIC ELECTRICITY PREVENTION DEVICES

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES

ENERGY CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Selection Guide

Safety
Components
Optical Touch
Switch

Control Units

Definition of Sensing Heights

SF4B-C

SF4C

SF2C

SF4B

SF2B

BSF4-AH80

LASER SENSORS

PHOTOELECTRIC

MICRO

PHOTOELECTRIC SENSORS

> AREA SENSORS

LIGHT CURTAINS SAFET COMPONENT:

PRESSURE / FLOW SENSORS INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASUREMENT SENSORS

STATIC ELECTRICITY PREVENTION DEVICES

> LASER MARKERS

> > PLC

HUMAN MACHINE INTERFACES

ENERGY CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Selection
Guide
Light Curtains
Safety
Components
Optical Touch
Switch
Control Units

SF4B-C SF4C

Sensing Heights

SF2C

SF4B


SF2B

BSF4-AH80

Handy-controller SFB-HC (optional) offers easy access to settings for a range of functionality

Muting control function for individual beams: Limit the muting area SF4B-□CA-J05


The **SFB-HC** handy-controller (optional) allows to perform muting control for certain beams only. Since beam channels can be specified, so there is no need to install a separate guard to prevent intrusions. For example, according to the height of a sensing object, when muting control from the lowermost beam channel to the 10th beam channel is activated, the light curtain will detect any beam interruption at the 11th or higher beam channel as a human entry and stop the machinery.

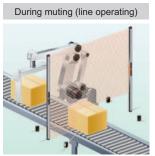



Fixed blanking function: Choose active beam channels


The **SFB-HC** handy-controller provides a fixed blanking function that prevents control output (OSSD) from turning off even if certain beam channels are interrupted. This function is convenient for applications where an obstacle always interrupts certain beam channels. Additionally, it is safe since control output (OSSD) is forcibly turned off in the event the obstruction moves outside the detection area.

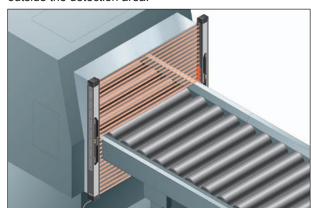

Floating blanking function: Disable unspecified beams

The floating blanking function allows to disable up to three unspecified beam channels. Control output (OSSD) will not turn off as long as the number of interrupted beam channels is less than the set number of beam channels. This function is convenient when an obstruction moves inside the detection area during setup changes or when loading materials within the detection area of light curtain.

* The min. sensing object will change when the floating blanking function is used.

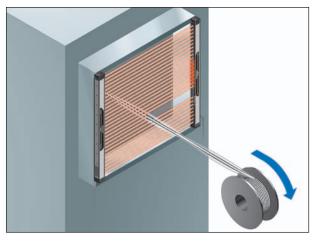

Use output and indicators to achieve preventive maintenance when the incident light intensity gets unstable

By setting the auxiliary output switching function to off or on when light reception becomes unstable, the light curtain provides notification in the event of a reduction in the incident light intensity due to beam misalignment or dirt via auxiliary output (non-safety output) in addition to the incident light intensity indicator.

			Auxiliary output		
Incide	ent li	ght intensity indicator	Set to off for unstable incident light (Note 3)	Set to on for unstable incident light (Note 3)	
⊕ ± 0 130 %-		Under stable light received condition: Green (Incident light intensity:) 130 % or greater	ON	OFF	
ent ligh	100 %	Under unstable light received condition: Orange (Incident light intensity: \(100 \% \) to less than 130 \%)	OFF	ON	
inte inte		When light is interrupted (Note 2): Off		_	

- Notes:1) An incident light intensity value of 100 % refers to the threshold value at which control outputs (OSSD1, OSSD2) change from off to on.
 - Interruption of the light refers to the presence of an object interrupts beam in the detection area.
 - This setting is not available when using muting control for individual beams, fixed blanking, or floating blanking.

Extensive array of other functions

PNP / NPN polarity support

Since a single model number can be switched between PNP and NPN input, fewer model numbers need to be registered.

External device monitor function

External devices (such as safety relays, etc.) can be directly connected to the handy-controller without any dedicated unit, simplifying installation, reducing costs, and helping to avoid various problems.


Extraneous light check & avoid (ELCA) function

The ELCA function reduces interference without an interference prevention line.

Beam-axis alignment indicator

Beam-axis alignment indicators are indicated in 4 blocks, allowing to see at a glance where light is being received.

PRODUCT CONFIGURATION

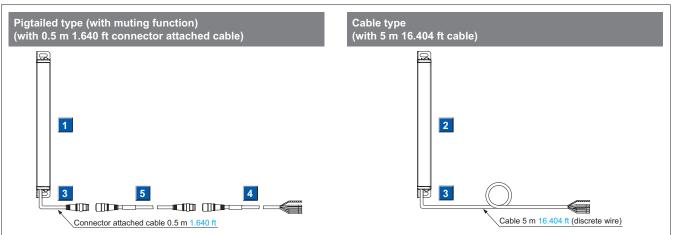


ORDER GUIDE

1 2 Light curtains

			Model No. (Note 2)	Number	Protective height	
Туре	Appearance	Operating range (Note 1)	Pigtailed type (with muting function)	2 Cable type	of beam channels		
			SF4B-H12CA-J05	SF4B-H12C	12	263.4 mm 10.370 in	
			SF4B-H16CA-J05	SF4B-H16C	16	343.4 mm 13.520 in	
			SF4B-H20CA-J05	SF4B-H20C	20	423.4 mm 16.669 in	
<u>4</u> i			SF4B-H24CA-J05	SF4B-H24C	24	503.4 mm 19.819 in	
ø0.984 in oitch)	Beam 22.2 mm		SF4B-H28CA-J05	SF4B-H28C	28	583.4 mm 22.969 in	
mm g am pit	channel No. 0.874 in		SF4B-H32CA-J05	SF4B-H32C	32	663.4 mm 26.118 in	
sing object ø25 mm ø0.99 mm 0.787 in beam pitch)	Protective height		SF4B-H36CA-J05	SF4B-H36C	36	743.4 mm 29.268 in	
oct ø		0.3 to 7 m	SF4B-H40CA-J05	SF4B-H40C	40	823.4 mm 32.417 in	
object 0.787 ii	0.787 in	0.984 to 22.966 ft	SF4B-H48CA-J05	SF4B-H48C	48	983.4 mm 38.717 in	
sensing (20 mm			SF4B-H56CA-J05	SF4B-H56C	56	1,143.4 mm 45.016 in	
sen (20	22.2 mm 0.874 in		SF4B-H64CA-J05	SF4B-H64C	64	1,303.4 mm 51.315 in	
Min.	22.2 mm 0.874 in		SF4B-H72CA-J05	SF4B-H72C	72	1,463.4 mm 57.614 in	
			SF4B-H80CA-J05	SF4B-H80C	80	1,623.4 mm 63.913 in	
			SF4B-H88CA-J05	SF4B-H88C	88	1,783.4 mm 70.212 in	
			SF4B-H96CA-J05	SF4B-H96C	96	1,943.4 mm 76.512 in	
			SF4B-A8CA-J05	SF4B-A8C	8	343.4 mm 13.520 in	
2 in			SF4B-A12CA-J05	SF4B-A12C	12	503.4 mm 19.819 in	
			SF4B-A16CA-J05	SF4B-A16C	16	663.4 mm 26.118 in	
object ø45 mm ø1.7 1.575 in beam pitch)	Beam 42.2 mm 1.661 in		SF4B-A20CA-J05	SF4B-A20C	20	823.4 mm 32.417 in	
ø45 m			SF4B-A24CA-J05	SF4B-A24C	24	983.4 mm 38.717 in	
Sct & Fig.	height 1.575 in		SF4B-A28CA-J05	SF4B-A28C	28	1,143.4 mm 45.016 in	
ensing object ø45 mm ø1. 10 mm 1.575 in beam pitch	1	0.3 to 7 m 0.984 to 22.966 ft	SF4B-A32CA-J05	SF4B-A32C	32	1,303.4 mm 51.315 in	
sensing (40 mm	① · · · · · · · · · · · · · · · · · · ·	0.004 to 22.000 it	SF4B-A36CA-J05	SF4B-A36C	36	1,463.4 mm 57.614 in	
, & 2			SF4B-A40CA-J05	SF4B-A40C	40	1,623.4 mm 63.913 in	
M i.	42.2 mm 1.661 in		SF4B-A44CA-J05	SF4B-A44C	44	1,783.4 mm 70.212 in	
			SF4B-A48CA-J05	SF4B-A48C	48	1,943.4 mm 76.512 in	

 Notes: 1) The operating range is the distance possible to set between the emitter and the receiver.



2) The model No. with "E" shown on the label affixed to the product is the emitter, "D" shown on the label is the receiver.

FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS

AREA SENSORS

PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

WIRE-SAVING SYSTEMS MEASURE-MENT SENSORS

DEVICES

LASER MARKERS PLC

HUMAN MACHINE INTERFACES

FA COMPONENTS

MACHINE VISION SYSTEMS UV CURING SYSTEMS

Safety Componen Control Units

SF4B-C SF4C SF2C

SF4B

SF2B

BSF4-AH80

LASER SENSORS

PHOTO-ELECTRIC SENSORS MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS LIGHT

PRESSURE / FLOW SENSORS INDUCTIVE PROXIMITY

PARTICULAR USE SENSORS SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS MEASURE-MENT

STATIC ELECTRICITY PREVENTION DEVICES

LASER MARKERS

HUMAN MACHINE

PLC

ENERGY CONSUMPTION VISUALIZATION COMPONENTS

COMPONENTS

MACHINE VISION SYSTEMS

CURING SYSTEMS

Selection Guide Light Curtains Safety Components Optical Touch Switch Control Units Definition of Sensing Heights

SF4B-C SF4C SF2C SF4B SF2B

ORDER GUIDE


Mounting brackets Mounting bracket is not supplied with the light curtain. Be sure to order it separately.

Designation	Appearance	Model No.	Description
Standard mounting bracket		MS-SF4BC-1	Allows the light curtain to be mounted on the rear or side of the target equipment. Designed for use with one M5 hexagon-socket head bolt. (4 pcs. per set for the emitter and receiver)
Rear utility mounting bracket		MS-SF4BC-2	Allows the light curtain to be mounted on the rear of the target equipment. Allows beam adjustment. Designed for use with one M5 hexagon-socket head bolt. For space-saving mounting, use one M5 hexagon head bolt. (4 pcs. per set for the emitter and receiver)
Side utility mounting bracket		MS-SF4BC-3	Allows the light curtain to be mounted on the side of the target equipment. Allows beam adjustment. Designed for use with one M5 hexagon-socket head bolt. For space-saving mounting, use one M5 hexagon head bolt. (4 pcs. per set for the emitter and receiver)
Intermediate supporting bracket for utility mounting bracket (Note 1)		MS-SF4BC-4	Supports the middle of the light curtain when installing it with utility mounting brackets. Allows the light curtain to be mounted on the rear or side of the target equipment. Allows beam adjustment. Designed for use with one M5 hexagon head bolt. (2 pcs. each per set for rear mounting and side mounting)
Intermediate supporting bracket for standard mounting bracket (Note)		MS-SF4BC-5	Supports the middle of the light curtain when installing it with standard mounting brackets. Allows the light curtain to be mounted on the rear or side of the target equipment. Designed for use with two M3 countersunk screws. (2 pcs. each per set for rear mounting and side mounting)
Side mounting bracket		MS-SF4BC-6	Allows beam axis alignment and the light curtain to be mounted on the device in confined spaces. Designed for use with one M5 hexagon-socket head bolt. (4 pcs. per set for the emitter and receiver)
Intermediate supporting bracket for use with side mounting bracket (Note)		MS-SF4BC-7	Supports the middle of the light curtain when installing it with side mounting brackets. Allows beam axis alignment and the light curtain to be mounted on the device in confined spaces. Designed for use with one M5 hexagon-socket head bolt. (2 pces. per set)

Note: The numbers of sets required by SF4B-H□C(A-J05)(40 or more beam axes) and SF4B-A□C(A-J05) (20 or more beam axes) are as follows: SF4B-H40C(A-J05), SF4B-H48C(A-J05), SF4B-H56C(A-J05), SF4B-A20C(A-J05), SF4B-A24C(A-J05), SF4B-A28C(A-J05): 1 set SF4B-H64C(A-J05), SF4B-H72C(A-J05), SF4B-H80C(A-J05), SF4B-H88C(A-J05), SF4B-H96C(A-J05), SF4B-A32C(A-J05), SF4B-A36C(A-J05), SF4B-A36C(A-J0

Standard mounting bracket and intermediate supporting bracket for standard mounting bracket

In case of side In case of side mounting

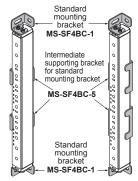

• MS-SF4BC-1


Four brackets (two each R and L type) per set Eight M3 (length: 5 mm 0.197 in) hexagon-socket head bolts and four M5 flat washers are attached.

• MS-SF4BC-5

Two pcs. for rear mounting, two pcs. for side mounting

Rear utility mounting bracket and intermediate supporting bracket for utility mounting bracket

SF4B-A40C(A-J05), SF4B-A44C(A-J05), SF4B-A48C(A-J05): 2 sets

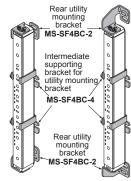

•MS-SF4BC-2

Four brackets (two each R and L type) per set [Eight M3 (length: 6 mm 0.236 in) hexagon-socket head bolts and four M5 flat washers are attached.


•MS-SF4BC-4

Two brackets per set

(M5 flat washers, two pcs. assembled M3 (length: 6 mm 0.236 in) hexagon-socket head bolts for rear mounting, two pcs. attachments for side mounting

Side utility mounting bracket and intermediate supporting bracket for utility mounting bracket

\langle Space-saving \ \langle Standard \ \langle mounting (Note) \rangle \ \langle mounting \ \langle \ \langle mounting \ \langle \ \langle mounting \ \langle \langle \langle \ \langle \ \langle \langle \langle \langle \lang

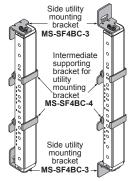

•MS-SF4BC-3

Four brackets (two each R and L type) per set Eight M3 (length: 6 mm 0.236 in) hexagon-socket head bolts and four M5 flat washers are attached.


•MS-SF4BC-4

Two brackets per set

M5 flat washers, two pcs. assembled M3 (length: 6 mm 0.236 in) hexagon-socket head bolts for rear mounting, two pcs. attachments for side mounting

Side mounting bracket and intermediate supporting bracket for use with side mounting bracket

Space-saving Standard mounting

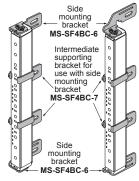

• MS-SF4BC-6

Four brackets (two each R and L type) per set [Eight M3 (length: 6 mm 0.236 in) hexagon-socket head bolts and four M5 flat washers are attached.]

•MS-SF4BC-7

Two brackets per set

Two pcs. M5 flat washers, two pcs. assembled M3 (length: 6 mm 0.236 in) hexagon-socket head bolts for side mounting

Note: For space-saving mounting, use an M5 hexagon head bolt.

ORDER GUIDE

4 5 Mating cables

Туре			Appearance	Model No.		Description
	With connector on			SFB-CC3-MU	Length: 3 m 9.843 ft Net weight: 430 g approx. (2 cables)	Cable with connector on one end for pigtailed type (with muting function)
				SFB-CC7-MU	Length: 7 m 22.966 ft Net weight: 1,000 g approx. (2 cables)	Two cables per set for emitter and receiver Cable color: Gray for emitter, Gray with black line for receiver
les				SFB-CC10-MU	Length: 10 m 32.808 ft Net weight: 1,300 g approx. (2 cables)	Connector color: Gray for emitter, Black for receiver Min. bending radius: R6 mm R0.236 in
Mating cables	h ends	receiver For emitter		SFB-CCJ3E-MU	Length: 3 m 9.843 ft Net weight: 190 g approx. (1 cable)	
Mai	Matir			SFB-CCJ10E-MU	Length: 10 m 32.808 ft Net weight: 660 g approx. (1 cable)	Cable with connectors on both ends for pigtailed type (with muting function) Cable color: Gray for emitter,
				SFB-CCJ3D-MU	Length: 3 m 9.843 ft Net weight: 210 g approx. (1 cable)	Gray with black line for receiver Connector color: Gray for emitter, Black for receiver Min. bending radius: R6 mm R0.236 in
	With con			SFB-CCJ10D-MU	Length: 10 m 32.808 ft Net weight: 680 g approx. (1 cable)	70.20

Spare parts (Accessories for light curtain)

Designation	Model No.	Description
		Min. sensing object for regular checking (ø25 mm ø0.984 in), for hand protection type (min. sensing object ø25 mm ø0.984 in)


OPTIONS


Control units

Designation	Appearance	Model No.	Description
Slim type control unit		SF-C13	Use a discrete wire cable to connect to the light curtain. Muting function can be used. Compatible with up to Control Category 4. When connecting pigtailed type (with muting function) SF4B-□CA-J05, be sure to order a mating cable separately. • Mating cable: SFB-CC□-MU • Extension cable: SFB-CCJ□-MU

Handy-controller

-		
Designation	Appearance	Model No.
Handy- controller	* 2 adapter cables included	SFB-HC
Cable set for cable type connection	0000	SFC-WNC1

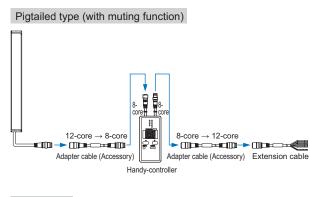

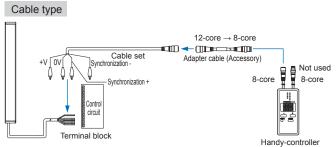

FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS MICRO PHOTO-ELECTRIC

AREA SENSORS

LIGHT CURTAINS / SAFETY COMPONENTS

PRESSURE / FLOW SENSORS INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS STATIC

STATIC ELECTRICITY PREVENTION DEVICES

LASER MARKERS

PLC

MACHINE INTERFACES

ENERGY
CONSUMPTION
VISUALIZATION
COMPONENTS

FA COMPONENTS

> MACHINE VISION SYSTEMS

> > URING YSTEMS

Selection
Guide
Light
Curtains
Safety
Components
Optical Touch
Switch
Control
Units
Definition of

SF4B-C SF4C SF2C

SF4B SF2B

BSF4-AH80

LASER SENSORS

PHOTO-ELECTRIC SENSORS

AREA SENSORS PRESSURE FLOW SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS SIMPLE WIRE-SAVING UNITS

MEASURE-MENT SENSORS

LASER MARKERS

PLC HUMAN MACHINE INTERFACES

FA COMPONENTS MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Safety Optical Touch Switch Control Units Definition of Sensing Heights

SF4B-C SF4C SF2C SF4B SF2B BSF4-AH80

OPTIONS

Metal protection case

Applicable beam characteristics Hand protection type	Designation annels Arm / Foot protection type	Appearance	Metal protection case (2 pcs. per set) (Note) Model No.
12			MS-SF4BCH-12
16	8		MS-SF4BCH-16
20		60	MS-SF4BCH-20
24	12		MS-SF4BCH-24
28			MS-SF4BCH-28
32	16		MS-SF4BCH-32
36			MS-SF4BCH-36
40	20		MS-SF4BCH-40
48	24		MS-SF4BCH-48
56	28		MS-SF4BCH-56
64	32	Ψ	MS-SF4BCH-64
72	36		MS-SF4BCH-72
80	40		MS-SF4BCH-80
88	44		MS-SF4BCH-88
96	48		MS-SF4BCH-96


Note: In the case of using a metal protection case MS-SF4BCH-□(optional), make sure to assemble it with a standard mounting bracket MS-SF4BC-1 (optional).

Others

	,	
Designation	Model No.	Description
Test rod ø45	SF4B-TR45	Min. sensing object for regular checking (ø45 mm ø1.772 in), for arm / foot protection type (min. sensing object ø45 mm ø1.772 in)
		With the auxiliary output of the light curtain, the operation is easily observable from various directions.
		Specifications
Large display unit for light curtain	SF-IND-2	Supply voltage: 24 V DC ±15 % Current consumption: 12 mA or less Indicators: Orange LED (8 pcs. used) [Light up when external contact is ON] Ambient temperature: -10 to +55 °C +14 to +131 °F (No dew condensation or icing allowed) Material: POM (Enclosure) Polycarbonate (Cover) Cold rolled carbon steel (SPCC) (Bracket) Cable: 0.3 mm² 2-core cabtyre cable, 3 m 9.843 ft long Weight: 70 g approx. (including bracket)

Large display unit for light curtain

 • SF-IND-2



* Cannot be attached together with a mounting bracket to the light curtain using a single bolt.

Recommended safety relay

Safety relay Panasonic Corporation SF series





Note: Contact Panasonic Corporation for details on the recommended products.

Туре	With LED	indicator		
Model No.	SFS3-L-DC24V	SFS4-L-DC24V		
Item Part No.	AG1S132	AG1S142		
Contact arrangement	3a1b	4a2b		
Rated nominal switching capacity	6 A / 250 V AC, 6 A / 30 V DC			
Min. switching capacity	1 mA / 5 V DC			
Coil rating	15 mA / 24 V DC	20.8 mA / 24 V DC		
Rated power consumption	360 mW	500 mW		
Operation time	20 ms or less			
Release time	20 ms or less			
Ambient temperature	-40 to +85 °C -40 to +185 °F (Humidity: 5 to 85 % RH)			
Applicable standards	UL, C-UL, TÜV,	UL, C-UL, TÜV, Korea's S-mark		

SPECIFICATIONS

Light curtain individual specifications

SF4B-H□C(A-J05)

		Туре		Min. sensing object ø25 mm ø0.984 in (20 mm 0.787 in beam pitch)							
	Model No.	Pigtailed type	SF4B-H12CA-J05	SF4B-H16CA-J05	SF4B-H20CA-J05	SF4B-H24CA-J05	SF4B-H28CA-J05	SF4B-H32CA-J05	SF4B-H36CA-J05		
Item	\ ge	Cable type	SF4B-H12C	SF4B-H16C	SF4B-H20C	SF4B-H24C	SF4B-H28C	SF4B-H32C	SF4B-H36C		
Num	ber of b	beam channels	12	16	20	24	28	32	36		
Prote	Protective height		263.4 mm 10.37 in	343.4 mm 13.52 in	423.4 mm 16.669 in	503.4 mm 19.819 in	583.4 mm 22.969 in	663.4 mm 26.118 in	743.4 mm 29.268 in		
Current consumption	aile	type When large multi-purpose indicator turns OFF	Emitter: 65 mA	or less, Receiver:	75 mA or less	Emitter: 70 mA or less Receiver: 85 mA or less		Emitter: 75 mA or less Receiver: 95 mA or less			
Current		When large multi-purpose indicator lights up	Emitter: 75 mA or less, Receiver: 85 mA or less			Emitter: 80 mA or less Receiver: 95 mA or less		Emitter: 85 mA or less Receiver: 105 mA or less			
PFH	d*		1.9 × 10 ⁻⁹	2.1 × 10 ⁻⁹	2.4 × 10 ⁻⁹	2.6 × 10 ⁻⁹	2.8 × 10 ⁻⁹	3.0 × 10 ⁻⁹	3.3 × 10 ⁻⁹		
MTT	Fd*			100 years or							
Net	weight	Pigtailed type	Approx. 360 g	Approx. 430 g	Approx.520 g	Approx. 590 g	Approx. 680 g	Approx. 750 g	Approx. 840 g		
(Total of en	nitter and receiver	Cable type	Approx. 700 g	Approx. 770 g	Approx. 860 g	Approx. 930 g	Approx. 1,000 g	Approx. 1,100 g	Approx. 1,200 g		

		Туре		Min. sensing object ø25 mm ø0.984 in (20 mm 0.787 in beam pitch)							
	Model No.	Pigtailed type	SF4B-H40CA-J05	SF4B-H48CA-J05	SF4B-H56CA-J05	SF4B-H64CA-J05	SF4B-H72CA-J05	SF4B-H80CA-J05	SF4B-H88CA-J05		
Item	\ §	Cable type	SF4B-H40C	SF4B-H48C	SF4B-H56C	SF4B-H64C	SF4B-H72C	SF4B-H80C	SF4B-H88C		
Num	ber of b	peam channels	40	48	56	64	72	80	88		
Prote	Protective height		823.4 mm 32.417 in	983.4 mm 38.717 in	1,143.4 mm 45.016 in	1,303.4 mm 51.315 in	1,463.4 mm 57.614 in	1,623.4 mm 63.913 in	1,783.4 mm 70.212 in		
Current consumption		type When large multi-purpose indicator turns OFF	Emitter: 80 mA or less Receiver: 100 mA or less		Emitter: 85 mA or less Receiver: 120 mA or less		Emitter: 95 mA or less Receiver: 130 mA or less		Emitter: 100 mA or less Receiver: 140 mA or less		
Current	Pigta type	When large multi-purpose indicator lights up	Emitter: 90 mA or less Receiver: 110 mA or less					5 mA or less 40 mA or less	Emitter: 110 mA or less Receiver: 155 mA or less		
PFH	d*		3.5 × 10 ⁻⁹	3.9 × 10 ⁻⁹	4.4 × 10 ⁻⁹	4.8 × 10 ⁻⁹	5.3 × 10 ⁻⁹	5.7 × 10 ⁻⁹	6.2 × 10 ⁻⁹		
MTTFd*					100 years or more						
Net v	weight	Pigtailed type	Approx. 910 g	Approx. 1,100 g	Approx. 1,300 g	Approx. 1,400 g	Approx. 1,600 g	Approx. 1,700 g	Approx. 1,800 g		
(Total of em	nitter and receiver	Cable type	Approx. 1,300 g	Approx. 1,400 g	Approx. 1,600 g	Approx. 1,700 g	Approx. 2,000 g	Approx. 2,000 g	Approx. 2,100 g		

^{*} PFH_d: Probability of dangerous failure per hour, MTTFd: Mean time to dangerous failure.

$SF4B-A\Box C(A-J05)$

Туре		Туре	Min. sensing object ø25 mm ø0.984 in (20 mm 0.787 in beam pitch)	Min. sensing object ø45 mm ø1.772 in (40 mm 1.575 in beam pitch)			
\	\ _2	Pigtailed type	SF4B-H96CA-J05	SF4B-A8CA-J05	SF4B-A12CA-J05	SF4B-A16CA-J05	SF4B-A20CA-J05
Item	Model No	Cable type	SF4B-H96C	SF4B-A8C	SF4B-A12C	SF4B-A16C	SF4B-A20C
Num	nber of	peam channels	96	8	12	16	20
Protective height		eight	1,943.4 mm 76.512 in	343.4 mm 13.52 in	503.4 mm 19.819 in	663.4 mm 26.118 in	823.4 mm 32.417 in
: consumption	Cable type When large multi-purpose indicator turns OFF When large multi-purpose indicator lights up		Emitter: 105 mA or less Receiver: 145 mA or less	Emitter: 60 Receiver: 7	mA or less 0 mA or less	Emitter: 65 Receiver: 7	mA or less 5 mA or less
Current			Emitter: 115 mA or less Receiver: 155 mA or less	Emitter: 70 Receiver: 8	mA or less 0 mA or less	Emitter: 75 Receiver: 8	mA or less 5 mA or less
PFHd*			6.6 × 10 ⁻⁹	1.7 × 10 ⁻⁹	1.9 × 10 ⁻⁹	2.2 × 10 ⁻⁹	2.4 × 10 ⁻⁹
MTTFd*			100 years or more		100 year	s or more	•
Net	weight	Pigtailed type	Approx. 1,900 g	Approx. 430 g	Approx. 590 g	Approx. 750 g	Approx. 910 g
(Total of emitter and receiver)		Cable type	Approx. 2,200 g	Approx. 770 g	Approx. 930 g	Approx. 1,100 g	Approx. 1,300 g

		Туре	/pe Min. sensing object ø45 mm ø1.772 in (40 mm 1.575 in beam pitch)						
	<u>.</u> _2	Pigtailed type	SF4B-A24CA-J05	SF4B-A28CA-J05	SF4B-A32CA-J05	SF4B-A36CA-J05	SF4B-A40CA-J05	SF4B-A44CA-J05	SF4B-A48CA-J05
Item	Model No.	Cable type	SF4B-A24C	SF4B-A28C	SF4B-A32C	SF4B-A36C	SF4B-A40C	SF4B-A44C	SF4B-A48C
Num	ber of b	beam channels	24	28	32	36	40	44	48
Prote	ective h	neight	983.4 mm 38.717 in	1,143.4 mm 45.016 in	1,303.4 mm 51.315 in	1,463.4 mm 57.614 in	1,623.4 mm 63.913 in	1,783.4 mm 70.212 in	1,943.4 mm 76.512 in
indicator turns OFF		When large multi-purpose	Emitter: 70 Receiver: 8	mA or less 5 mA or less	Emitter: 75 mA or less Receiver: 95 mA or less		Emitter: 80 mA or less Receiver: 100 mA or less		
		When large multi-purpose indicator lights up	Emitter: 80 Receiver: 9	mA or less 5 mA or less	Emitter: 85 mA or less Receiver: 105 mA or less			Emitter: 90 Receiver: 1	mA or less 10 mA or less
PFH	d*		2.7 × 10 ⁻⁹	2.9 × 10 ⁻⁹	3.2 × 10 ⁻⁹	3.4 × 10 ⁻⁹	3.7 × 10 ⁻⁹	3.9 × 10 ⁻⁹	4.2 × 10 ⁻⁹
MTTFd*					100 years or more				
Net	weight	Pigtailed type	Approx. 1,100 g	Approx. 1,300 g	Approx. 1,400 g	Approx. 1,600 g	Approx. 1,700 g	Approx. 1,800 g	Approx. 1,900 g
(Total of emitter and receiver)		Cable type	Approx. 1,400 g	Approx. 1,600 g	Approx. 1,700 g	Approx. 2,000 g	Approx. 2,000 g	Approx. 2,100 g	Approx. 2,200 g

^{*} PFHd: Probability of dangerous failure per hour. MTTFd: Mean time to dangerous failure.

FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS MICRO PHOTO-ELECTRIC

AREA SENSORS

LIGHT CURTAINS / SAFETY COMPONENTS PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS PARTICULAR USE SENSORS

SENSORS SENSOR OPTIONS

SIMPLE WIRE-SAVING

WIRE-SAVING SYSTEMS MEASURE-MENT SENSORS

SENSORS STATIC ELECTRICITY PREVENTION DEVICES

LASER MARKERS PLC

HUMAN MACHINE INTERFACES ENERGY

COMPONENTS

FA
COMPONENTS

MACHINE VISION SYSTEMS

/ JRING /STEMS

Selection Guide
Light Curtains
Safety
Components
Optical Touch
Switch
Control
Units

SF4B-C
SF4C
SF2C
SF4B
SF2B
BSF4-AH80

LASER SENSORS PHOTO-ELECTRIC SENSORS

AREA SENSORS

PRESSURE FLOW SENSORS PARTICULAR

SENSOR OPTIONS SIMPLE WIRE-SAVING UNITS

SENSORS

MEASURE-MENT SENSORS

LASER MARKERS

PLC HUMAN

COMPONENTS

MACHINE VISION SYSTEMS CURING SYSTEMS

Definition of Sensing Heights

SF4B-C SF4C SF2C SF4B SF2B

BSF4-AH80

SPECIFICATIONS

Light curtain common specifications

Light cur	tain commor	n specifications					
			h muting function)	Cable type			
Туре		Min. sensing object ø25 mm ø0.984 in	Min. sensing object ø45 mm ø1.772 in	Min. sensing object ø25 mm ø0.984 in	Min. sensing object ø45 mm ø1.772 in		
\		(20 mm 0.787 in beam pitch)	(40 mm 1.575 in beam pitch)	(20 mm 0.787 in beam pitch)	(40 mm 1.575 in beam pitch)		
Item	Model No.	SF4B-H□CA-J05	SF4B-A□CA-J05	SF4B-H□C	SF4B-A□C		
g Internati	ional standard		96-1/2 (Type 4), ISO 13849-1 (C				
Japan			B 9704-1/2 (Type 4), JIS B 970				
Applicable standards Applicabl	(EU) (Note 2)	EN 55011, EN	Type 4), EN ISO 13849-1 (Categ I 50178, EN 61000-6-2				
North A	merica (Note 3) orea (S-Mark)		/2 (Type 4), ANSI/UL 508, CAN/ OSHA 1910.217(C), ANSI B11.1 S1-G-35-2005		SA C22.2 NO. 14,		
Operating ra				84 to 22.966 ft			
Beam pitch	ingo (i toto i)	20 mm 0.787 in	40 mm 1.575 in	20 mm 0.787 in	40 mm 1.575 in		
•	object (Note 5)	ø25 mm ø0.984 in opaque object		ø25 mm ø0.984 in opaque object			
Effective ape		· · · · · · ·	n operating range exceeding 3 m				
		±2.5 Of less [lot at			90-27 OL 01490-2)]		
Supply voltage	ge	DND as as as liested transistant		ple P-P 10 % or less			
Control outputs (OSSD 1, OSSD 2)		PNP open-collector transistor / NPN open-collector transistor (switching method) <for npn="" output=""> • Maximum source current: 200 mA • Applied voltage: Same as supply voltage (between the control output and +V) • Residual voltage: 2.5 V or less (source current 200 mA, when using 20 m 65.617 ft length cable) • Leakage current: 0.1 mA or less (Including power supply OFF condition) • Maximum load capacity: 0.22 μF (No load to maximum output current) • Load wiring resistance: 3 Ω or less • Load wiring resistance: 3 Ω or less</for>					
	Operation mode	ON when all beam channels are received, OFF when one or more beam channels are interrupted (OFF also in case of any malfunction in the light curtain or the synchronization signal) (Note 6, 7)					
	Protection circuit	Incorporated					
Response tir	ne		OFF response: 14 ms or les: / NPN open-collector transistor (s, ON response: 80 to 90 ms			
Auxiliary output (Non-safety output)		<for output="" pnp=""> Maximum source current: 60 mA Applied voltage: Same as supply voltage (between the auxiliary output and +V) Residual voltage: 2.5 V or less (source current 60 mA, when using 20 m 65.617 ft length cable) <for npn="" output<="" p=""> Maximum sink current: 60 mA Applied voltage: Same as supply voltage (between the auxiliary output and 0 V) Residual voltage: 2.5 V or less (sink current 60 mA, when using 20 m 65.617 ft length cable) </for></for>					
	Operation mode	OFF when control outputs are ON, ON w	hen control outputs are OFF [Factory setti	0 0	the SFB-HC (optional) handy-controller.]		
	Protection circuit		Incorp	orated			
Muting auxili		NPN open-collector transistor • Maximum sink current: 100 mA • Applied voltage: Same as supply voltage (between the muting auxiliary output and 0 V) • Residual voltage: 2.5 V or less (sink current 100 mA, when using 20 m 65.617 ft length cable)					
	Operation mode	When muting au	xiliary output: ON				
ELCA function	Protection circuit	Incorp		al interference automatically)			
Emission hal				orated			
Interlock fund				set / Auto reset (Note 8)]			
External devic	e monitoring function		Incorp	orated			
Override fun		-	orated				
Muting functi			orated				
Large multi-pur	pose indicator function		orated				
Optional functions (Note 9)		Muting setting changing, override setting changing, fixed blanking, floating blanking, light emitting amount control, auxiliary output switching, protecting, interlock setting changing, external relay monitor setting changing			ecting, interlock setting		
Pollution degree		2,000 m 6,561.68 ft or less (Note 10)					
Operating all	of protection			(IEC)			
Ambient	t temperature	-10 to +55 °C +14 to	+131 °F (No dew condensation of		+60 °C -3 to +140 °F		
Ambient	t humidity			rage: 30 to 85 % RH	.,		
Ambient	tilluminance			less at the light-receiving face			
Insulatio	c strength voltage / n resistance	megger between all supply	tween all supply terminals connected together an	d enclosure			
∑ Vibration	n resistance / esistance		mm 0.030 in amplitude in X, Y and directions for three times each	and ∠ directions for two hours ea	cn / 300 m/s ² acceleration		
Onookii		· · · · · · · · · · · · · · · · · · ·	ecified precisely, the condition	s used were an ambient tempe	erature of ±20 °C ±68 °E		

- Notes: 1) Where measurement conditions have not been specified precisely, the conditions used were an ambient temperature of +20 °C +68 °F.

 - Regarding EU Machinery Directive, a Notified Body, TÜV SÜD, has certified with the type examination certificate.

 The product has been safety-certified in accordance with UL, ANSI, CSA, and other standards by TÜV SÜD, a nationally recognized safety laboratory (NRTL) that has been approved by the Occupational Safety and Health Administration (OSHA) as defined by 29 CFR 1910.7
 - The operating range is the possible setting distance between the emitter and the receiver.
 - In case the blanking function is valid, the operation mode is changed.
 - During muting, control output will not turn off even if the beams are interrupted. 6)
 - When the blanking function is enabled, the operating mode will change.
 - The manual reset and automatic reset are possible to be switched depending on the wiring status.
 - In case of using optional function, the handy-controller SFB-HC (optional) is required.
 - 10) Do not use or store the device in an environment where the air pressure is higher than the atmospheric pressure at an altitude of 0 meters.

SPECIFICATIONS

Light curtain common specifications

		Pigtailed type (with muting function)		Cable type		
	Type	Min. sensing object	Min. sensing object	Min. sensing object	Min. sensing object	
	. 7	ø25 mm ø0.984 in	ø45 mm ø1.772 in	ø25 mm ø0.984 in	ø45 mm ø1.772 in	
		(20 mm 0.787 in beam pitch)	(40 mm 1.575 in beam pitch)	(20 mm 0.787 in beam pitch)	(40 mm 1.575 in beam pitch)	
Item	Model No.	SF4B-H□CA-J05	SF4B-A□CA-J05	SF4B-H□C	SF4B-A□C	
Emitting element		Infrared LED (Peak emission wavelength: 850 nm 0.033 mil)				
Material		Enclosure: Polycarbonate				
Cable		0.15 mm² (power line: 0.2 mm cable with connector, 0.5 m 1.	n²) 12-core heat-resistant PVC 640 ft long	0.15 mm² (power line: 0.2 mm²) 8-core heat-resistant PVC cable, 5 m 16.404 ft long		
Cable extension		Extension up to total 50 m 164.042 ft is possible for both emitter and receiver optional mating cables		Extension up to total 50 m 164 or more, cable (Note)	4.042 ft is possible for 0.2 mm ²	
Accessories		SF4B-TR25 (Test rod): 1 pc.		SF4B-TR25 (Test rod): 1 pc.		

Note: When the synchronization + wire (orange) and synchronization - wire (orange / black) is extended with a cable other than exclusive cable, use a 0.2 mm² or more shielded twisted pair cable.

Control unit


Item	Model No.	SF-C13				
Connectable light	curtains	Light curtains manufactured by Panasonic Industrial Devices SUNX				
Applicable standards		EN 61496-1 (Type 4), EN 55011, EN ISO 13849-1 (Category 4, PLe), IEC 61496-1 (Type 4), ISO 13849-1 (Category 4, PLe), JIS B 9704-1 (Type 4), JIS B 9705-1 (Category 4), ANSI/UL 61496-1 (Type 4), UL 1998 (Class 2)				
Control category		ISO 13849-1 (EN ISO 13849-1, JIS B 9705-1) compliance up to Category 4, PLe standards				
Supply voltage		24 V DC ±10 % Ripple P-P 10 % or less				
Current consumpti	ion	100 mA or less (excluding light curtain)				
Fuse (rating)		Built-in electronic fuse, Triggering current: 0.5 A or more, Reset after power down				
Enabling path		NO contact × 3 (13-14, 23-24, 33-34)				
Utilization ca	tegory	AC-15, DC-13 (IEC 60947-5-1)				
Rated operation Rated operation		30 V DC / 4 A, 230 V AC / 4 A, resistive load (For inductive load, during contact protection) Min. applicable load: 10 mA (at 24 V DC) (Note 2)				
Contact resis	stance	100 mΩ or less (initial value)				
Contact protect	tion fuse rating	4 A (slow blow)				
Pick-up delay (Auto rese	et / Manual reset)	80 ms or less / 90 ms or less				
Response time		10 ms or less				
Auxiliary output		Safety relay contact (NC contact) × 1 (41-42) (Related to enabling path)				
Rated operation	voltage / current	24 V DC / 2 A, Min. applicable load: 10 mA (at 24 V DC)				
Contact protect	tion fuse rating	2 A (slow blow)				
Semiconductor au (AUX)	xiliary output	PNP open-collector transistor • Maximum source current: 60 mA				
Output opera	ation	ON when the light curtain is interrupted				
Excess voltage ca	tegory	II				
Polarity selection function		Incorporated (Cable connection allows selection of plus / minus ground) Minus ground: Correspond to PNP output light curtain Plus ground: Correspond to NPN output light curtain				
Pollution degree		2				
Protection		Enclosure: IP40, Terminal: IP20				
Protection Ambient tem Ambient hum Vibration res	perature	-10 to +55 °C +14 to +131 °F (No dew condensation or icing allowed), Storage: -25 to +70 °C -13 to +158 °F				
Ambient hum	nidity	30 to 85 % RH, Storage: 30 to 95 % RH				
Vibration res	istance	Resistance / malfunction 10 to 55 Hz frequency, 0.35 mm 0.014 in amplitude in X, Y, and Z directions for twenty times each				
Enclosure materia	I	ABS				
Veight		Net weight: 200 g approx.				

Notes: 1) Where measurement conditions have not been specified precisely, the conditions used were an ambient temperature of +20 $^{\circ}$ C +68 $^{\circ}$ F.

- 2) If several **SF-C13** units are being used in line together, leave a space of 5 mm 0.197 in or more between each unit.

 If the units are touching each other, reduce the rated operating current for safety output in accord
 - If the units are touching each other, reduce the rated operating current for safety output in accordance with the ambient operating temperature as shown in the graphs at right.
- 3) Refer to our website for details of specifications.

Dilating when SF-C13 units \ are mounted close together

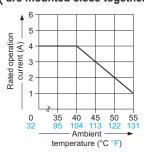

FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS MICRO PHOTO-ELECTRIC

AREA SENSORS

UGHT CURTAINS / SAFETY COMPONENTS PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

> WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS

SENSORS

STATIC
ELECTRICITY
PREVENTION
DEVICES

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES ENERGY CONSUMPTION VISUALIZATION

FA COMPONENTS

> MACHINE VISION SYSTEMS

> > URING YSTEMS

Selection Guide Light Curtains Safety Components Optical Touch Switch

Control Units Definition of Sensing Heights

SF4B-C SF4C SF2C SF4B

SF2B BSF4-AH80

LASER SENSORS

PHOTO-ELECTRIC SENSORS MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS LIGHT CURTAINS / SAFETY

PRESSURE / FLOW SENSORS INDUCTIVE PROXIMITY

PARTICULAR USE SENSORS SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS MEASURE-MENT SENSORS

> STATIC ELECTRICITY PREVENTION DEVICES LASER MARKERS

PLC

HUMAN MACHINE INTERFACES ENERGY

COMPONENTS FA COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Selection
Guide
Light
Curtains
Safety
Components
Optical Touch
Switch
Control
Units
Definition of
Sensing Heights

SF4B-C SF4C SF2C SF4B SF2B

SPECIFICATIONS

Handy-controller

Model No.	SFB-HC				
Supply voltage	24 V DC ±10 % Ripple P-P10 % or less (common to light curtain power supply)				
Current consumption	65 mA or less				
Communication method	RS-485 two-way communications (Specific procedure)				
Digital display	4-digit red LED display × 2 (Selected beam channels, setting contents etc. are displayed.)				
Function indicator	Green LED × 9 (set function is displayed.)				
Functions	Fixed blanking (Factory setting: Disabled) / Floating blanking (Factory setting: Disabled) / Auxiliary output changing (Factory setting: Negative Logic of OSSD) / Light emitting amount control (Factory setting: Disabled) / Muting setting changing [Factory setting: All beam channels enabled, A = B, Setting of the muting lamp diagnosis function enabled (Ver. 2 or later), Muting sensor output operation setting N.O. / N.O. (Ver. 2.1 or later)] / Interlock setting changing (Factory setting: start / restart) / External device monitoring setting change (Factory setting: Enabled, 300 ms) / Override setting changing 60 sec. (Ver. 2.1 or later) / Setting detail monitoring / / Protecting (Factory setting: Disabled) (Factory password setting: 0000) / Initialization / Copy				
Ambient temperature	-10 to +55 °C +14 to +131 °F (No dew condensation or icing allowed), Storage: -25 to +70 °C -13 to +158 °F				
Ambient humidity	30 to 85 % RH, Storage: 30 to 85 % RH				
Voltage withstandability	1,000 V AC for one min. between all supply terminals connected together and enclosure				
Insulation resistance	$20~M\Omega$, or more, with 500 V DC megger between all supply terminals connected together and enclosure				
Cable	8-core shielded cable, 0.5 m 1.640 ft long, with a connector at the end (2 cables)				
Weight	Net weight: 200 g approx.				
Accessory	Adapter cable: 2 cables				


Note: Where measurement conditions have not been specified precisely, the conditions used were an ambient temperature of +20 °C +68 °F.

I/O CIRCUIT AND WIRING DIAGRAMS

SF4B-CA-J05 Pigtailed type (with muting function)

I/O circuit diagrams

<In case of using I/O circuit for PNP output>

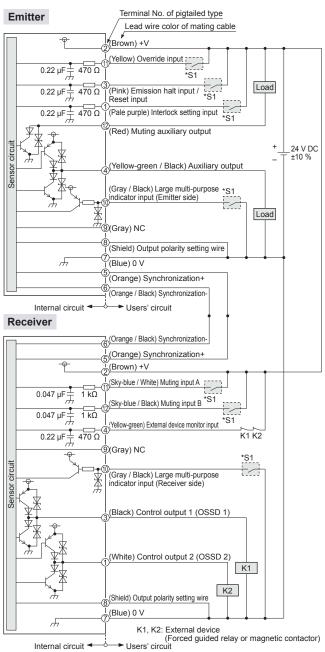

*S1

Switch S1

Emission halt input / Reset input

For manual reset

Vs to Vs – 2.5 V (sink current 5 mA or less): Emission halt (Note) Open: Emission

For automatic reset

Vs to Vs - 2.5 V (sink current 5 mA or less): Emission (Note) Open: Emission halt


• Interlock setting input, Override input, Muting input A / B, External device monitor input Vs to Vs – 2.5 V (sink current 5 mA or less): Valid (Note)

Open: Invalid

Large multi-purpose indicator input 0 to +1.5 V (source current 5 mA or less): Lights up, Open: Turns OFF

Note: Vs is the applying supply voltage.

<In case of using I/O circuit for NPN output>

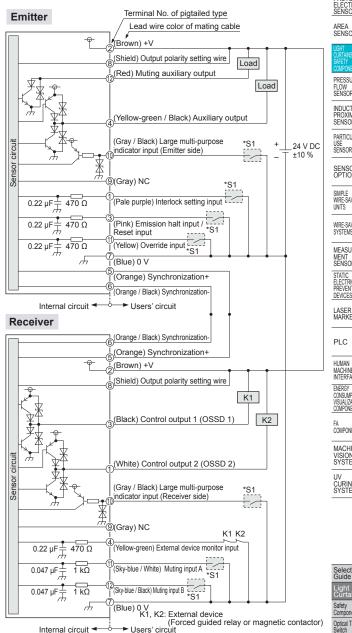

*S1

Switch S1

· Emission halt input / Reset input

For manual reset

0 to +1.5 V (source current 5 mA or less): Emission halt Open: Emission

For automatic reset

0 to +1.5 V (source current 5 mA or less): Emission

Open: Emission halt

 Interlock setting input, Override input, Muting input A / B, External device monitor input

0 to +1.5 V (source current: 5 mA or less): Valid, Open: Invalid

· Large multi-purpose indicator input

0 to +1.5 V (source current 5 mA or less): Lights up, Open: Turns OFF

FIBER SENSORS

LASER SENSORS

РНОТО MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS

PRESSURE FLOW SENSORS INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES

FA COMPONENTS

MACHINE VISION SYSTEMS

Safety

Optical Toucl Switch Control Units

SF4B-C

SF4C SF2C

SF4B

SF2B

BSF4-AH80

LASER SENSORS PHOTO-

ELECTRIC SENSORS MICRO PHOTO-ELECTRIC SENSORS AREA SENSORS

LIGHT
CURTAINS /
SAFETY
COMPONENTS

PRESSURE /
FLOW
SENSORS

INDUCTIVE

PARTICULAR USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS WIRE-SAVING SYSTEMS MEASURE-MENT SENSORS

MENT SENSORS STATIC ELECTRICITY PREVENTION DEVICES LASER MARKERS

PLC

HUMAN MACHINE INTERFACES ENERGY CONSUMPTION VISUALIZATION COMPONENTS

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Selection
Guide
Light
Curtains
Safety
Components
Optical Touch
Switch
Control
Units
Definition of
Sensing Heights

SF4B-C SF4C SF2C SF4B SF2B

BSF4-AH80

I/O CIRCUIT AND WIRING DIAGRAMS


SF4B-CA-J05

Pigtailed type (with muting function)

Connection examples

Muting control components: Interlock function "disabled (automatic reset)", external device monitoring function "enabled"

<In case of using I/O circuit for PNP output>

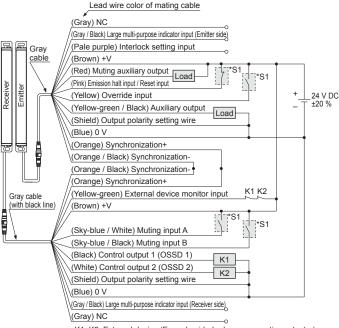

*S1 K1, K2: External device (Forced guided relay or magnetic contactor)

Switch S1

Emission halt input / Reset input

For automatic reset $\,$ Vs to Vs – 2.5 V (sink current 5 mA or less): Emission (Note)


Open: Emission halt

For manual reset Vs to Vs – 2.5 V (sink current 5 mA or less): Emission halt (Note)
Open: Emission

 Muting input A / B, Override input Vs to Vs – 2.5 V (sink current 5 mA or less): Valid (Note), Open: Invalid

Note: Vs is the applying supply voltage.

<In case of using I/O circuit for NPN output>

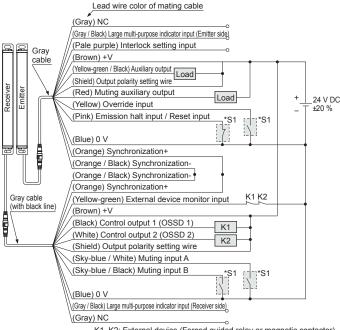

K1, K2: External device (Forced guided relay or magnetic contactor)

Curitab C1

Emission halt input / Reset input


For automatic reset 0 to +1.5 V (source current 5 mA or less): Emission, Open: Emission halt For manual reset 0 to +1.5 V (source current 5 mA or less): Emission halt, Open: Emission

Muting input A / B, Override input
 0 to + 1.5 V (source current 5 mA or less): Valid, Open: Invalid


The diagram at left shows the configuration when using PNP output, interlock function "disabled (automatic reset)" and external device monitoring function "enabled".

In case of setting the interlock function to "enabled (manual reset)"

  When the interlock function is set to "Enable (manual reset)," the override function cannot be used.




In case of setting the external device monitoring function to "disabled"

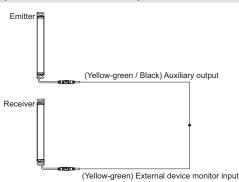


The diagram at left shows the configuration when using NPN output, interlock function "disabled (automatic reset)" and external device monitoring function "enabled".

In case of setting the interlock function to "enabled (manual reset)"

  When the interlock function is set to "Enable (manual reset)," the override function cannot be used.



In case of setting the external device monitoring function to "disabled"

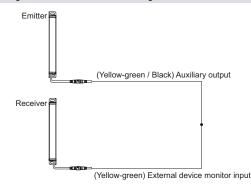


I/O CIRCUIT AND WIRING DIAGRAMS

SF4B-□C Cable type

I/O circuit diagrams

<In case of using I/O circuit for PNP output>

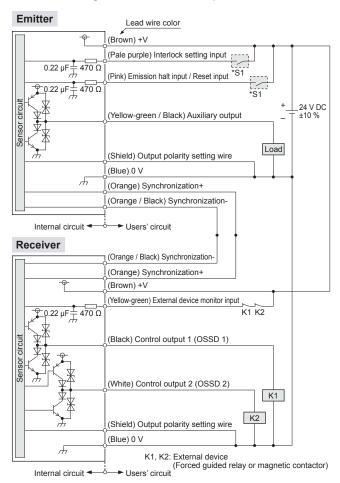

*S1

Switch S1

Emission halt input / Reset input

For manual reset Vs to Vs -2.5 V (sink current 5 mA or less): Emission halt (Note)

Open: Emission

For automatic reset

Vs to Vs – 2.5 V (sink current 5 mA or less): Emission (Note)

Open: Emission halt


Interlock setting input

Vs to Vs – 2.5 V (sink current 5 mA or less): Valid (Note)

Open: Invalid

Note: Vs is the applying supply voltage.

<In case of using I/O circuit for NPN output>

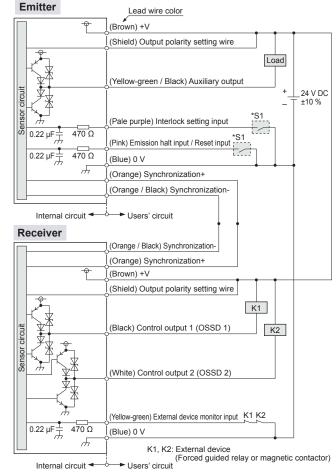

*S1

• Emission halt input / Reset input

For manual reset

0 to +1.5 V (source current 5 mA or less): Emission halt

Open: Emission For automatic reset

0 to +1.5 V (source current 5 mA or less): Emission

Open: Emission halt · Interlock setting input

0 to +1.5 V (source current 5 mA or less): Valid, Open: Invalid

FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS

AREA SENSORS

PRESSURE FLOW SENSORS

PARTICULAR

USE SENSORS SENSOR OPTIONS

MEASURE-MENT SENSORS

> DEVICES LASER MARKERS

PLC

HUMAN MACHINE INTERFACES

FA COMPONENTS

MACHINE VISION SYSTEMS

Safety Componer Control Units

SF4B-C SF4C SF2C

SF4B SF2B BSF4-AH80

LASER SENSORS PHOTO-ELECTRIC SENSORS

MICRO PHOTO-ELECTRIC SENSORS AREA SENSORS

LIGHT CURTAINS/ SAFETY COMPONENTS PRESSURE/ FLOW SENSORS INDUCTIVE PROXIMITY SENSORS

SENSOR OPTIONS SIMPLE WIRE-SAVING UNITS

PARTICULAR

WIRE-SAVING SYSTEMS MEASURE-MENT SENSORS

SENSORS STATIC ELECTRICITY PREVENTION DEVICES

LASER MARKERS PLC

HUMAN MACHINE INTERFACES ENERGY CONSUMPTION VISUALIZATION COMPONENTS

MACHINE VISION SYSTEMS

CURING SYSTEMS

Selection Guide Light Curtains Safety Components Optical Touch Switch Control Units Definition of Sensing Heights

> SF4B-C SF4C SF2C SF4B

SF2B BSF4-AH80


I/O CIRCUIT AND WIRING DIAGRAMS

SF4B-□C Cable type

Connection examples

Interlock function "enabled (manual reset)", external device monitoring function "enabled"

<In case of using I/O circuit for PNP output>

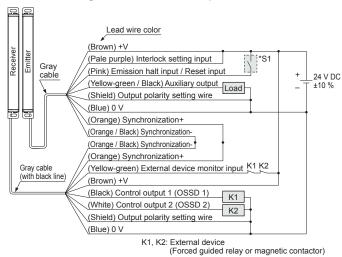

*S1
Switch S1

Emission halt input / Reset input
 For manual reset
 Vs to Vs – 2.5 V (sink current 5 mA or less): Emission halt (Note)
 Open: Emission
 For automatic reset
 Vs to Vs – 2.5 V (sink current 5 mA or less): Emission (Note)


Open: Emission halt

Interlock setting input
Vs to Vs – 2.5 V (sink current 5 mA or less): Valid (Note)

Open: Invalid

Note: Vs is the applying supply voltage.

<In case of using I/O circuit for NPN output>

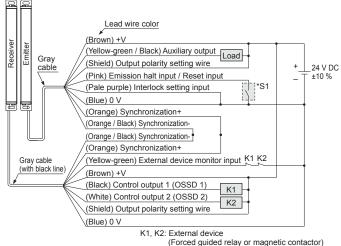

(Forced guided relay or magnetic conti

Switch S1

*S1

• Emission halt input / Reset input

For manual reset

0 to +1.5 V (source current 5 mA or less): Emission halt

Open: Emission

For automatic reset


0 to +1.5 V (source current 5 mA or less): Emission Open: Emission halt

Interlock setting input


0 to +1.5 V (source current 5 mA or less): Valid, Open: Invalid

The diagram at left shows the configuration when using PNP output, interlock function "enabled (manual reset)" and external device monitoring function "enabled".

 In case of setting the interlock function to "disabled (automatic reset)"




In case of setting the external device monitoring function to "disabled"

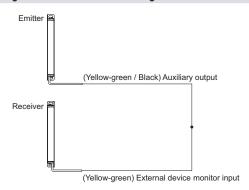


The diagram at left shows the configuration when using NPN output, interlock function "enabled (manual reset)" and external device monitoring function "enabled".

In case of setting the interlock function to "disabled (automatic reset)"

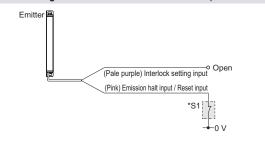

In case of setting the external device monitoring function to "disabled"

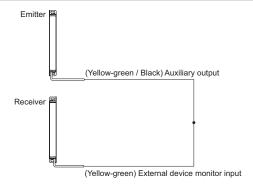


I/O CIRCUIT AND WIRING DIAGRAMS

SF-C13

SF4B-□C wiring diagrams (Control Category 4)

For PNP output (minus ground)

· Connect the light curtain control outputs OSSD 1 and OSSD 2 to S1 and S2 respectively.

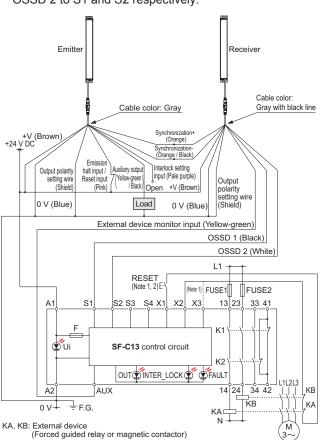

Notes: 1) The above diagram is when using manual reset. If automatic reset is used, disconnect the lead from X2 and connect it to X3. In this case, a reset (RESET) button is not needed

2) Use a momentary-type switch as the reset (RESET) button.

Terminal arrangement diagram


10	A1	Terminal
100	A2	A1
	S1	
	S2	A2
	S3	
	S4	S1 to S4
	AUX	
	∏ X1	AUX
	X2	2//
	X3	X1
	13	X2
	14	7,72
	23	X3
	24	
10	33	13-14, 23-24, 33-3
	34	41-42
	1 41	41-42
	42	

Terminal	Description
A1	+24 V DC
A2	0 V
S1 to S4	Light curtain control output (OSSD) input terminal
AUX	Semiconductor auxiliary output
X1	Reset output terminal
X2	Reset input terminal (Manual)
X3	Reset input terminal (Automatic)
13-14, 23-24, 33-34	Enabling path (NO contact × 3)
41-42	Auxiliary output (NC contact × 1)

A terminal block is required for wiring of light curtain side.

For NPN output (plus ground)

· Connect the light curtain control outputs OSSD 1 and OSSD 2 to S4 and S2 respectively and ground the + side.

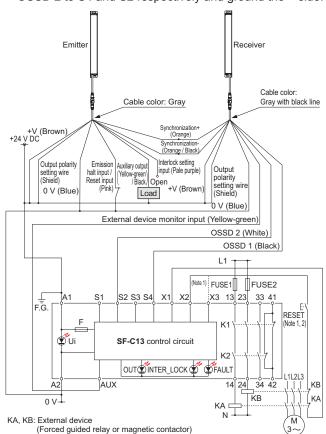

Notes: 1) The above diagram is when using manual reset. If automatic reset is used, disconnect the lead from X2 and connect it to X3. In this case, a reset (RESET) button is not needed.

2) Use a momentary-type switch as the reset (RESET) button.

FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS

PRESSURE FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS PARTICULAR USE SENSORS

SENSOR OPTIONS

WIRE-SAVING SYSTEMS MEASURE-

MENT SENSORS DEVICES

LASER MARKERS

PLC HUMAN

CONSUMPTIO VISUALIZATIO COMPONENTS FA COMPONENTS

MACHINE VISION SYSTEMS

Safety Compone Control Units

SF4B-C SF4C SF2C SF4B

SF2B BSF4-AH80

LASER SENSORS PHOTO-ELECTRIC SENSORS MICRO PHOTO-

AREA SENSORS

PRESSURE / FLOW SENSORS

PARTICULAR USE SENSORS SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

MEASURE-MENT SENSORS

SENSORS

STATIC
ELECTRICITY
PREVENTION
DEVICES

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES ENERGY CONSUMPTION VISUALIZATION

MACHINE VISION SYSTEMS

UV CURING SYSTEMS

Selection
Guide
Light
Curtains
Safety
Components
Optical Touch
Switch
Control
Units
Units

SF4B-C SF4C SF2C SF4B SF2B

BSF4-AH80

PRECAUTIONS FOR PROPER USE

Refer to the instruction manual for details. The instruction manual can be downloaded from our website.

Wiring



Refer to the applicable regulations for the region where this device is to be used when setting up the device. In addition, make sure that all necessary measures are taken to prevent possible dangerous operating errors resulting from earth faults.

- Make sure to carry out the wiring in the power supply off condition.
- Verify that the supply voltage variation is within the rating.
- If power is supplied from a commercial switching regulator, ensure that the frame ground (F.G.) terminal of the power supply is connected to an actual ground.
- In case noise generating equipment (switching regulator, inverter motor, etc.) is used in the vicinity of this sensor, connect the frame ground (F.G.) terminal of the equipment to an actual ground.
- Do not run the wires together with high-voltage lines or power lines or put them in the same raceway. This can cause malfunction due to induction.

Interlock function

 The selection of manual reset / automatic reset is available by applying the interlock input (pale purple) wiring. The interlock becomes available by selecting manual reset.

Interlock setting input wire (pale purple)	Interlock function
When selecting PNP output: Connected to +V When selecting NPN output: Connected to 0 V	Manual reset
Open	Automatic reset



In case of using the interlock function, be sure there exists no operator inside of the dangerous area. It causes death or serious injury without the confirmation.

Manual reset

 
 The control outputs (OSSD 1, OSSD 2) are not turned ON automatically even though this device is received the light. When this device is reset in light received state [open the emission halt input / reset input → short-circuit the device to 0 V or +V → open], the control outputs (OSSD 1, OSSD 2) are turned ON.



The reset switch shall be placed in area where all over the dangerous zone shall be comprehend and out side of the dangerous zone.

Automatic reset

 The control outputs (OSSD 1, OSSD 2) are turned ON automatically when this device receives the light.





In case that this light curtain is used under automatic reset mode, set the system not to be auto reset by the safety relay unit, etc. (conforming to EN 60204-1)

 It is possible to change the conditions for interlocking by using the handy-controller SFB-HC (optional). Refer to instruction manual enclosed with this product for details.

Emission halt function

This function stops the emission process of the emitter.
 You can select whether emission is on or halted by means of the connection status for the emission halt input / reset input wire (pink).

Interlock function			Control output status (OSSD 1, OSSD 2)
	Open	Invalid	ON
Manual reset	When selecting PNP output: Connected to +V When selecting NPN output: Connected to 0 V	Valid	OFF
	Open	Valid	OFF
Automatic reset	When selecting PNP output: Connected to +V When selecting NPN output: Connected to 0 V	Invalid	ON

- During emission halt, the control outputs (OSSD 1, OSSD 2) become OFF status.
- By using this function, malfunction due to extraneous noise or abnormality in the control outputs (OSSD 1, OSSD 2) and the auxiliary output can be determined even from the machinery side.
- Normal operation is restored when the emission halt input / reset input wire (pink) is connected to 0 V or +V (for manual reset: open).



Do not use the emission halt function for the purpose of stopping the machine in which the **SF4B-C** series is installed. Failure to do so could result in death or serious injury.

External device monitoring function


• This is the function for checking whether the external safety relay connected to the control outputs (OSSD 1, OSSD 2) perform normally in accordance with the control outputs (OSSD 1, OSSD 2) or not. Monitor the contacting point "b" of the external safety relay, and if any abnormality such as deposit of the contacting point, etc. is detected, change the status of the light curtain into lockout one, and turn OFF the control outputs (OSSD 1, OSSD 2).

In case of setting the external device monitoring function to enabled

 Connect the external device monitoring input (yellowgreen) to the external safety relay connected the control outputs (OSSD 1, OSSD 2).

In case of not using the external device monitoring function

- Connect the external device monitoring input (yellow-green) to the auxiliary output (yellow-green / black). At this time, set the auxiliary output as [negative logic of control outputs (OSSD 1, OSSD 2)] (factory setting).
- The auxiliary output cannot be connected to external devices.

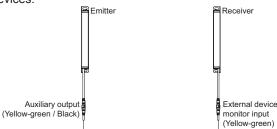

 It is also possible to set the external device monitoring function into invalid by using the handy-controller SFB-HC (optional). Refer to instruction manual enclosed with this product for details.

PRECAUTIONS FOR PROPER USE

Auxiliary output (Non-safety output)

• This light curtain incorporates the auxiliary output (yellowgreen / black) for the non-safety output. The auxiliary output is incorporated with the emitter.

	N			
Auxiliary output setting	Emission	Control outputs (OSSD 1, OSSD 2) status		Lockout
	halt	Beam received	Beam interrupted	
Negative logic of OSSD (Factory setting)	ON	OFF	ON	ON



Do not use the auxiliary output for the purpose of stopping the device with SF4B-C installed. Failure to do so could result in serious injury or death.

Muting Function (For SF4B-□CA-J05 only)

ANSI/RIA R15.06-1999

· Incorrect use of the muting control may cause accidents. Please understand the muting control fully, and use it. As for the muting control, the following international standards define the requirements. ISO 13849-1 (EN ISO 13849-1 / JIS B 9705-1) IEC 61496-1 (ANSI / UL 61496 / JIS B 9704-1)

IEC 60204-1 (JIS B 9960-1) EN 415-4 ANSI B11.19-1990




- · Use the muting control while the machine cycle is not in danger mode. Maintain safety with the other measure while the muting control is activated.
- · For the application that the muting control is activated when a workpiece passes through the sensor, place the muting sensor so that the conditions for the muting control cannot be satisfied by intrusion of personnel when the workpiece is passing through the sensor or the workpiece is not passing through it.
- · Be sure to check the operation of the muting function before its use.
- This function turns the safety function of this light curtain into disabled temporarily. When the control outputs (OSSD 1, OSSD 2) are ON, this function is available for passing the workpiece through the sensing area of the light curtain without stopping the machinery. The muting function becomes valid when all the conditions listed below are satisfied.
- (1) The control outputs (OSSD 1, OSSD 2) shall be ON.
- (2) The output of the muting sensors A and B shall be changed from OFF (open) to ON. At this time, the time difference occurred by changing the output of the muting sensors A and B into ON status shall be within 0.03 to 3 sec. (Note 1)
- The following devices, photoelectric sensor with semiconductor output, inductive proximity sensor, position switch on N.O. (Normally open) contact, etc. are available for applying to the muting sensor.
- Notes: 1) 0 to 3 sec. is allowable by using the handy controller Ver. 2.1 (SFB-HC) (optional) and connecting N.O. (Normally Open) type muting sensor to the input A, as well as connecting N.C. (Normally Closed) type muting sensor to the input B.
 - 2) The muting indicator diagnosis function can be set with the handy controller Ver. 2 or later (SFB-HC) (optional), but it must be set to invalid. If the muting indicator diagnosis function is set to valid, the muting function cannot be used.

Refer to the instruction manual for details. The instruction manual can be downloaded from our website.

<Muting auxiliary output wiring>

• To trigger a large multi-purpose indicator during muting operation, connect the wiring as follows: As for lead wires other than below, perform wiring depending on your application.

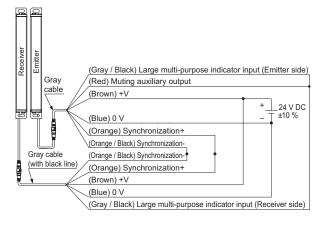

Override function (For SF4B CA-J05 only)

- This function sets the safety function of this light curtain enabled forcibly. When using the muting function, the override function can be used to start the machinery at times such as when the control outputs (OSSD 1 and OSSD 2) are OFF or when the muting sensors are ON when the line is to be started. The override function becomes valid when all the conditions listed below are satisfied.
- (1) The signal shall be input to either muting sensor A, B, or A and B.
- (2) The override input (yellow) shall be short-circuited to 0 V or +V, and the emission halt input / reset input (pink) shall be opened. (3 sec. continuously)

If one of the two conditions above becomes invalid or timing exceeds 60 sec. (Note 1), the override function becomes invalid.

• The override function only operates when the interlock function is disabled (automatic reset).

Notes: 1) By using handy-controller (SFB-HC) (optional) Ver.2.1 or later, a change between 60 and 600 sec. by 10 sec. per unit is possible.

- 2) The muting indicator diagnosis function can be set with the handy controller Ver. 2 or later (SFB-HC) (optional), but it must be set to invalid. If the muting indicator diagnosis function is set to valid, the muting function cannot be used.
- 3) The override function only operates when the interlock function is disabled (automatic reset).



- Make sure manually to operate system for starting override function. Furthermore, the system shall be placed in area where all over the dangerous zone shall be comprehend and out side of the dangerous zone.
- Using override function, make sure that there exist no operator in the dangerous zone, which may result in death or serious injury.

FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS

PRESSURE FLOW SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

MEASURE-MENT SENSORS

DEVICES

LASER MARKERS PLC

HUMAN MACHINE INTERFACES

FA COMPONENTS

MACHINE VISION SYSTEMS

Safety

Control Units

SF4B-C

SF4C SF2C

SF4B

SF2B BSF4-AH80

LASER SENSORS PHOTO-

MICRO PHOTO-ELECTRIC SENSORS

> AREA SENSORS

PRESSURE / FLOW SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS STATIC ELECTRICITY PREVENTION DEVICES

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES ENERGY CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS

MACHINE VISION SYSTEMS

CURING SYSTEMS

Selection Guide Light Curtains Safety Components Optical Touch Switch Control Units

SF4B-C SF4C SF2C SF4B SF2B

BSF4-AH80

PRECAUTIONS FOR PROPER USE

Refer to the instruction manual for details. The instruction manual can be downloaded from our website.

Others

- Do not use during the initial transient time (2 sec.) after the power supply is switched on.
- · Avoid dust, dirt and steam.
- Take care that the light curtain does not come in direct contact with water, oil, grease, or organic solvents, such as, thinner, etc.
- Take care that the light curtain is not directly exposed to fluorescent light from a rapid-starter lamp or a high frequency lighting device, as it may affect the sensing performance.



- When this device is used in the "PSDI mode", an appropriate control circuit must be configured between this device and the machinery. For details, be sure to refer to the standards or regulations applicable in each region or country.
- To use this product in the U.S.A., refer to OSHA 1910. 212 and OSHA 1910. 217 for installation, and in Europe, refer to EN 999 as well. Observe your national and local requirements before installing this product.
- This catalog is a guide to select a suitable product. Be sure to read instruction manual attached to the product prior to its use.
- Both emitter and receiver are combined adjusted on factory setting, please apply both emitter and receiver with the same serial No. The serial No. is indicated on the plates of both emitter and receiver. (Indicated under model No.)
- Make sure to carry out the test run before regular operation.
- Do not use this product with machinery that cannot be stopped immediately during the operating cycle by means of an emergency stop system.


Sensing area




 Make sure to install this product such that any part of the human body must pass through its sensing area in order to reach the dangerous parts of the machinery. Furthermore, ensure that some part of the operator's body always remains in the sensing area when operation is done with the dangerous parts of the machine. If the human body is not detected, there is a danger of serious injury or death.


- Do not use any reflection type or recursive reflection type arrangement.
- Multiple receivers (emitters) cannot be connected to one emitter (receiver).

Example of correct installation

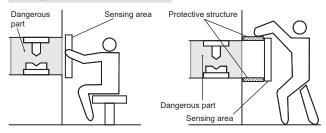

Example of incorrect installation

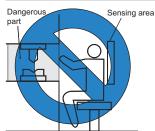

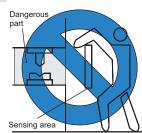


Influence of reflective surfaces




Install the light curtain by considering the effect of nearby reflective surfaces, and take countermeasures such as painting, masking, or changing the material of the reflective surface, etc. Failure to do so may cause the light curtain not to detect, resulting in serious body injury or death.

 Install this device at a distance of at least A (m) (given below) away from reflective surfaces such as metal walls, floors, ceilings, workpiece, covers, panels or glass surfaces.

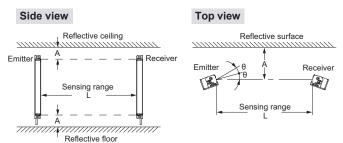

Distance between emitter and receiver (Setting distance L)	Allowable installation distance A
0.3 to 3 m 0.984 to 9.843 ft	0.16 m 0.525 ft
3 to 7 m 9.843 to 22.966 ft	L/2 × tan2θ = L/2 × 0.105 (m) 0.344 (ft) (θ = 3°)

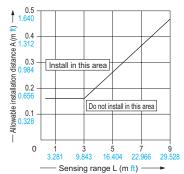

Note: The effective aperture angle for this device is ±2.5° or less (when L > 3 m 9.843 ft) as required by IEC 61496-2, ANSI/UL 61496-2. However, install this device away from reflective surfaces considering an effective aperture angle of ±3° to take care of beam misalignment, etc. during installation.

Handy-controller



This device enables to set each function using the handy-controller **SFB-HC** (optional). Among the functions, the contents related to the safety distance such as the size of the minimum sensing object and response time are varied depending on the setting condition. When setting each function, re-calculate the safety distance, and make enough space larger than the calculated safety distance. Failure to do so might cause the accident that the device cannot stop quickly before reaching the dangerous area of the machinery, resulting in the serious injury or death.

• Refer to the instruction manual enclosed with the handy-controller for details of the function settings for using handy-controller **SFB-HC** (optional).

 
PRECAUTIONS FOR PROPER USE

Refer to the instruction manual for details. The instruction manual can be downloaded from our website.

Safety distance

· Calculate the safety distance correctly, and always maintain a distance which is equal to or greater than the safety distance, between the sensing area of this light curtain and the dangerous parts of the machinery. (Please check the latest standards for the equation.) If the safety distance is miscalculated or if sufficient distance is not maintained, there is a danger of serious injury or death.

· Before designing the system, refer to the relevant standards of the region where this device is to be used and then install this





The sizes of the minimum sensing objects for this device vary depending on whether or not the floating blanking function is being used. Calculate the safety distance with the proper size of the minimum sensing object and appropriate equation.

Size of minimum sensing object when applying floating blanking function

		Setting (Note)				
	Invalid	1 beam channel	2 beam channels	3 beam channels		
SF4B-H□C(A-J05) (Min. sensing object ø25 mm ø0.984 in	ø25 mm ø0.984 in	ø45 mm ø1.772 in	ø65 mm ø2.559 in	ø85 mm ø3.346 in		
SF4B-H□C(A-J05) (Min. sensing object ø45 mm ø1.772 in	ø45 mm ø1.772 in	ø85 mm ø3.346 in	ø125 mm ø4.921 in	ø165 mm ø6.496 in		

Note: Refer to P. 501 for details of the floating blanking function.

 Safety distance is calculated based on the following equation when a person moves perpendicular (normal intrusion) to the sensing area of the light curtain. In case the intrusion direction is not perpendicular to the sensing area, be sure to refer to the relevant standard (regional standard, specification of the machine, etc.) for details of the calculation.

For use in Europe (EU) (as EN 999) (Also applicable to ISO 13855 / JIS B 9715)

For intrusion direction perpendicular to the sensing area <In the case that the minimum sensing object is ø40 mm ø1.575 in or less>

- $S = K \times T + C$ Equation ①
- S: Safety distance (mm)

Minimum required distance between the sensing area surface and the dangerous parts of the machine

- K: Intrusion velocity of operator's body or object (mm/sec.) Taken as 2,000 (mm/sec.) for calculation
- T: Response time of total equipment (sec.) $T = T_m + T_{SF4B}$

T_m: Maximum halting time of machinery (sec.) TSF4B: Response time of the **SF4B-C** series (sec.)

- C: Additional distance calculated from the size of the minimum sensing object of the SF4B-C series (mm) However, the value of "C" cannot be under 0. $C = 8 \times (d - 14)$
 - d: Minimum sensing object diameter (mm)

• For calculating the safety distance "S", there are the following five cases.

First calculate by substituting the value K = 2,000(mm/sec.) in the equation above. Then, classify the obtained value of "S" into three cases, 1) S < 100, 2) $100 \le S \le 500$, and 3) S > 500. For Case 3) S > 500, recalculate by substituting the value K =

1,600 (mm/sec.). After that, classify the calculation result into two cases,

4) $S \le 500$ and 5) S > 500. For details, refer to the instruction manual enclosed with this product.

· When this product is used in the "PSDI mode", an appropriate safety distance "S" must be calculated. For details, be sure to refer to the standards or regulations applicable in each region or country.

<In the case that the minimum sensing object is ø40 mm ø1.575 in or more>

• Equation 1 $S = K \times T + C$

S: Safety distance (mm)

K: Intrusion velocity of operator's body or object (mm/sec.) Taken as 1,600 (mm/sec.) for calculation

T: Response time of total equipment (sec.) $T = T_m + T_{SF4B}$

T_m: Maximum halting time of machinery (sec.)

TSF4B: Response time of the **SF4B-C** series (sec.)

C: Additional distance calculated from the size of the minimum sensing object of the SF4B-C series (mm) C = 850 (mm) (Constant)

For use in the United States of America (as per ANSI/RIA 15.06)

• Equation 2 $S = K \times (T_S + T_C + T_{SF4B} + T_{bm}) + D_{pf}$ S: Safety distance (mm)

Minimum required distance between the sensing area surface and the dangerous parts of the machine

K: Intrusion velocity {Recommended value in OSHA is 63 (inch/s) [≈ 1,600 (mm/sec.)] }

ANSI/RIA 15.06 does not define the intrusion speed "K". When determining K, consider possible factors including physical ability of operators.

Ts: Halting time calculated from the operation time of the control element (air valve, etc.) (sec.)

Tc: Maximum response time of the control circuit required for functioning the brake (sec.)

TSF4B: Response time of the **SF4B-C** series (sec.)

T_{bm}: Additional halting time tolerance for the brake monitor (sec.)

The following equation holds when the machine is equipped with a brake monitor.

 $T_{bm} = T_a - (T_S + T_C)$

Ta: Setting time of brake monitor (sec.)

When the machine is not equipped with a brake monitor, it is recommended that 20 % or more of (Ts + T_C) is taken as additional halting time.

D_{of}: Additional distance calculated from the size of the minimum sensing object of the device (mm) **SF4B-H**_□**C**(**A-J05**): D_{pf} = 61.2 mm 2.409 in

SF4B-A (**C(A-J05)**: D_{pf} = 129.2 mm 5.087 in

 $D_{pf} = 3.4 \times (d - 0.276)$ (inch) $\approx 3.4 \times (\dot{d} - 7) (mm)$ d: Minimum sensing object diameter 0.985 (inch) ≈ 25 (mm) [SF4B-H

C(A-J05)] Minimum sensing object diameter 1.772 (inch) ≈ 45 (mm) [SF4B-A C(A-J05)]

· When the floating blanking function is applied, the minimum sensing object becomes large. According to ANSI/RIA 15.06.

Dpf = 900 mm (3 ft) when d > 64 mm (2.5 inches).

FIBER SENSORS

LASER SENSORS PHOTO-

ELECTRIC SENSORS MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS

PRESSURE FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

MEASURE-

MENT SENSORS

DEVICES LASER MARKERS

PLC

HUMAN MACHINE INTERFACES

FA COMPONENTS

MACHINE VISION SYSTEMS

Safety Componer

Control Units

SF4B-C

SF4C SF2C

SF4B

SF2B BSF4-AH80

LASER SENSORS

PHOTO-ELECTRIC SENSORS MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS LIGHT CURTAINS/ SAFETY COMPONENTS PRESSURE/ FLOW SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS

STATIC ELECTRICITY PREVENTION DEVICES

LASER MARKERS

PLC

HUMAN
MACHINE
INTERFACES

ENERGY
CONSUMPTION
VISUALIZATION
COMPONENTS

FA
COMPONENTS

MACHINE VISION SYSTEMS UV CURING SYSTEMS

Selection
Guide
Light
Curtains
Safety
Components
Optical Touch
Switch
Control
Units
Definition of
Sensing Heights

SF4B-C SF4C SF2C SF4B SF2B BSF4-AH80

DIMENSIONS (Unit: mm in)


The CAD data in the dimensions can be downloaded from our website.

SF4B-CA-J05 SF4B-C

Light curtain

Assembly dimensions

The figure depicts rear mounting using the standard mounting bracket MS-SF4BC-1(optional) and the intermediate supporting bracket for standard mounting bracket MS-SF4BC-5(optional).

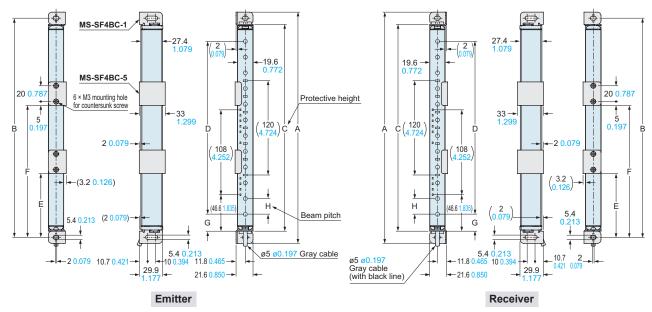

<Connector of the pigtailed type (with muting function) SF4B-□CA-J05>



Model No.		A B C]	_	_		
Mode	ei NO.	A	В		SF4B-H□C(A-J05)	SF4B-A□C(A-J05)	E	F
SF4B-H12C(A-J05)		294.4 11.591	279 10.984	263.4 10.370	220 8.661	_	_	_
SF4B-H16C(A-J05)	SF4B-A8C(A-J05)	374.4 14.740	359 14.134	343.4 13.520	300 11.811	280 11.024	_	_
SF4B-H20C(A-J05)		454.4 17.890	439 17.283	423.4 16.669	380 14.961		_	_
SF4B-H24C(A-J05)	SF4B-A12C(A-J05)	534.4 21.039	519 20.433	503.4 19.819	460 18.110	440 17.323		_
SF4B-H28C(A-J05)		614.4 24.189	599 23.583	583.4 22.969	540 21.260			_
SF4B-H32C(A-J05)	SF4B-A16C(A-J05)	694.4 27.339	679 26.732	663.4 26.118	620 24.409	600 23.622		_
SF4B-H36C(A-J05)		774.4 30.488	759 29.882	743.4 29.268	700 27.559		_	_
SF4B-H40C(A-J05)	SF4B-A20C(A-J05)	854.4 33.638	839 33.031	823.4 32.417	780 30.709	760 29.921	395 15.551	_
SF4B-H48C(A-J05)	SF4B-A24C(A-J05)	1,014.4 39.937	999 39.331	983.4 38.717	940 37.008	920 36.220	475 18.701	_
SF4B-H56C(A-J05)	SF4B-A28C(A-J05)	1,174.4 46.236	1,159 45.630	1,143.4 45.016	1,100 43.307	1,080 42.520	555 21.850	_
SF4B-H64C(A-J05)	SF4B-A32C(A-J05)	1,334.4 52.535	1,319 51.929	1,303.4 51.315	1,260 49.606	1,240 48.819	415 16.339	854 33.622
SF4B-H72C(A-J05)	SF4B-A36C(A-J05)	1,494.4 58.835	1,479 58.228	1,463.4 57.614	1,420 55.906	1,400 55.118	468 18.425	961 37.835
SF4B-H80C(A-J05)	SF4B-A40C(A-J05)	1,654.4 65.134	1,639 64.528	1,623.4 63.913	1,580 62.205	1,560 61.417	521 20.512	1,068 42.047
SF4B-H88C(A-J05)	SF4B-A44C(A-J05)	1,814.4 71.433	1,799 70.827	1,783.4 70.212	1,740 68.504	1,720 67.716	574 22.598	1,175 46.260
SF4B-H96C(A-J05)	SF4B-A48C(A-J05)	1,974.4 77.732	1,959 77.126	1,943.4 76.512	1,900 74.803	1,880 74.016	627 24.685	1,282 50.472

Model No.	G	Н	
SF4B-H□C(A-J05)	21.7 0.854	20 0.787	
SF4B-A□C(A-J05)	41.7 1.642	40 1.575	

DIMENSIONS (Unit: mm in)


The CAD data in the dimensions can be downloaded from our website.


SF4B-CA-J05 SF4B-C

Light curtain


Assembly dimensions

The figure depicts side mounting using the standard mounting bracket MS-SF4BC-1(optional) and the intermediate supporting bracket for standard mounting bracket MS-SF4BC-5(optional).

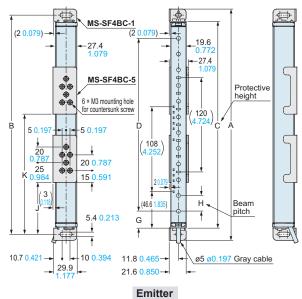

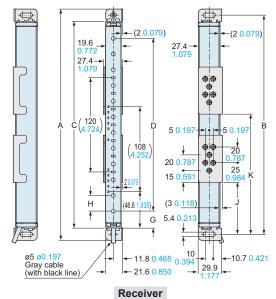
 
<Connector of the pigtailed type (with muting function) SF4B-□CA-J05>



				Y		,		
Model No.		A B		С	[к	
Mode	el INO.		Ь		SF4B-H□C(A-J05)	SF4B-H□C(A-J05)		
SF4B-H12C(A-J05)		294.4 11.591	279 10.984	263.4 10.370	220 8.661	_	_	_
SF4B-H16C(A-J05)	SF4B-A8C(A-J05)	374.4 14.740	359 14.134	343.4 13.520	300 11.811	280 11.024	_	_
SF4B-H20C(A-J05)		454.4 17.890	439 17.283	423.4 16.669	380 14.961	_	_	_
SF4B-H24C(A-J05)	SF4B-A12C(A-J05)	534.4 21.039	519 20.433	503.4 19.819	460 18.110	440 17.323	_	_
SF4B-H28C(A-J05)		614.4 24.189	599 23.583	583.4 22.969	540 21.260	_		_
SF4B-H32C(A-J05)	SF4B-A16C(A-J05)	694.4 27.339	679 26.732	663.4 26.118	620 24.409	600 23.622	_	_
SF4B-H36C(A-J05)		774.4 30.488	759 29.882	743.4 29.268	700 27.559	_	_	_
SF4B-H40C(A-J05)	SF4B-A20C(A-J05)	854.4 33.638	839 33.031	823.4 32.417	780 30.709	760 29.921	390 15.354	_
SF4B-H48C(A-J05)	SF4B-A24C(A-J05)	1,014.4 39.937	999 39.331	983.4 38.717	940 37.008	920 36.220	470 18.504	_
SF4B-H56C(A-J05)	SF4B-A28C(A-J05)	1,174.4 46.236	1,159 45.630	1,143.4 45.016	1,100 43.307	1,080 42.520	550 21.654	_
SF4B-H64C(A-J05)	SF4B-A32C(A-J05)	1,334.4 52.535	1,319 51.929	1,303.4 51.315	1,260 49.606	1,240 48.819	410 16.142	849 33.425
SF4B-H72C(A-J05)	SF4B-A36C(A-J05)	1,494.4 58.835	1,479 58.228	1,463.4 57.614	1,420 55.906	1,400 55.118	463 18.228	956 37.638
SF4B-H80C(A-J05)	SF4B-A40C(A-J05)	1,654.4 65.134	1,639 64.528	1,623.4 63.913	1,580 62.205	1,560 61.417	516 20.315	1,063 41.850
SF4B-H88C(A-J05)	SF4B-A44C(A-J05)	1,814.4 71.433	1,799 70.827	1,783.4 70.212	1,740 68.504	1,720 67.716	569 22.402	1,170 46.063
SF4B-H96C(A-J05)	SF4B-A48C(A-J05)	1,974.4 77.732	1,959 77.126	1,943.4 76.512	1,900 74.803	1,880 74.016	622 24.488	1,277 50.275

Model No.	G	Н
SF4B-H□C(A-J05)	21.7 0.854	20 0.787
SF4B-A□C(A-J05)	41.7 1.642	40 1.575

FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS

CURTAINS / SAFETY COMPONENTS PRESSURE / FLOW SENSORS

INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS STATIC

STATIC ELECTRICITY PREVENTION DEVICES

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES ENERGY CONSUMPTION VISUALIZATION

> FA COMPONENTS

MACHINE VISION SYSTEMS UV CURING SYSTEMS

Selection
Guide
Light
Curtains
Safety
Components
Optical Touch
Switch
Control
Definition of
Sensing Heights

SF4B-C
SF4C
SF2C
SF4B
SF2B
BSF4-AH80

LASER SENSORS

PHOTO-ELECTRIC SENSORS MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS LIGHT CURTANS/ SAFETY COMPONENTS PRESSURE / FLOW SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING
SYSTEMS

MEASUREMENT
SENSORS

STATIC
ELECTRICITY
PREVENTION
DEVICES

LASER
MARKERS

HUMAN
MACHINE
INTERFACES
ENERGY
CONSUMPTION
VISUALIZATION
COMPONENTS
FA
COMPONENTS

MACHINE VISION SYSTEMS UV CURING SYSTEMS

Selection Guide
Light
Curtains
Safety
Components
Optical Touch
Switch
Control
Units
Definition of
Sensing Heights

SF4B-C SF4C SF2C SF4B SF2B BSF4-AH80

DIMENSIONS (Unit: mm in)


The CAD data in the dimensions can be downloaded from our website.

SF4B-CA-J05 SF4B-C


Light curtain

Assembly dimensions

The figure depicts rear mounting using the rear utility mounting bracket MS-SF4BC-2(optional) and the intermediate supporting bracket for utility mounting bracket MS-SF4BC-4(optional).

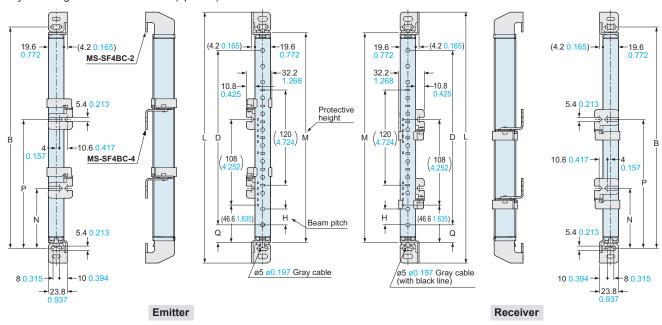
 
<Connector of the pigtailed type (with muting function) SF4B-□CA-J05>



		-	D					-
Mode	el No.	В	SF4B-H□C(A-J05)	SF4B-A□C(A-J05)	L	M	N	Р
SF4B-H12C(A-J05)		279 10.984	220 8.661	_	316.4 12.457	264.4 10.409	_	_
SF4B-H16C(A-J05)	SF4B-A8C(A-J05)	359 14.134	300 11.811	280 11.024	396.4 15.606	344.4 13.559	_	_
SF4B-H20C(A-J05)		439 17.283	380 14.961		476.4 18.756	424.4 16.709		_
SF4B-H24C(A-J05)	SF4B-A12C(A-J05)	519 20.433	460 18.110	440 17.323	556.4 21.906	504.4 19.858		_
SF4B-H28C(A-J05)		599 23.583	540 21.260		636.4 25.055	584.4 23.008		
SF4B-H32C(A-J05)	SF4B-A16C(A-J05)	679 26.732	620 24.409	600 23.622	716.4 28.205	664.4 26.157	_	_
SF4B-H36C(A-J05)		759 29.882	700 27.559	_	796.4 31.354	744.4 29.307	_	_
SF4B-H40C(A-J05)	SF4B-A20C(A-J05)	839 33.031	780 30.709	760 29.921	876.4 34.504	824.4 32.457	399.5 15.728	_
SF4B-H48C(A-J05)	SF4B-A24C(A-J05)	999 39.331	940 37.008	920 36.220	1,036.4 40.803	984.4 38.756	479.5 18.878	_
SF4B-H56C(A-J05)	SF4B-A28C(A-J05)	1,159 45.630	1,100 43.307	1,080 42.520	1,196.4 47.102	1,144.4 45.055	559.5 22.028	_
SF4B-H64C(A-J05)	SF4B-A32C(A-J05)	1,319 51.929	1,260 49.606	1,240 48.819	1,356.4 53.402	1,304.4 51.354	419.5 16.516	858.5 33.799
SF4B-H72C(A-J05)	SF4B-A36C(A-J05)	1,479 58.228	1,420 55.906	1,400 55.118	1,516.4 59.701	1,464.4 57.654	472.5 18.602	965.5 38.012
SF4B-H80C(A-J05)	SF4B-A40C(A-J05)	1,639 64.528	1,580 62.205	1,560 61.417	1,676.4 66.000	1,624.4 63.953	525.5 20.689	1,072.5 42.224
SF4B-H88C(A-J05)	SF4B-A44C(A-J05)	1,799 70.827	1,740 68.504	1,720 67.716	1,836.4 72.299	1,784.4 70.252	578.5 22.776	1,179.5 46.437
SF4B-H96C(A-J05)	SF4B-A48C(A-J05)	1,959 77.126	1,900 74.803	1,880 74.016	1,996.4 78.598	1,944.4 76.551	631.5 24.862	1,286.5 50.650

Model No.	Н	Q
SF4B-H□C(A-J05)	20 0.787	22.2 0.874
SF4B-A□C(A-J05)	40 1.575	42.2 1.661

DIMENSIONS (Unit: mm in)


The CAD data in the dimensions can be downloaded from our website.

SF4B-CA-J05 SF4B-C

Light curtain

Assembly dimensions

The figure depicts space-saving mounting using the rear utility mounting bracket MS-SF4BC-2(optional) and the intermediate supporting bracket for utility mounting bracket MS-SF4BC-4(optional).

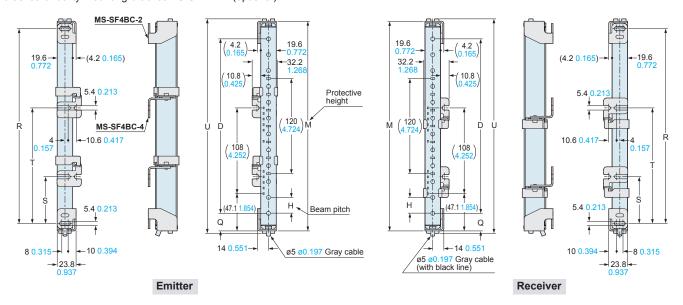

<Connector of the pigtailed type (with muting function) SF4B-□CA-J05>



				1	1			
Mode	el No.	[)	M	R	s	Т	U
Mode	el INO.	SF4B-H□C(A-J05)	A-J05) SF4B-A□C(A-J05)		K	3		0
SF4B-H12C(A-J05)		220 8.661	_	264.4 10.409	245.8 9.677	_	_	270.4 10.646
SF4B-H16C(A-J05)	SF4B-A8C(A-J05)	300 11.811	280 11.024	344.4 13.559	325.8 12.827	_	_	350.4 13.795
SF4B-H20C(A-J05)		380 14.961	_	424.4 16.709	405.8 17.748	_	_	430.4 16.945
SF4B-H24C(A-J05)	SF4B-A12C(A-J05)	460 18.110	440 17.323	504.4 19.858	485.8 19.126	_		510.4 20.094
SF4B-H28C(A-J05)		540 21.260		584.4 23.008	565.8 22.276			590.4 23.244
SF4B-H32C(A-J05)	SF4B-A16C(A-J05)	620 24.409	600 23.622	664.4 26.157	645.8 25.425	_	_	670.4 26.394
SF4B-H36C(A-J05)		700 27.559		744.4 29.307	725.8 28.575	_	_	750.4 29.543
SF4B-H40C(A-J05)	SF4B-A20C(A-J05)	780 30.709	760 29.921	824.4 32.457	805.8 31.724	382.9 15.075		830.4 32.693
SF4B-H48C(A-J05)	SF4B-A24C(A-J05)	940 37.008	920 36.220	984.4 38.756	965.8 38.024	462.9 18.224	_	990.4 38.992
SF4B-H56C(A-J05)	SF4B-A28C(A-J05)	1,100 43.307	1,080 42.520	1,144.4 45.055	1,125.8 44.323	542.9 21.374		1,150.4 45.291
SF4B-H64C(A-J05)	SF4B-A32C(A-J05)	1,260 49.606	1,240 48.819	1,304.4 51.354	1,285.8 50.622	402.9 15.862	841.9 33.146	1,310.4 51.590
SF4B-H72C(A-J05)	SF4B-A36C(A-J05)	1,420 55.906	1,400 55.118	1,464.4 57.654	1,445.8 56.921	455.9 17.949	948.9 37.358	1,470.4 57.890
SF4B-H80C(A-J05)	SF4B-A40C(A-J05)	1,580 62.205	1,560 61.417	1,624.4 63.953	1,605.8 63.220	508.9 20.035	1,055.9 41.571	1,630.4 64.189
SF4B-H88C(A-J05)	SF4B-A44C(A-J05)	1,740 68.504	1,720 67.716	1,784.4 70.252	1,765.8 69.520	561.9 22.122	1,162.9 45.783	1,790.4 70.488
SF4B-H96C(A-J05)	SF4B-A48C(A-J05)	1,900 74.803	1,880 74.016	1,944.4 76.551	1,925.8 75.819	614.9 24.209	1,269.9 49.996	1,950.4 76.787

Model No.	Н	Q
SF4B-H□C(A-J05)	20 0.787	22.2 0.874
SF4B-A□C(A-J05)	40 1.575	42.2 1.661

FIBER SENSORS

LASER SENSORS

PHOTO-ELECTRIC SENSORS MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS

UGHT CURTAINS / SAFETY COMPONENTS PRESSURE / FLOW SENSORS INDUCTIVE PROXIMITY SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS MEASURE-MENT SENSORS

MENT SENSORS STATIC ELECTRICITY PREVENTION DEVICES

LASER MARKERS

PLC

HUMAN MACHINE INTERFACES ENERGY CONSUMPTION VISUALIZATION COMPONENTS

FA COMPONENTS MACHINE VISION SYSTEMS UV CURING

Selection
Guide
Light
Gurtains
Safety
Components
Optical Touch
Switch
Control
Units
Definition of
Sension Heinhits

SF4B-C
SF4C
SF2C
SF4B
SF2B
BSF4AH80

LASER SENSORS

PHOTO-ELECTRIC SENSORS MICRO PHOTO-ELECTRIC SENSORS

AREA SENSORS LIGHT CURTANS/ SAFEIY COMPONENTS PRESSURE / FLOW SENSORS

PARTICULAR USE SENSORS

SENSOR OPTIONS

SIMPLE WIRE-SAVING UNITS

WIRE-SAVING SYSTEMS

MEASURE-MENT SENSORS

STATIC ELECTRICITY PREVENTION DEVICES

LASER MARKERS

HUMAN
MACHINE
INTERFACES
ENERGY
CONSUMPTION
VISUAL ZATION
COMPONENTS
FA
COMPONENTS

PLC

MACHINE VISION SYSTEMS UV CURING SYSTEMS

Selection
Guide
Light
Curtains
Safety
Components
Optical Touch
Switch
Control
Units
Definition of
Sensing Heights

SF4B-C SF4C SF2C SF4B SF2B BSF4-AH80

DIMENSIONS (Unit: mm in)


The CAD data in the dimensions can be downloaded from our website.

SF4B-CA-J05 SF4B-C


Light curtain

Assembly dimensions

The figure depicts side mounting using the side utility mounting bracket MS-SF4BC-3(optional) and the intermediate supporting bracket for utility mounting bracket MS-SF4BC-4(optional).

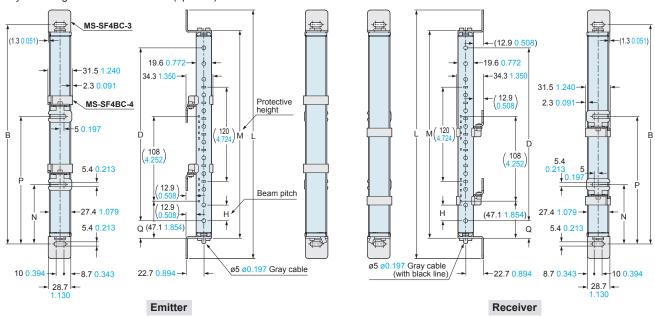
 
<Connector of the pigtailed type (with muting function) SF4B-□CA-J05>



		_	D					_
Mode	el No.	В	SF4B-H□C(A-J05)	SF4B-A□C(A-J05)	L	M	N	Р
SF4B-H12C(A-J05)		279 10.984	220 8.661	_	316.4 12.457	264.4 10.409	_	_
SF4B-H16C(A-J05)	SF4B-A8C(A-J05)	359 14.134	300 11.811	280 11.024	396.4 15.606	344.4 13.559	_	_
SF4B-H20C(A-J05)		439 17.283	380 14.961	_	476.4 18.756	424.4 16.709	_	_
SF4B-H24C(A-J05)	SF4B-A12C(A-J05)	519 20.433	460 18.110	440 17.323	556.4 21.906	504.4 19.858	_	_
SF4B-H28C(A-J05)		599 23.583	540 21.260	_	636.4 25.055	584.4 23.008	_	_
SF4B-H32C(A-J05)	SF4B-A16C(A-J05)	679 26.732	620 24.409	600 23.622	716.4 28.205	664.4 26.157	_	_
SF4B-H36C(A-J05)		759 29.882	700 27.559	_	796.4 31.354	744.4 29.307	_	_
SF4B-H40C(A-J05)	SF4B-A20C(A-J05)	839 33.031	780 30.709	760 29.921	876.4 34.504	824.4 32.457	399.5 15.728	_
SF4B-H48C(A-J05)	SF4B-A24C(A-J05)	999 39.331	940 37.008	920 36.220	1,036.4 40.803	984.4 38.756	479.5 18.878	_
SF4B-H56C(A-J05)	SF4B-A28C(A-J05)	1,159 45.630	1,100 43.307	1,080 42.520	1,196.4 47.102	1,144.4 45.055	559.5 22.028	_
SF4B-H64C(A-J05)	SF4B-A32C(A-J05)	1,319 51.929	1,260 49.606	1,240 48.819	1,356.4 53.402	1,304.4 51.354	419.5 16.516	858.5 33.799
SF4B-H72C(A-J05)	SF4B-A36C(A-J05)	1,479 58.228	1,420 55.906	1,400 55.118	1,516.4 59.701	1,464.4 57.654	472.5 18.602	965.5 38.012
SF4B-H80C(A-J05)	SF4B-A40C(A-J05)	1,639 64.528	1,580 62.205	1,560 61.417	1,676.4 66.000	1,624.4 63.953	525.5 20.689	1,072.5 42.224
SF4B-H88C(A-J05)	SF4B-A44C(A-J05)	1,799 70.827	1,740 68.504	1,720 67.716	1,836.4 72.299	1,784.4 70.252	578.5 22.776	1,179.5 46.437
SF4B-H96C(A-J05)	SF4B-A48C(A-J05)	1,959 77.126	1,900 74.803	1,880 74.016	1,996.4 78.598	1,944.4 76.551	631.5 24.862	1,286.5 50.650

Model No.	Н	Q
SF4B-H□C(A-J05)	20 0.787	22.2 0.874
SF4B-A□C(A-J05)	40 1.575	42.2 1.661