# imall

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



# Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832 Email & Skype: info@chipsmall.com Web: www.chipsmall.com Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China





# UM0458 User manual

## STEVAL-IFS009V1 extension for SN250 network processor

#### Introduction


This user manual describes the STEVAL-IFS009V1 ZigBee<sup>®</sup> extension hardware. It includes a block diagram, schematics of the extension, and a bill of material and assembly instructions.

The STEVAL-IFS009V1 operates in standalone mode. Alternatively it can be used as a SN250 ZigBee interface with an application using an STR9 dongle.

The SN250 integrates a 2.4 GHz IEEE802.15.4-compliant transceiver with a 16-bit XAP2b microprocessor. It features embedded Flash and RAM memories, as well as peripherals useful to design ZigBee-based applications.

The extension board is supplied with a demonstration firmware loaded in the SN250 Flash memory. The firmware source code is not provided by STMicroelectronics.

The STEVAL-IFS009V1 is delivered with a CD-ROM containing technical documentation. This information is also available on ww.st.com/zigbee.

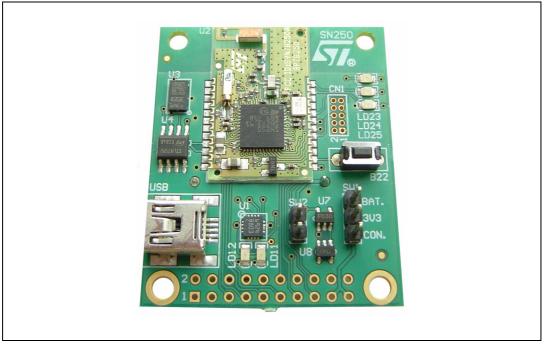

#### Figure 1. STEVAL-IFS009V1 extension board

# Contents

Block	diagrar	n	3	
1.1	Schema	tics	4	
1.2	PCB lay	out	5	
1.3	Bill of material			
1.4	Connection of STR9 ZigBee extension to the STR9 dongle			
1.5	Board s	upply	7	
	1.5.1	Supply from battery	7	
	1.5.2	Battery charging	7	
	1.5.3	Supply directly from pins	8	
1.6	Board st	torage recommendation	8	
1.7	Measure	ements	8	
	1.7.1	Battery measurement	8	
	1.7.2	Output voltage measurement	8	
1.8	Firmwar	e	8	
Revisi	ion hist	ory	9	
	<ol> <li>1.1</li> <li>1.2</li> <li>1.3</li> <li>1.4</li> <li>1.5</li> <li>1.6</li> <li>1.7</li> <li>1.8</li> </ol>	<ol> <li>Schema</li> <li>Schema</li> <li>PCB lay</li> <li>Bill of m</li> <li>Connect</li> <li>Board s</li> <li>1.5.1</li> <li>1.5.2</li> <li>1.5.3</li> <li>Board s</li> <li>1.7 Measure</li> <li>1.7.1</li> <li>1.7.2</li> <li>Firmwar</li> </ol>	<ul> <li>1.2 PCB layout</li></ul>	



## 1 Block diagram

The main features of the extension board are the following:

- SPZB250 radio communication module based on SN250 ZigBee network processor
- LIS302DL Digital MEMS in LGA14 package (optional)

It can be accessed by the ZigBee network processor through an I<sup>2</sup>C bus.


- STLM75 temperature sensor or compatible device in SO8 package (optional). It is connected to the ZigBee network processor through an I<sup>2</sup>C bus.
- Digital interfaces: one I<sup>2</sup>C and one SPI interface which can be used indifferently by the SN250 ZigBee network processor to interface with the STR9 dongle
- Supply voltage

The extension board can be supplied externally from the STR9 dongle or internally by an on-board Ion-Li battery. The battery has a capacity of 65 mA hours which allows approximately one hour of operation. It is charged through a mini USB connector. 2 LEDs can be used to monitor the charging:

- Red LED: charge in progress
- Green LED: charge completed
- 1 button connected to the SN250 ZigBee network processor WAKE\_UP input
- 3 LEDs connected to the SN250 ZigBee network processor:
  - Yellow LED: device connected
  - Green LED: transmission ongoing
  - Red LED: general purpose
- A debug port

Figure 2 shows the STEVAL-IFS009V1 extension block diagram.


#### Figure 2. STEVAL-IFS009V1 extension block diagram

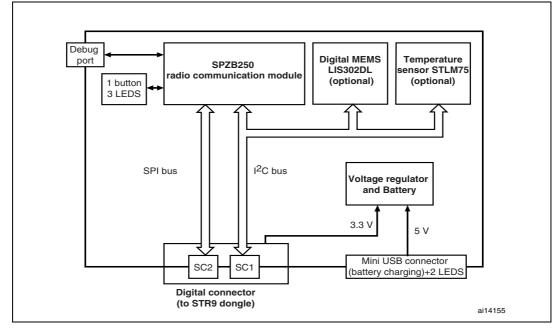



# UM0458

# 1.1 Schematics

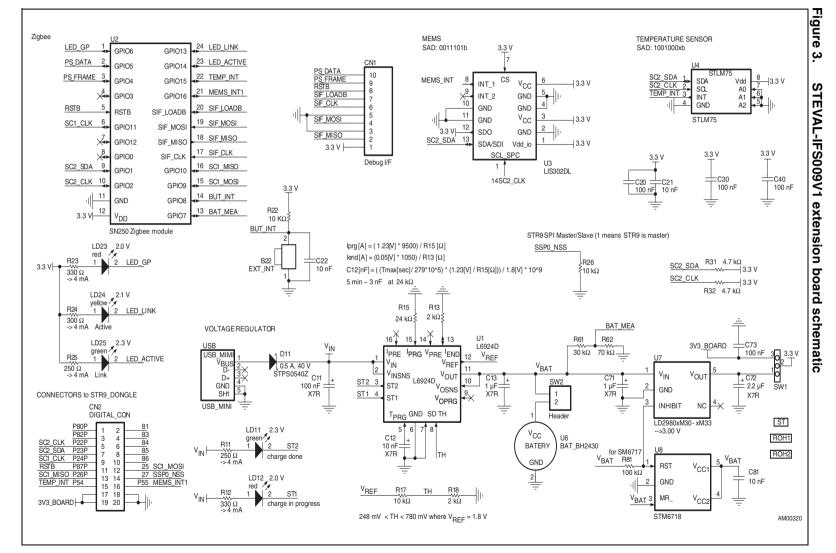


4/10


5

# 1.2 PCB layout



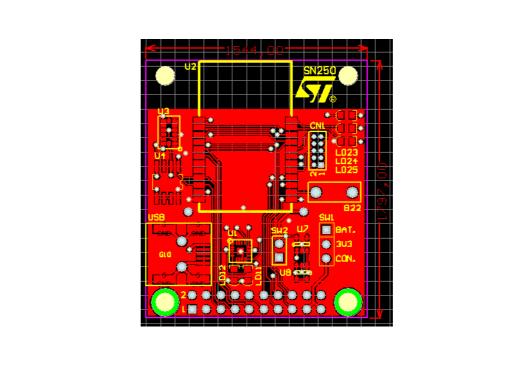



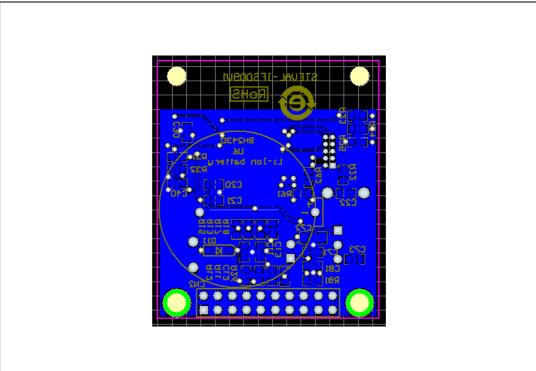



### 1.3 Bill of material

Table 1 shows the bill of material for the STEVAL-IFS009V1 extension board.

Designator	Footprint	Description	Assembled	Order code	
U1	L6924D	L6924D	Yes	ST: L6924D	
U2	SN250_ST_module - duplicate	SN250 ZigBee module	Yes	ST: SPZB250	
U3	LGA14AD	LIS302DL	Yes	ST: LIS302DL	
U4	SO8	STLM75	Yes	ST: STLM75	
U6	BH2430	BAT_BH2430	Yes	GM: BH2430 (holder) and B-LIR2430 (battery)	
U7	SOT23-5L	LD2980Cx30	Yes	ST: LD2980Cx30	
U8	SOT23-5L	STM6718	Yes	ST: STM6718T	
USB	USB_MINI	USB_MINI	Yes	GM: USB MINI B F SMD (832-177)	
CN1	Header 2X5	Debug I/F	Yes	Samtec: FTSH-114-04-F- DV	
CN2	Header 2X10	DIGITAL_CON	No	GM: BL220G	
SW1	Header 1x3	Power switch	Yes	GM: S1G20	
SW2	Header1x2	Battery switch	Yes	GM: S1G20	
B22	Button_DT2112C	EXT_INT	Yes	GM: P-DT2112C	
D11	SOD-123	STPS0540Z	Yes	ST: STPS0540Z	
LD11, LD25	D0805	green	Yes	GM: 960-023	
LD12, LD23	D0805	red	Yes	GM: 960-024	
LD24 D0805		yellow	Yes	GM: 960-025	
C12, C21, C22, C81	0805	10 nF	Yes	Farnell: 422-7153 (X7R)	
C11, C20, C30, C40, C73	0805	100 nF	Yes	Farnell: 422-7189 (X7R)	
C13, C71 0805		1 µF	Yes	Farnell: 422-7086 (X7R)	
C72	C72 1206		Yes	Farnell: 422-7323 (X7R)	
R11, R25	0805	250 Ω	Yes	GM: R0805-250R	
R24	R24 0805		Yes	GM: R0805-300R	
R12, R23	0805	330 Ω	Yes	GM: R0805-330R	
R13, R18	R13, R18 0805		Yes	GM: R0805-2k	
R31, R32	R31, R32 0805		Yes	GM: R0805-4k7	
R17, R22, R26	R17, R22, R26 0805		Yes	GM: R0805-10k	
R15 0805		24 kΩ Yes GM: F		GM: R0805-24k	

#### Table 1. Bill of material



Designator	Footprint	Description	Assembled	Order code	
R61	0805	30 kΩ	Yes	GM: R0805-30k	
R62	0805	70 kΩ	Yes	GM: R0805-70k	
R81	0805	100 kΩ	No	GM: R0805-100k	

#### Table 1.Bill of material (continued)

#### 1.4 Connection of STR9 ZigBee extension to the STR9 dongle

This section provides additional information on how to connect the STR9 ZigBee extension board to the STR9 dongle (see *Figure 3*).

- I<sup>2</sup>C bus
  - The STR912, SN250, LIS302DL (MEMS), and STLM75 temperature sensor communicate through the I<sup>2</sup>C bus. The SN250 is connected to the STR9 dongle through SC1 I<sup>2</sup>C connector.
  - The master can be either the dongle STR912 (STR912FAW34, STR912FAW42 and STR912FAW44) or the SN250 ZigBee network processor.
- SPI bus
  - The SPI bus is shared between the STR12 and SN250. The SN250 is connected to the STR9 dongle through SC2 SPI connector.
  - The dongle STR912 is configured to operate as a master by connecting the input SSP0\_NSS of the SPI bus to V<sub>DDQ</sub> through the pull-up resistor R26.
  - The SC2\_SEL input is used to select the ZigBee module. It is connected to P80 pin of the STR9 dongle.
- Power supply
  - The board can be supplied directly by the STR9 dongle, please refer to Section 1.5.3.

#### 1.5 Board supply

#### 1.5.1 Supply from battery

Board is typically supplied from battery. Li-Ion LIR2430 rechargable battery is recommended. Capacity of 65 mAh gets to ZigBee board several hours of life. In the battery operation mode SW1 is closed and SW2 is close on pins 3V3 and BAT. Have in mind there is a protection against total battery discharge. When the battery voltage goes below 3.075 V (typ.) the voltage supervisor activates the inhibit pin of voltage regulator.

#### 1.5.2 Battery charging

Charging process starts automatically when USB (mini-USB) is connected. Let's remind there are no data on the USB, it's used just for charging. SW2 must be close during charging.

When charging red led LD12 is turned-on and green led LD11 turned-off.

When charged/done the green led LD11 turned-on and red led LD12 is turned-off.



When error occurs, e.g. battery is missing, both leds red LD12 and green LD11 are turnedon.

It's good to keep SW1 open, to be able to charge the battery. It is possible to charge battery even the SW1 is closed (board in operation mode) but the charging process starts again and again.

#### 1.5.3 Supply directly from pins

It's possible to charge the board directly from the pins of CN2. In this case the SW1 is closing 3V3 and CON. pins. This connector is compatible with STR9\_DONGLE (STEVAL-IFS0001V1). Please refer to UM0282.

#### **1.6 Board storage recommendation**

When not using the board for longer time, It's strongly recommended to remove or disconnect (SW2 open) the battery from the board.

#### 1.7 Measurements

#### 1.7.1 Battery measurement

It is possible to use SW2 for measurement: battery voltage or current (closing by ampermeter).

#### 1.7.2 Output voltage measurement

It is possible to use SW1 to measure final voltage outcoming from the voltage regulator.

#### 1.8 Firmware

Firmware is pre-flashed. For your own application development you need to have a tool. STMicroelectronics offers: www.st.com/stonline/products/literature/bd/13503/sndev-250.htm.

Note: The demonstration firmware embedded in the SN250 Flash memory manages the communications with the STML75 and the MEMS through the I<sup>2</sup>C interface. The user can interact with the SN250 through its UART which is connected to CN2. SPI communications are not supported. However the demonstration firmware can be modified and reprogrammed into the Flash memory.



# 2 Revision history

vision history

Date	Revision	Changes
13-Nov-2007	1	Initial release.
18-Apr-2008	2	Changed title to "STEVAL-IFS009V1, extension for SN250 network processor". Updated Section : Introduction, Figure 1: STEVAL-IFS009V1 extension board, Figure 3: STEVAL-IFS009V1 extension board schematic, Figure 4: Top view, Figure 5: Bottom view, and Table 1: Bill of material. Added Note: in Section 1.4: Connection of STR9 ZigBee extension to the STR9 dongle.
09-Oct-2008	3	Updated <i>Figure 1, Figure 3, Table 1</i> (U8 - ST: STM6718 changed to ST: STM6718T, <i>Section 1.4</i> , added <i>Section 1.5</i> to <i>Section 1.8</i> , moved <i>Note:</i> from <i>Section 1.4</i> into <i>Section 1.8</i> ,

#### Please Read Carefully:

Information in this document is provided solely in connection with ST products. STMicroelectronics NV and its subsidiaries ("ST") reserve the right to make changes, corrections, modifications or improvements, to this document, and the products and services described herein at any time, without notice.

All ST products are sold pursuant to ST's terms and conditions of sale.

Purchasers are solely responsible for the choice, selection and use of the ST products and services described herein, and ST assumes no liability whatsoever relating to the choice, selection or use of the ST products and services described herein.

No license, express or implied, by estoppel or otherwise, to any intellectual property rights is granted under this document. If any part of this document refers to any third party products or services it shall not be deemed a license grant by ST for the use of such third party products or services, or any intellectual property contained therein or considered as a warranty covering the use in any manner whatsoever of such third party products or services or any intellectual property contained therein.

UNLESS OTHERWISE SET FORTH IN ST'S TERMS AND CONDITIONS OF SALE ST DISCLAIMS ANY EXPRESS OR IMPLIED WARRANTY WITH RESPECT TO THE USE AND/OR SALE OF ST PRODUCTS INCLUDING WITHOUT LIMITATION IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE (AND THEIR EQUIVALENTS UNDER THE LAWS OF ANY JURISDICTION), OR INFRINGEMENT OF ANY PATENT, COPYRIGHT OR OTHER INTELLECTUAL PROPERTY RIGHT.

UNLESS EXPRESSLY APPROVED IN WRITING BY AN AUTHORIZED ST REPRESENTATIVE, ST PRODUCTS ARE NOT RECOMMENDED, AUTHORIZED OR WARRANTED FOR USE IN MILITARY, AIR CRAFT, SPACE, LIFE SAVING, OR LIFE SUSTAINING APPLICATIONS, NOR IN PRODUCTS OR SYSTEMS WHERE FAILURE OR MALFUNCTION MAY RESULT IN PERSONAL INJURY, DEATH, OR SEVERE PROPERTY OR ENVIRONMENTAL DAMAGE. ST PRODUCTS WHICH ARE NOT SPECIFIED AS "AUTOMOTIVE GRADE" MAY ONLY BE USED IN AUTOMOTIVE APPLICATIONS AT USER'S OWN RISK.

Resale of ST products with provisions different from the statements and/or technical features set forth in this document shall immediately void any warranty granted by ST for the ST product or service described herein and shall not create or extend in any manner whatsoever, any liability of ST.

ST and the ST logo are trademarks or registered trademarks of ST in various countries.

Information in this document supersedes and replaces all information previously supplied.

The ST logo is a registered trademark of STMicroelectronics. All other names are the property of their respective owners.

© 2008 STMicroelectronics - All rights reserved

STMicroelectronics group of companies

Australia - Belgium - Brazil - Canada - China - Czech Republic - Finland - France - Germany - Hong Kong - India - Israel - Italy - Japan -Malaysia - Malta - Morocco - Singapore - Spain - Sweden - Switzerland - United Kingdom - United States of America

www.st.com

