



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us


Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



 RTFM

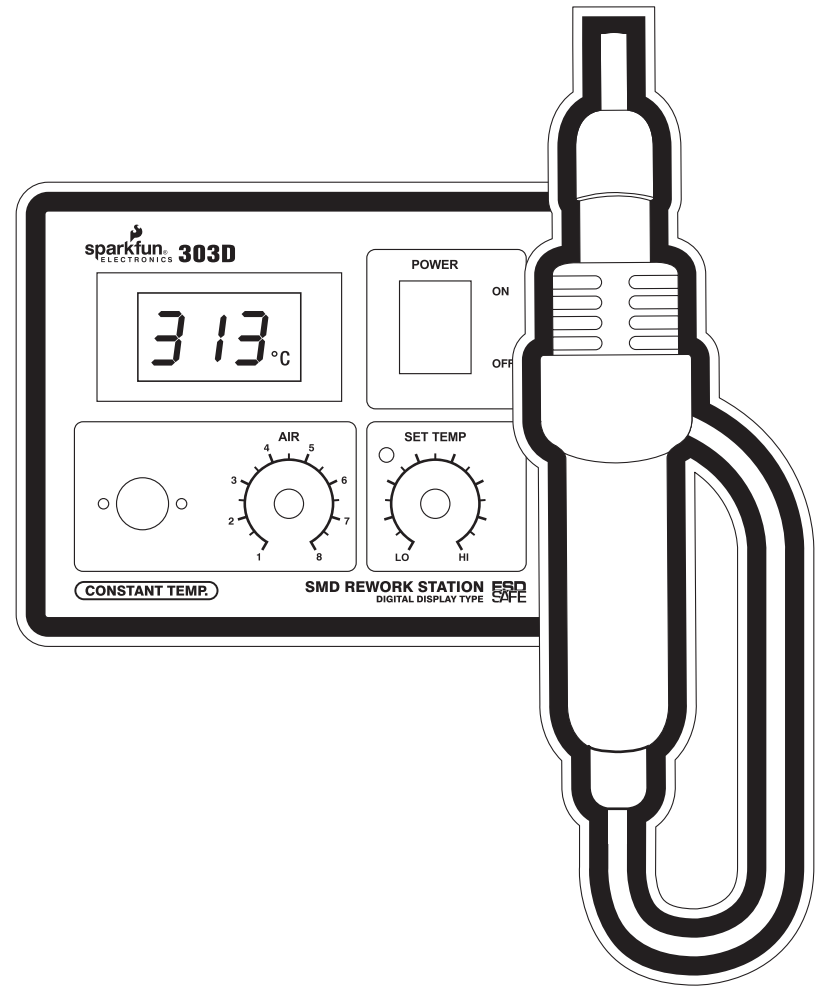

Hot Air Rework Station - 303D

Information & Instructions



This is a hot-air rework station – the ultimate in hot air puffing tools. That means it gets really hot. Be careful not to burn yourself, your friends, your neighbors, or melt anything that doesn't need melting. All the metal parts on the hot-air wand get hot, so only touch the plastic handle. Do not bestow this upon children – power like this belongs in the hands of adults.

The unit will remain hot even after you turn it off. Leave the unit plugged in to let the 303D's self-cooling function take care of business. This can take up to 10 minutes.

If you are not going to use the unit for long periods of time, unplug it because it uses a small-amount of power even when not in use.

The unit is built to last, but it has some fragile parts that don't like being dropped or jolted around (who does, right?). Be gentle!

Use

1. Attach one of the nozzles to the wand. Tighten the screw to hold it in place.
2. Plug the 303D in to your very favorite outlet. The heating element and blower will remain off until you flip the power switch to ON.
3. Flip said power switch to ON. The heating element will fire up and the air will get very hot, very quickly, so aim the nozzle accordingly. The red LED will pulse, indicating that "Hey, I'm ready to melt some stuff." It's possible that little whimsical puffs of white smoke will emit from the nozzle. Those are just magical solder clouds and are normal. They will go away, so enjoy them while they last.
4. There are two control knobs – one for airflow and one for temperature. Adjust them to suit your needs.*
5. When you've got your settings honed in, carefully aim the nozzle at the area you are working on. Saying the magic spell (meltum, meltum, meltum), move the nozzle back and forth until the solder begins to flow. Then remove/reposition the part you want to rework.
5. When you are done, flip the power switch to OFF. The self-cooling will kick on and last for a few minutes.

*** We recommend setting the air flow and temperature knobs to the middle and then test reflow on a small component.**

Important Note

Don't unplug the unit until the self-cooling is finished – doing so can damage the heating element and that is so not cool. Give the rework station a solid 5-10 minutes to cool down, then unplug.

For further instructions on use, changing the heating element, and video of the 303D in action, please visit www.sparkfun.com/reworkstation

Station Specifications

Power: 110V


Hot Air Temp. Range: 100° C to 480° C

Air Capacity: 23L/min (maximum)


Weight: 0.5 stone (7 pounds)

! Heating Element Replacement Caution: The main switch must be OFF and the wand allowed to cool before attempting the following procedure.

- 1** Unscrew the three screws on handle, slide the rubber cord housing from the handle then separate the two halves of the handle.

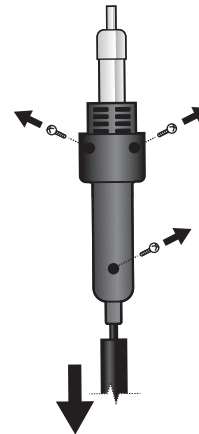


- 2** Disconnect the grounding wire, red and yellow leads and main power connector.

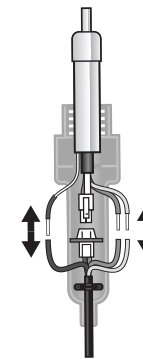

- 3** Remove the heating element from the metal tube, taking care not to damage the ring of quartz glass or mica insulation inside the tube.



Heating Element: TOL-11130

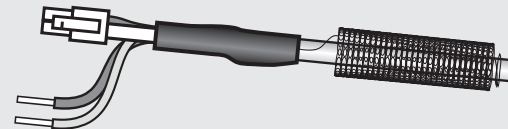

SparkFun replacement heating element.
100-120V/250W