



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts,Customers Priority,Honest Operation,and Considerate Service",our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China





Quick Start Guide


TWR-LCDC-EPSON

Epson Display Controller Module



TOWER SYSTEM

Get to know the TWR-LCDC-EPSON

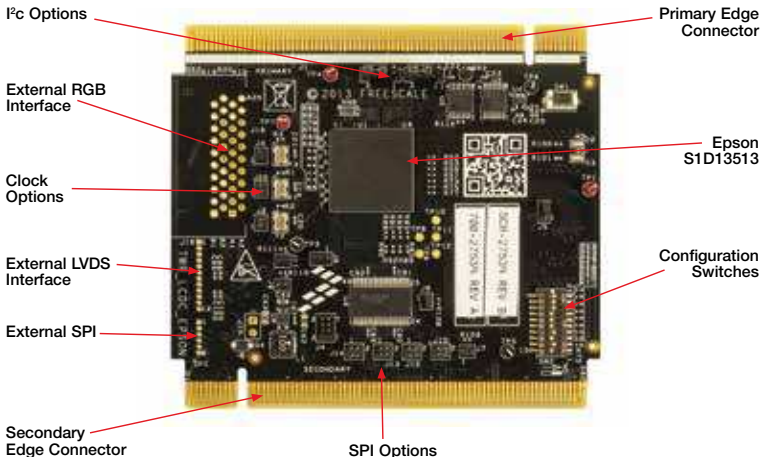

TWR-LCDC-EPSON Freescale Tower System

The TWR-LCDC-EPSON module is part of the Freescale Tower System portfolio, a modular development platform that enables rapid prototyping and tool re-use through reconfigurable hardware. Elevate your design to the next level with this industrial powerhouse by building your Tower System today.

TWR-LCDC-EPSON Features

- Features the Epson S1D13513 display controller
- Onboard SDRAM
- Interfaces with a Tower System controller module via the parallel external memory interface (EBI)
- Interfaces directly with the TWR-LCD-RGB
- Optional interfaces for externally connected RGB or LVDS display panels
- Selectable SPI and I²C pass-through interfaces for LCD/touch configurations

Step-by-Step Installation Instructions

1 Assemble the Tower System

The default example application assumes the following Tower assembly: TWR-ELEV + TWR-K60D100M + TWR-LCD-RGB + TWR-LCDC-EPSON

Ensure that the Tower System modules are properly aligned to the primary and secondary edges, with the TWR-LCD-RGB attached to the secondary side.

2 Program the Tower System Controller

Using an IDE compatible with the TWR-K60D100M, such as CodeWarrior, follow the respective flashing instruction included with the default example application.

3 Interact with the Graphical User Interface

The default example application features a simple GUI developed using PEG and featuring the CRTouch to provide touch inputs.

4 Learn More

Refer to freescale.com/TWR-LCDC-EPSON for additional information, including a request link for a PEG evaluation based on the TWR-LCDC-EPSON pre-compiled PEG library.

I VWR-LCDC-EPSON Jumper Settings

Jumper	Option	Setting	Description
J2	27 MHz OSC Disable	1-2	Disables the onboard 27 MHz oscillator connected to S1D13513 OSCI2
J3	10 MHz OSC Disable	1-2	Disables the onboard 10 MHz oscillator connected to S1D13513 CLKI3
J4	External LED Backlight Configuration	1-2	Disables external LED Backlight (signals routed to J15 for off-board use)
		3-4	3-4 short, 5-6 open, 7-8 open: 20 mA load
		5-6	3-4 short, 5-6 short, 7-8 open: 40 mA load
		7-8	3-4 short, 5-6 short, 7-8 short: 60 mA load
J5	SDRAM Width Select	1-2	x32 SDRAM (32 MB)
		2-3	X64 SDRAM (64 MB)
J6	Enable RGB Interface	1-2	Enables the RGB interface to the Tower System elevator, additionally signals are routed to J19 for off-board use
J7	LCD Enable Signal (TWR-LCD-RGB)	1-2	LCD enable signal for the TWR-LCD-RGB. J7 is actively pulled high, shunting connects the LCD enable to GND



I VVR-LVDC-EPSON Jumper Settings

Continued

Jumper	Option	Setting	Description
J8	SPI CS Inverter Enable	1-2	Inverts the S1D13513 GPIO0 signal (refer to the S1D1513 for usage details)
		2-3	Direct connection of the S1D13513 GPIO0 signal
J9	External LVDS Data Strobe Polarity	1-2	Unshunted: Rising edge data strobe Shunted: Falling edge data strobe
J10	SPI CS Routing Configuration	1-2	Routes the S1D13513 GPIO0 signal to JP1 (pin 1) for off-board use
		3-4	Routes the primary elevator SPI1 to the secondary elevator SPI2
		1-3	Routes the S1D13513 GPIO0 signal to secondary elevator SPI2 CS
		2-4	Routes the primary elevator SPI1 CS to JP1 (pin 1) for off-board use
J11	External LVDS Disable	1-2	Disables the LVDS transmitter (signals routed to J16 for off-board use)

I VVR-LCDC-EPSON Jumper Settings

Continued

Jumper	Option	Setting	Description
J12	SPI CLK Routing Configuration	1-2	Routes the S1D13513 GPIO1 signal to JP1 (pin 2) for off-board use
		3-4	Routes the primary elevator SPI1 to the secondary elevator SPI2
		1-3	Routes the S1D13513 GPIO1 signal to secondary elevator SPI2 CLK
		2-4	Routes the primary elevator SPI1 CLK to JP1 (pin 2) for off-board use
J13	SPI MOSI Routing Configuration	1-2	Routes the S1D13513 GPIO2 signal to JP1 (pin 2) for off-board use
		3-4	Routes the primary elevator SPI1 to the secondary elevator SPI2
		1-3	Routes the S1D13513 GPIO2 signal to secondary elevator SPI2 MOSI
		2-4	Routes the primary elevator SPI1 MOSI to JP1 (pin 2) for off-board use

I VVR-LCDC-EPSON Jumper Settings

Continued

Jumper	Option	Setting	Description
J14	SPI MISO Routing Configuration	1-2	Routes the S1D13513 GPIO3 signal to JP1 (pin 2) for off-board use
		3-4	Routes the primary elevator SPI1 to the secondary elevator SPI2
		1-3	Routes the S1D13513 GPIO3 signal to secondary elevator SPI2 MISO
		2-4	Routes the primary elevator SPI1 MISO to JP1 (Pin 2) for off-board use
J17	I ² C (SDA) Pass-Thru Selection	1-2	Routes the primary elevator I ² C0 to secondary elevator I ² C2
		2-3	Routes the primary elevator I ² C1 to secondary elevator I ² C2
J18	I ² C (SCL) Pass-Through Selection	1-2	Routes the primary elevator I ² C0 to secondary elevator I ² C2
		2-3	Routes the primary elevator I ² C1 to secondary elevator I ² C2
J20	10 MHz OSC Disable	1-2	Disables the onboard 10 MHz oscillator connected to S1D13513 OSC1

I VWR-LCDC-EPSON Switch Settings

Switch	Option	Setting	Description
SW1	Reset	Push	Resets the S1D13513
SW2 [1:5]	S1D13513 Host Bus Interface Settings	1	Maps to S1D13513 CNF[0:4] (ON = 1 / OFF = 0) Default setting for Tower System is [On,On,On,Off,Off] Corresponding to Parallel Direct 68 bus interface
		2	
		3	
		4	
		5	
SW2 [6]	S1D13513 Endianness Setting	6	Maps to S1D13513 CNF[5] (ON = 1 / OFF = 0) Default setting for Tower System is [Off] Corresponding to Little Endian mode
SW2 [7]	S1D13513 Configuration Mode	7	Maps to S1D13513 CNF[6] (ON = 1 / OFF = 0) Default setting for Tower System is [On]

I VVR-LCDC-EPSON Jumper Settings

Continued

Jumper	Option	Setting	Description
SW2 [8:9]	S1D13513 PLL Clock Source	8	Maps to S1D13513 CNF[7:8] (ON = 1 / OFF = 0) Default setting for Tower System is [Off,On] [Off,Off] = Use CLK13 clock source (refer to J3) [On,Off] = Use BUSCLK (not applicable for direct interfaces)
		9	[Off,On] = Use OCSI1 clock source (refer to J20) [On,On] = Use OSCI2 clock source (refer to J2)
SW2 [10]	Not Used	10	





Visit freescale.com/TWR-LCDC-EPSON for the latest information on the TWR-LCDC-EPSON Epson display controller module, including:

- Quick start guide
- Schematics

Support

Visit freescale.com/support for a list of phone numbers within your region.

Warranty

Visit freescale.com/warranty for complete warranty information.

For more information, visit freescale.com/Tower

Join the online Tower community at towergeeks.org

Freescale and the Freescale logo are trademarks of Freescale Semiconductor, Inc., Reg. U.S. Pat. & Tm. Off. Tower is a trademark of Freescale Semiconductor, Inc. All other product or service names are the property of their respective owners. © 2013 Freescale Semiconductor, Inc.

