

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China







Features

- Full Wave Current Sensing
- Compensated Mains Supply Variations
- Variable Soft Start or Load-current Sensing
- Voltage and Current Synchronization
- Switchable Automatic Retriggering
- Triggering Pulse Typically 125 mA
- Internal Supply-voltage Monitoring
- Current Requirement ≤3 mA




Applications

- Low-cost Motor Control
- Domestic Appliance

1. Description

The U2008B is designed as a phase-control circuit in bipolar technology. It enables load-current detection as well as mains-compensated phase control. Motor control with load-current feedback and overload protection are preferred applications.

Figure 1-1. Block Diagram with Typical Circuit: Load Current Sensing

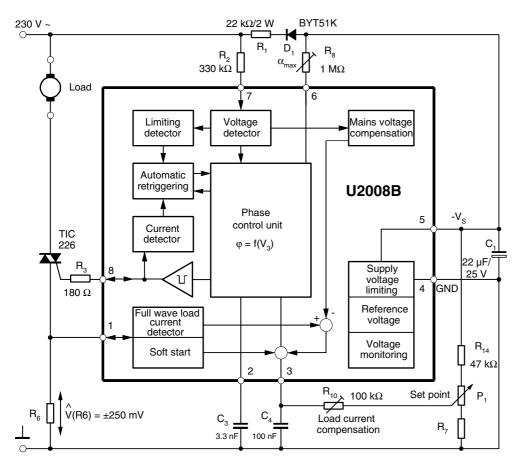



Low-cost Phase-control IC with Soft Start

U2008B


 






Figure 1-2. Block Diagram with Typical Circuit: Soft Start

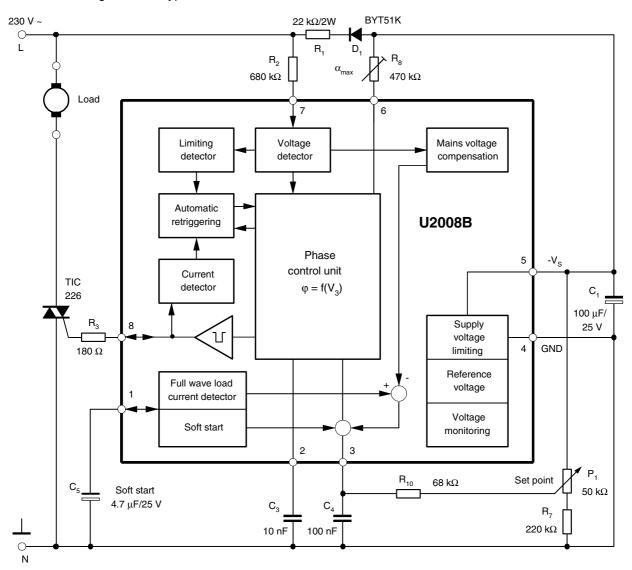

2. Pin Configuration

Figure 2-1. Pinning

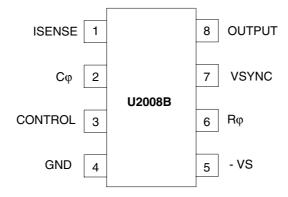


Table 2-1. Pin Description

Pin	Symbol	Function
1	ISENSE	Load current sensing
2	Сф	Ramp voltage
3	CONTROL	Control input/compensation output
4	GND	Ground
5	-VS	Supply voltage
6	Rφ	Ramp current adjustment
7	VSYNC	Voltage synchronization
8	OUTPUT	Trigger output

2.1 Mains Supply, Pin 5

The integrated circuit U2008B, which also contains voltage limiting, can be connected via D_1 and R_1 to the mains supply, see Figure 1-2 on page 2. Supply voltage, between Pin 4 (pos., \perp) and Pin 5, is smoothed by C_1 .

The series resistance R1 can be calculated as follows:

$$R_{1max} = 0.85 \times \frac{V_{M} - V_{Smax}}{2 \times I_{tot}}$$

where:

V_M = Mains voltage

V_{Smax} = Maximum supply voltage

 I_{tot} = I_{Smax} + I_x = Total current compensation I_{Smax} = Maximum current consumption of the IC

I_x = Current consumption of the external components

Operation with externally stabilized DC voltage is not recommended.





2.2 Voltage Monitoring

When the voltage is built up, uncontrolled output pulses are avoided by internal voltage monitoring. Apart from that, all latches of the circuit (phase control, load limit regulation) are reset and the soft start capacitor is short circuited. This guarantees a specified start-up behavior each time the supply voltage is switched on or after short interruptions of the mains supply. Soft start is initiated after the supply voltage has been built up. This behavior guarantees a gentle start-up for the motor and automatically ensures the optimum run-up time.

2.3 Phase Control, Pin 6

The function of the phase control is identical to that of the well-known IC U211B. The phase angle of the trigger pulse is derived by comparing the ramp voltage V_2 at Pin 2 with the set value on the control input, Pin 3. The slope of the ramp is determined by C_3 and its charging current I φ .

The charging current can be regulated, changed or altered using R₈ at Pin 6.

The maximum phase angle, α_{max} , (minimum current flow angle ϕ_{min}) can also be adjusted by using R₈ (see Figure 5-1 on page 7).

When the potential on Pin 2 reaches the set point level of Pin 3, a trigger pulse is generated whose pulse width, t_p , is determined from the value of C_3 ($t_p = 9 \,\mu\text{s/nF}$, Figure 5-3 on page 8). At the same time, a latch is set with the output pulse, as long as the automatic retriggering has not been activated, then no more pulses can be generated in that half cycle. Control input at Pin 3 (with respect to Pin 4) has an active range from -9 V to -2 V. When $V_3 = -9 \,\text{V}$ the phase angle is at its maximum amax, i.e., the current flow angle is minimum. The minimum phase angle amin is set with $V_3 \ge -1 \,\text{V}$.

2.4 Automatic Retriggering

The current-detector circuit monitors the state of the triac after triggering by measuring the voltage drop at the triac gate. A current flow through the triac is recognized when the voltage drop exceeds a threshold level of typically 40 mV.

If the triac is quenched within the relevant half wave after triggering (for example owing to low load currents before or after the zero crossing of current wave, or for commutator motors, owing to brush lifters), the automatic retriggering circuit ensures immediate retriggering, if necessary with a high repetition rate, $t_{\rm po}/t_{\rm p}$, until the triac remains reliably triggered.

2.5 Current Synchronization, Pin 8

Current synchronization fulfils two functions:


- Monitoring the current flow after triggering. In case the triac extinguishes again or it does not switch on, automatic triggering is activated as long as triggering is successful.
- Avoiding triggering due to inductive load. In the case of inductive load operation, the current synchronization ensures that in the new half wave no pulse is enabled as long as there is a current available from the previous half wave, which flows from the opposite polarity to the actual supply voltage.

A special feature of the IC is the realization of current synchronization. The device evaluates the voltage at the pulse output between the gate and reference electrode of the triac. This results in saving the separate current synchronization input with specified series resistance.

2.6 Voltage Synchronization with Mains Voltage Compensation, Pin 7

The voltage detector synchronizes the reference ramp with the mains supply voltage. At the same time, the mains-dependent input current at Pin 7 is shaped and rectified internally. This current activates automatic retriggering and at the same time is available at Pin 3 (Figure 5-5 on page 9). By suitable dimensioning, it is possible to attain the specified compensation effect. Automatic retriggering and mains voltage compensation are not activated until $|V_7 - V_4|$ increases to 8 V. The resistance $R_{\text{sync.}}$ defines the width of the zero voltage cross-over pulse, synchronization current, and hence the mains supply voltage compensation current. If the mains voltage compensation and the automatic retriggering are not required, both functions can be suppressed by limiting $|V_7 - V_4| \le 7 V$ (see Figure 2-2).

Figure 2-2. Suppression of Automatic Retriggering and Mains Voltage Compensation

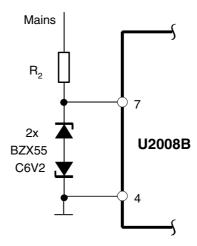

A further feature of the IC is the selection between soft start and load-current compensation. Soft start is possible by connecting a capacitor between Pin 1 and Pin 4 (Figure 5-4 on page 8). In the case of load-current compensation, Pin 1 is directly connected with resistance R_6 , which is used for sensing load current.

2.7 Load Current Detection, Pin 1

The circuit continuously measures the load current as a voltage drop at resistor R_6 . The evaluation and use of both half waves results in a quick reaction to load-current change. Due to voltage at resistor R_6 , there is an increase of input current at Pin 1. This current increase controls the internal current source, whose positive current values are available at Pin 3 (see Figure 5-7 on page 9). The output current generated at Pin 3 contains the difference from the load-current detection and the mains-voltage compensation (see Figure 5-5 on page 9).

The effective control voltage is the final current at Pin 3 together with the desired value network. An increase of mains voltage causes an increase of the control angle α . An increase of load current results in a decrease of the control angle. This avoids a decrease in revolution by increasing the load as well as an increase of revolution by the increment of mains supply voltage.





3. Absolute Maximum Ratings

 V_S = 14 V, reference point Pin 4, unless otherwise specified

Parameters	Symbol	Value	Unit	
Current limitation Pin 5	-I _S	30	mA	
t ≤10 µs	-i _S	100	mA	
Synchronous currents Pin 7 t ≤10 µs	±I _{syncV} ±i _{syncV}	5 20	mA mA	
Phase Control Pin 3	5,			
Control voltage	-V _I	V _S to 0	V	
Input current	±l ₁	500	mA	
Charge current Pin 6	-I _{omax}	0.5	mA	
Load Current Monitoring/Soft Start, Pin 1				
Input current	I _I	1	mA	
Input voltage	V _I	-V _S to +2	V	
Pulse output				
Input voltage Pin 8	+V ₁ -V ₁	2 V _S	V V	
Storage temperature range	T _{stg}	-40 to +125	°C	
Junction temperature range	T _j	-10 to +125	°C	

4. Thermal Resistance

Parameters		Symbol	Value	Unit
	DIP8	R _{thJA}	110	K/W
Junction ambient	SO8 on p.c.	R _{thJA}	220	K/W
	So8 on ceramic	R _{thJA}	140	K/W

5. Electrical Characteristics

Parameters	Test Conditions	Symbol	Min.	Тур.	Max.	Unit	
Supply (Pin 5)	Supply (Pin 5)						
Supply-voltage limitation	-I _S = 3.5 mA -I _S = 30 mA	-V _S -V _S	14.5 14.6		16.5 16.8	V V	
Current requirement	Pins 1, 4 and 7 open	-I _S			3.0	mA	
Voltage Monitoring (Pin 5)	·	<u>.</u>					
Turn-on threshold		-V _{TON}		11.3	12.3	V	
Phase Control	Phase Control						
Input current	Voltage sync. Pin 7 Current sync. Pin 8	±I _{syncV} ±I _{syncI}	3	0.15	2 30	mA μA	
Voltage limitation	±l _L = 2 mA Pin 7	±V _{syncV}	8.0	8.5	9.0	V	
Reference Ramp (see Figure 5-1 on page 7)							
Charge current	Pin 7	Ι _φ	1		100	μΑ	
Start voltage	Pin 2	-V _{max}	1.85	1.95	2.05	V	

5. Electrical Characteristics (Continued)

Parameters	Test Conditions	Symbol	Min.	Тур.	Max.	Unit
Temperature coefficient of start voltage	Pin 2	-TC _R		-0.003		%/K
R_{ϕ} - reference voltage	I _φ = 10 μA, Pins 6 to 5	$V_{R\phi}$	0.96	1.02	1.10	V
Temperature coefficient	I_{ϕ} = 10 μ A, Pin 6 I_{ϕ} = 1 μ A	ΤC _{VRφ} ΤC _{VRφ}		0.03 0.06		%/K %/K
Pulse Output (see Figure 5-2 on	page 8) (Pin 8)			•		
Output-pulse current	$V_8 = -1.2, R_{GT} = 0 \Omega$	I ₀	100	125	150	mA
Output-pulse width	$C_3 = 3.3 \text{ nF, } V_S = V_{limit}$	t _p		30		μs
Automatic Retriggering (Pin 8)	•		•	•	•	•
Turn-on threshold voltage		±V _{ION}	20		60	mV
Repetition rate	I ₇ ≥ 150 μA	t _{pp}	3	5	7.5	t _p
Soft Start (see Figure 5-4 on page	e 8) (Pin 1)		•	•	•	
Starting current	V ₁₋₄ = 8 V	I ₀	5	10	15	μΑ
Final current	V ₁₋₄ = -2 V	I ₀	15	25	40	μΑ
Discharge current		-I ₀	0.5			mA
Output current	Pin 3	-I ₀	0.2		2	mA
Mains Voltage Compensation (se	e Figure 5-5 on page 9)					
Current transfer gain I ₇ /I ₃	Pins 7, Pin 3 Pins 1 and 2 open	G _i	14	17	20	
Reverse current	$V_{(R6)} = V_3 = V_7 = 0$, Pin 3	±I _R			2	μΑ
Load-current Detection, $V_7 = 0$ (see	ee Figure 5-7 on page 9)		•			•
Transfer gain	I ₃ /V ₁	G	0.28	0.32	0.37	μ A /mV
Offset current	$V_1 = 0, V_3 = -8 \text{ V}, \text{ Pin 3}$	I ₀	0	3	6	μΑ
Input voltage	Pin 1	-V _I	300		400	mV
Input offset voltage	Pin 1	±V ₀			6	mV

Figure 5-1. Ramp Control

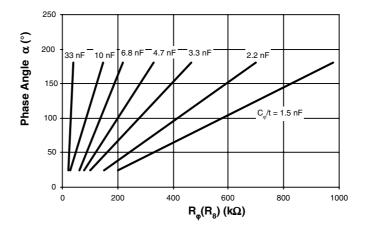






Figure 5-2. Pulse Output

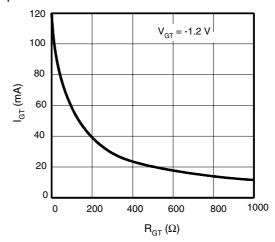


Figure 5-3. Output Pulse Width

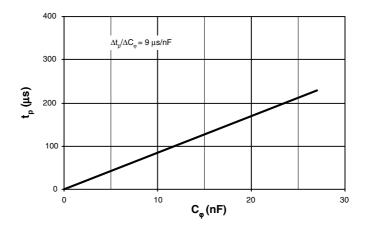


Figure 5-4. Option Soft Start

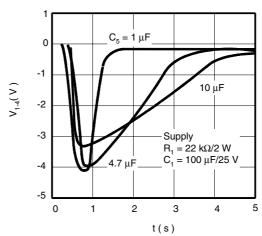


Figure 5-5. Mains Voltage Compensation

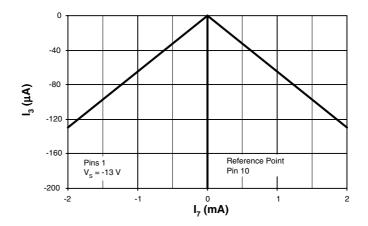


Figure 5-6. Maximum Resistance of R₁

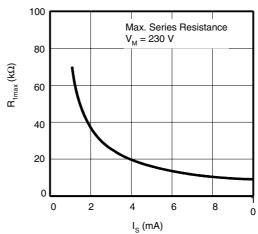


Figure 5-7. Load-current Detection

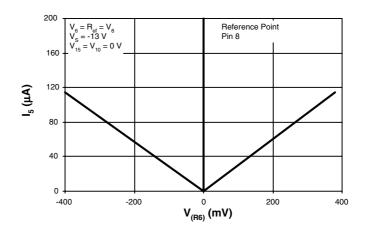






Figure 5-8. Power Dissipation of R₁


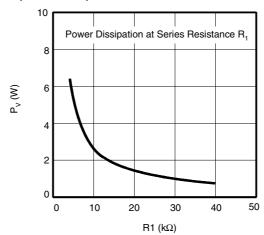


Figure 5-9. Power Dissipation of R₁ According to Current Consumption

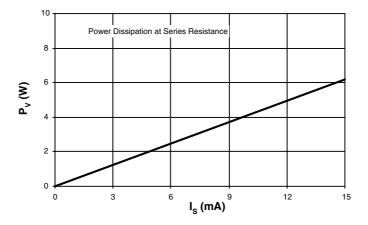



6. Ordering Information

Extended Type Number	Package	Remarks
U2008B-xY	DIP8	Tube, Pb-free
U2008B-xFPY	SO8	Tube, Pb-free
U2008B-xFPG3Y	SO8	Taped and reeled, Pb-free

7. Package Information

Package DIP8

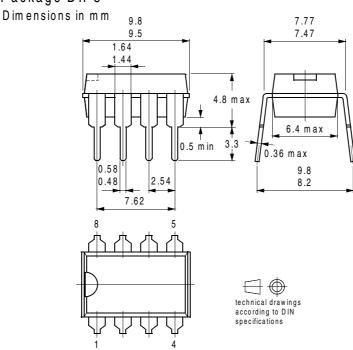

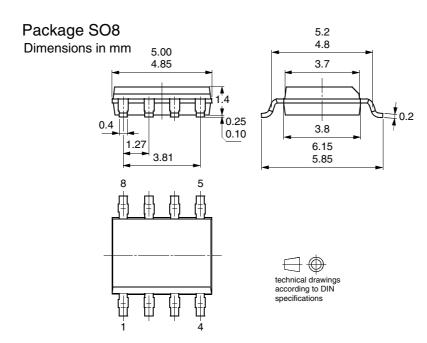





8. Revision History

Please note that the following page numbers referred to in this section refer to the specific revision mentioned, not to this document.

Revision No.	History
	Put datasheet in a new template
4712B-AUTO-08/05	First page: Pb-free logo added
	Page 11: Ordering Information changed



Atmel Corporation

2325 Orchard Parkway San Jose, CA 95131, USA Tel: 1(408) 441-0311 Fax: 1(408) 487-2600

Regional Headquarters

Europe

Atmel Sarl Route des Arsenaux 41 Case Postale 80 CH-1705 Fribourg Switzerland

Tel: (41) 26-426-5555 Fax: (41) 26-426-5500

Asia

Room 1219 Chinachem Golden Plaza 77 Mody Road Tsimshatsui East Kowloon Hong Kong

Tel: (852) 2721-9778 Fax: (852) 2722-1369

Japan

9F, Tonetsu Shinkawa Bldg. 1-24-8 Shinkawa Chuo-ku, Tokyo 104-0033 Japan

Tel: (81) 3-3523-3551 Fax: (81) 3-3523-7581

Atmel Operations

Memory

2325 Orchard Parkway San Jose, CA 95131, USA Tel: 1(408) 441-0311 Fax: 1(408) 436-4314

Microcontrollers

2325 Orchard Parkway San Jose, CA 95131, USA Tel: 1(408) 441-0311 Fax: 1(408) 436-4314

La Chantrerie BP 70602 44306 Nantes Cedex 3, France Tel: (33) 2-40-18-18-18 Fax: (33) 2-40-18-19-60

ASIC/ASSP/Smart Cards

Zone Industrielle 13106 Rousset Cedex, France Tel: (33) 4-42-53-60-00

Fax: (33) 4-42-53-60-01

1150 East Cheyenne Mtn. Blvd. Colorado Springs, CO 80906, USA

Tel: 1(719) 576-3300 Fax: 1(719) 540-1759

Scottish Enterprise Technology Park Maxwell Building East Kilbride G75 0QR, Scotland

Tel: (44) 1355-803-000 Fax: (44) 1355-242-743

RF/Automotive

Theresienstrasse 2 Postfach 3535 74025 Heilbronn, Germany Tel: (49) 71-31-67-0 Fax: (49) 71-31-67-2340

1150 East Cheyenne Mtn. Blvd. Colorado Springs, CO 80906, USA

Tel: 1(719) 576-3300 Fax: 1(719) 540-1759

Biometrics/Imaging/Hi-Rel MPU/ High Speed Converters/RF Datacom

Avenue de Rochepleine BP 123

38521 Saint-Egreve Cedex, France

Tel: (33) 4-76-58-30-00 Fax: (33) 4-76-58-34-80

Literature Requests www.atmel.com/literature

Disclaimer: The information in this document is provided in connection with Atmel products. No license, express or implied, by estoppel or otherwise, to any intellectual property right is granted by this document or in connection with the sale of Atmel products. EXCEPT AS SET FORTH IN ATMEL'S TERMS AND CONDITIONS OF SALE LOCATED ON ATMEL'S WEB SITE, ATMEL ASSUMES NO LIABILITY WHATSOEVER AND DISCLAIMS ANY EXPRESS, IMPLIED OR STATUTORY WARRANTY RELATING TO ITS PRODUCTS INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, OR NON-INFRINGEMENT. IN NO EVENT SHALL ATMEL BE LIABLE FOR ANY DIRECT, INDIRECT, CONSEQUENTIAL, PUNITIVE, SPECIAL OR INCIDENTAL DAMAGES (INCLUDING, WITHOUT LIMITATION, DAMAGES FOR LOSS OF PROFITS, BUSINESS INTERRUPTION, OR LOSS OF INFORMATION) ARISING OUT OF THE USE OR INABILITY TO USE THIS DOCUMENT, EVEN IF ATMEL HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. Atmel makes no representations or warranties with respect to the accuracy or completeness of the contents of this document and reserves the right to make changes to specifications and product descriptions at any time without notice. Atmel does not make any commitment to update the information contained herein. Unless specifically provided otherwise, Atmel products are not suitable for, and shall not be used in, automotive applications. Atmel's products are not intended, authorized, or warranted for use as components in applications intended to support or sustain life.

© Atmel Corporation 2005. All rights reserved. Atmel[®], logo and combinations thereof, Everywhere You Are[®] and others, are registered trademarks or trademarks of Atmel Corporation or its subsidiaries. Other terms and product names may be trademarks of others.

