



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com


Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China

BIOS Reference Manual

REV. 7 August 2017

Bengal (VL-EPMe-3o)

Intel® Atom™-based SBC with Dual Ethernet, Video, USB, SATA, Serial I/O, Digital I/O, Trusted Platform Module Security, Counter/Timers, Mini PCIe, mSATA, SPX, and PCIe/104 OneBank™ Interface

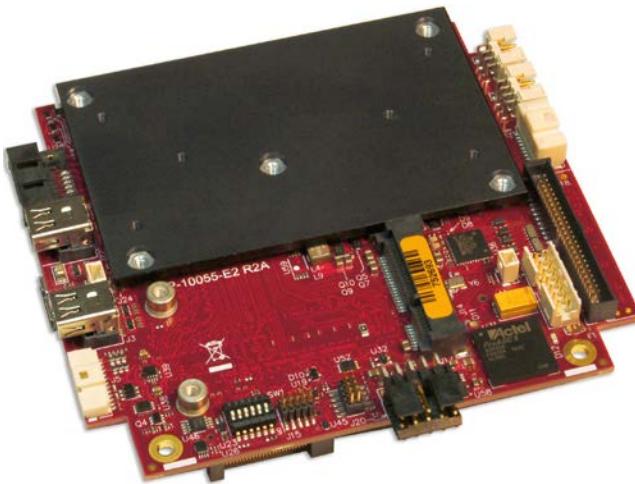



WWW.VERSALOGIC.COM

12100 SW Tualatin Road
Tualatin, OR 97062-7341
(503) 747-2261
Fax (971) 224-4708

Copyright © 2016-2017 VersaLogic Corp. All rights reserved.

Notice:

Although every effort has been made to ensure this document is error-free, VersaLogic makes no representations or warranties with respect to this product and specifically disclaims any implied warranties of merchantability or fitness for any particular purpose.

VersaLogic reserves the right to revise this product and associated documentation at any time without obligation to notify anyone of such changes.

[†] Other names and brands may be claimed as the property of others.

Product Release Notes

This document reflects the content of the BIOS Setup program for the EPMe-30 Bengal Board.

Board Revision	BIOS Version	BIOS ID String	Comments
Rev 2.00	1.01	Bengal_3.1.0.334.r1.101	First release of document
Rev 2.02A	1.02	Bengal_3.1.0.334.r1.102	Changed default setting of PCIe 1 speed from <u>Auto</u> to <u>Gen 1</u>
Rev 3.00	1.04	Bengal_3.1.0.547.r1.104	
Rev 3.01	1.05	Bengal_3.1.0.547.r1.105	Updated Web Links Refer to the table below

Table 1: Changes from BIOS 334.r1.104 to BIOS 547.r1.105

Change	Ref.
Updated video BIOS and GOP driver to better support DP++ mode.	N/A
Added Intel PXE ROM for built-in I210 Ethernet	N/A
<u>Added option to configure action on boot failure.</u>	N/A
Fixed fan control issues.	N/A
Removed 9600 baud setting from console redirection options.	Page 16
Removed Load Optimized Defaults from Exit tab.	Page 132

Support Page

The [Bengal Support Page](#) contains additional information and resources for this product including:

- Operating system information and software drivers
- Data sheets and manufacturers' links for chips used in this product
- BIOS information and upgrades

VersaTech KnowledgeBase

The [VersaTech KnowledgeBase](#) contains useful technical information about VersaLogic products, along with product advisories.

Customer Support

If you are unable to solve a problem after reading this manual, visiting the product support page, or searching the KnowledgeBase, contact VersaLogic Technical Support at (503) 747-2261. VersaLogic support engineers are also available via e-mail at Support@VersaLogic.com.

Contents

Overview	1
Main Menu.....	2
Main → System Date.....	3
Main → System Time	4
Main → System Information	5
Main → Boot Features.....	6
Main → Boot Features → NumLock.....	7
Main → Boot Features → Timeout	8
Main → Boot Features → CSM Support	9
Main → Boot Features → Quick Boot	10
Main → Boot Features → Diagnostic Splash Screen.....	11
Main → Boot Features → Diagnostic Summary Screen	12
Main → Boot Features → BIOS Level USB.....	13
Main → Boot Features → Console Redirection.....	14
Main → Boot Features → Allow Hotkey in S4 Resume.....	19
Main → Boot Features → UEFI Boot	20
Main → Boot Features → Legacy Boot	21
Main → Boot Features → Boot In Legacy Video Mode.....	22
Main → Boot Features → Load OPPROM	23
Main → Error Manager	24
Main → Error Manager → View Error Manager Log.....	25
Main → Error Manager → Clear Error Manager Log.....	26
Advanced Menu	27
Advanced → OS Selection	28
Advanced → VersaLogic Features.....	29
Advanced → VersaLogic Features → Mini Card Mode	30
Advanced → VersaLogic Features → UART1	31
Advanced → VersaLogic Features → UART2	35
Advanced → CPU Configuration	39
Advanced → CPU Configuration → Execute Disable Bit	40
Advanced → CPU Configuration → AES-NI	41
Advanced → CPU Configuration → Limit CPUID Maximum.....	42
Advanced → CPU Configuration → Bi-directional PROCHOT#	43
Advanced → CPU Configuration → VTX-2.....	44
Advanced → CPU Configuration → TM1	45
Advanced → CPU Configuration → DTS.....	46
Advanced → CPU Configuration → Intel Hyper-Threading Technology	47
Advanced → CPU Power Management	48
Advanced → CPU Power Management → Intel SpeedStep	49
Advanced → CPU Power Management → Intel Turbo Boost Technology	51
Advanced → CPU Power Management → C-States	52
Advanced → CPU Power Management → Max C State	54

Advanced → Graphics/Uncore Configuration	55
Advanced → Graphics/Uncore Configuration → GOP Driver	56
Advanced → Graphics/Uncore Configuration → Integrated Graphics Device ..	57
Advanced → Graphics/Uncore Configuration → Primary Display	58
Advanced → Graphics/Uncore Configuration → RC6 (Render Standby).....	59
Advanced → Graphics/Uncore Configuration → PAVC.....	60
Advanced → Graphics/Uncore Configuration → GTT Size.....	61
Advanced → Graphics/Uncore Configuration → Aperture Size	62
Advanced → Graphics/Uncore Configuration → DVMT Pre-Allocated	63
Advanced → Graphics/Uncore Configuration → DVMT Total Gfx Mem	64
Advanced → Graphics/Uncore Configuration → IGD Turbo.....	65
Advanced → Graphics/Uncore Configuration → BIA.....	66
Advanced → Graphics/Uncore Configuration → LCD Panel Type	67
Advanced → Graphics/Uncore Configuration → IGD Boot Type	68
Advanced → Graphics/Uncore Configuration → Panel Scaling.....	69
Advanced → Graphics/Uncore Configuration → GMCH BLC Control	70
Advanced → South Cluster Configuration.....	71
Advanced → PCI Express Configuration → PCIe 0 Speed	72
Advanced → PCI Express Configuration → PCIe 1 Speed	73
Advanced → PCI Express Configuration → PCIe 2 Speed	74
Advanced → PCI Express Configuration → PCIe 3 Speed	75
Advanced → PCI Express Configuration → PCI Express Root Port 1.....	76
Advanced → PCI Express Configuration → PCI Express Root Port 2.....	77
Advanced → PCI Express Configuration → PCI Express Root Port 3.....	78
Advanced → PCI Express Configuration → PCI Express Root Port 4.....	79
Advanced → USB Configuration → XHCI Link Power Management.....	80
Advanced → USB Configuration → EHCI Controller	81
Advanced → USB Configuration → USB Per-Port Control.....	82
Advanced → USB Configuration → USB Port #0.....	83
Advanced → USB Configuration → USB Port #1.....	84
Advanced → USB Configuration → USB Port #2.....	85
Advanced → USB Configuration → USB Port #3.....	86
Advanced → Audio Configuration → Audio Controller	87
Advanced → Audio Configuration → Azalia VCi Enable.....	88
Advanced → Audio Configuration → Azalia HDMI CODEC	89
Advanced → SATA Drives → Chipset SATA.....	90
Advanced → SATA Drives → Chipset SATA Mode	91
Advanced → LPSS & SCC Configuration → LPSS Devices Mode	92
Advanced → LPSS & SCC Configuration → LPSS DMA #1 Support	93
Advanced → LPSS & SCC Configuration → LPSS DMA #2 Support	94
Advanced → LPSS & SCC Configuration → LPSS I2C #1 Support	95
Advanced → LPSS & SCC Configuration → LPSS PWM #1 Support	96
Advanced → LPSS & SCC Configuration → LPSS PWM #2 Support.....	97
Advanced → Miscellaneous Configuration → High Precision Timer.....	98
Advanced → Miscellaneous Configuration → Boot Time with HPET Timer ...	99
Advanced → Miscellaneous Configuration → State After G3	100
Advanced → Miscellaneous Configuration → SoC Debug UART	101
Advanced → Miscellaneous Configuration → SMM Lock	102

Advanced → Miscellaneous Configuration → PCI MMIO Size	103
Advanced → Security	104
Advanced → Security Configuration → TXE.....	105
Advanced → Security Configuration → TXE HMRFPO	106
Advanced → Security Configuration → TXE Firmware Update.....	107
Advanced → Security Configuration → TXE EOP Message	108
Advanced → Security Configuration → TXE Unconfiguration Perform	109
Advanced → Thermal.....	110
Advanced → Thermal → Critical Trip Point	111
Advanced → Thermal → Passive Trip Point	112
Advanced → Thermal → Active Trip Point.....	113
Advanced → Thermal → Start Fan With Cold CPU.....	114
Advanced → SMBIOS Event Log.....	115
Advanced → SMBIOS Event Log → Event Log	116
Advanced → SMBIOS Event Log → Mark SMBIOS Events As Read.....	117
Advanced → SMBIOS Event Log → Clear SMBIOS Events	118
Security Menu.....	119
Security → Set Supervisor Password	120
Security → Supervisor Hint String.....	121
Security → Set User Password	122
Security → User Hint String.....	123
Security → Min. Password Length.....	124
Security → TPM Support	125
Security → TPM Configuration	126
Security → TPM Configuration → Current TPM State.....	127
Security → TPM Configuration → TPM Action	128
Security → TPM Configuration → Omit Boot Measurements	129
Boot Menu.....	130
Exit Menu	132

Overview

The BIOS Setup utility is stored in the Serial Peripheral Interface (SPI) Flash device. The initial production BIOS ID string is Bengal_3.1.0.547.r1.104.

The BIOS Setup utility can be used to view and change the BIOS settings for the Bengal board.

To access the BIOS Setup utility, press **F2** during the early boot cycle.

The top-level menu bar is shown below.

 


Table 2 lists the BIOS Setup utility top-level menu bar features.

Table 2: Top-level Menu Bar Features

Menu	Function
Main	Displays processor and memory configuration
Advanced	Configures advanced features available through the chipset
Security	Sets passwords and security features
Boot	Selects boot device options
Exit	Saves or discards changes to Setup utility options

Table 3 lists the function keys available for menu screens.

Table 3. BIOS Setup Utility Function Keys


Menu	Function
F1	Help
↑ or ↓	Selects an item (Moves the cursor up or down)
+ or -	Changes values
F9	Loads setup default values
Esc	Exits the menu
← or →	Selects a different menu screen (Moves the cursor left or right)
Enter	Executes a command or selects a sub-menu
F10	Saves the current values and exits the BIOS Setup utility

Main Menu


The Main menu enables you to:

- Set system date and time
- Set boot features
- View and clear the error log

Top level view of Main menu screen.

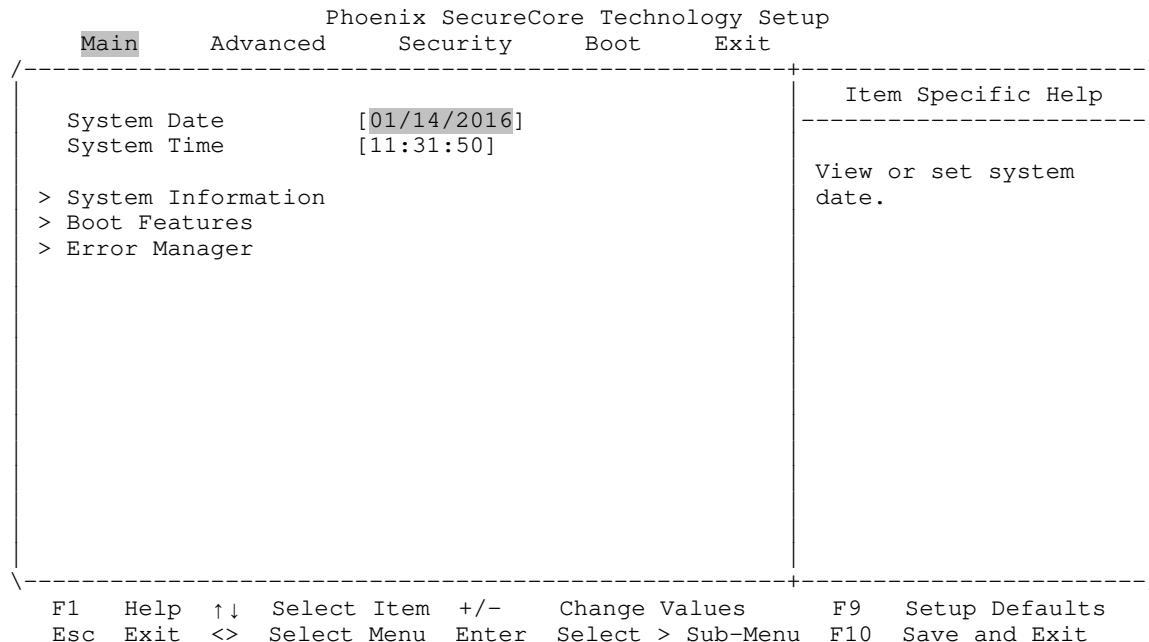

Main → System Date

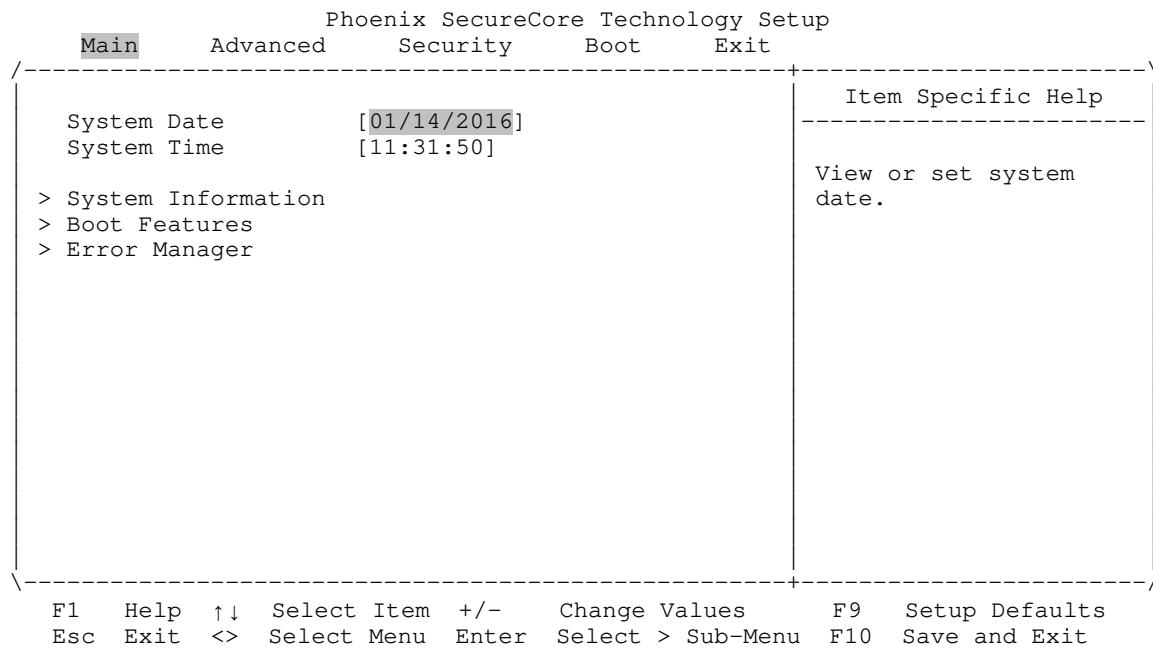


Use the and keys to switch between the System Date and System Time fields.

Use the and keys to set the month, day, and year.

Use the or key to move from month → day → year.

Main → System Time

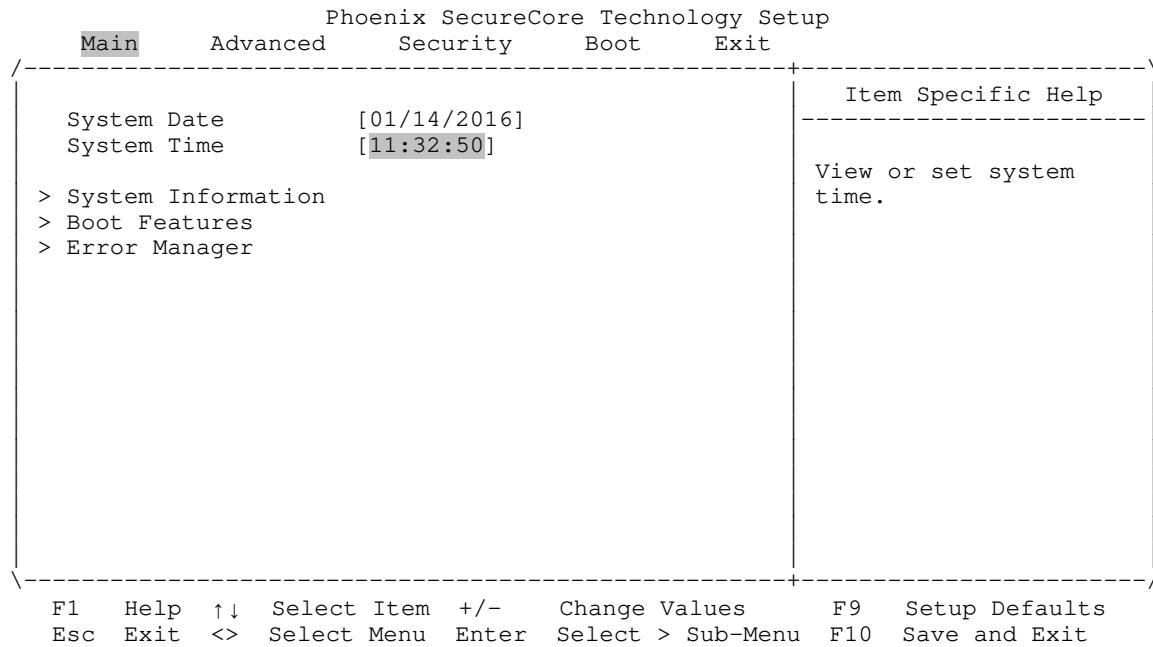


Use the and keys to switch between the System Date and System Time fields.

Use the and keys to set the hours, minutes, and seconds.


Use the or key to move from hours → minutes → seconds.

Main → System Information

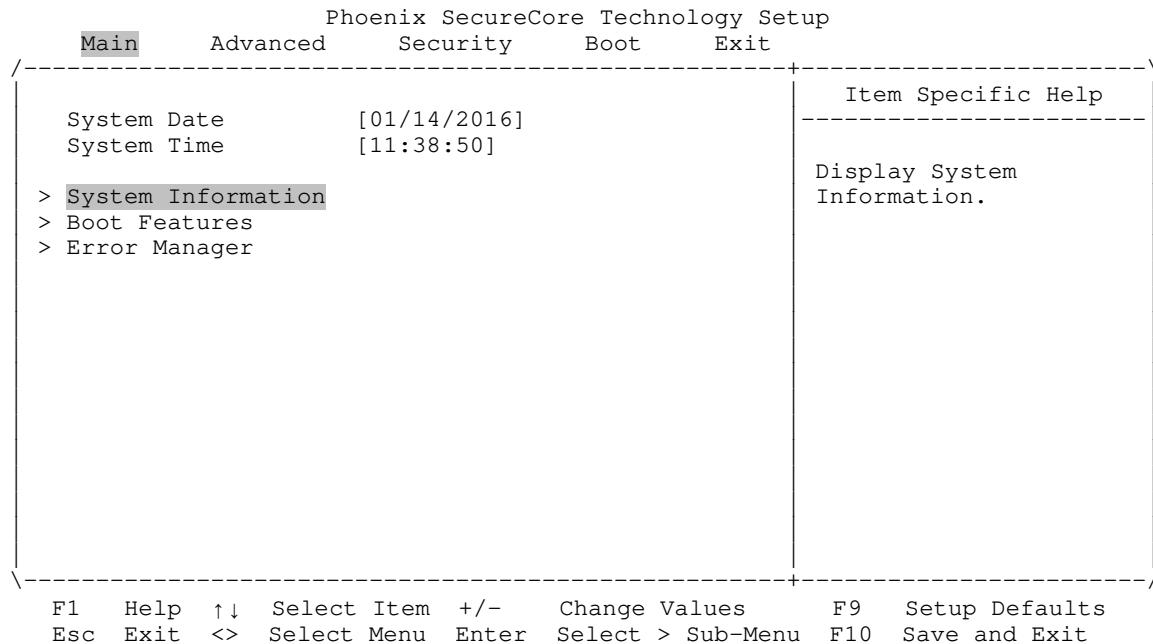

This screen is read-only; there are no user-configurable options.

Example view of System Information screen:

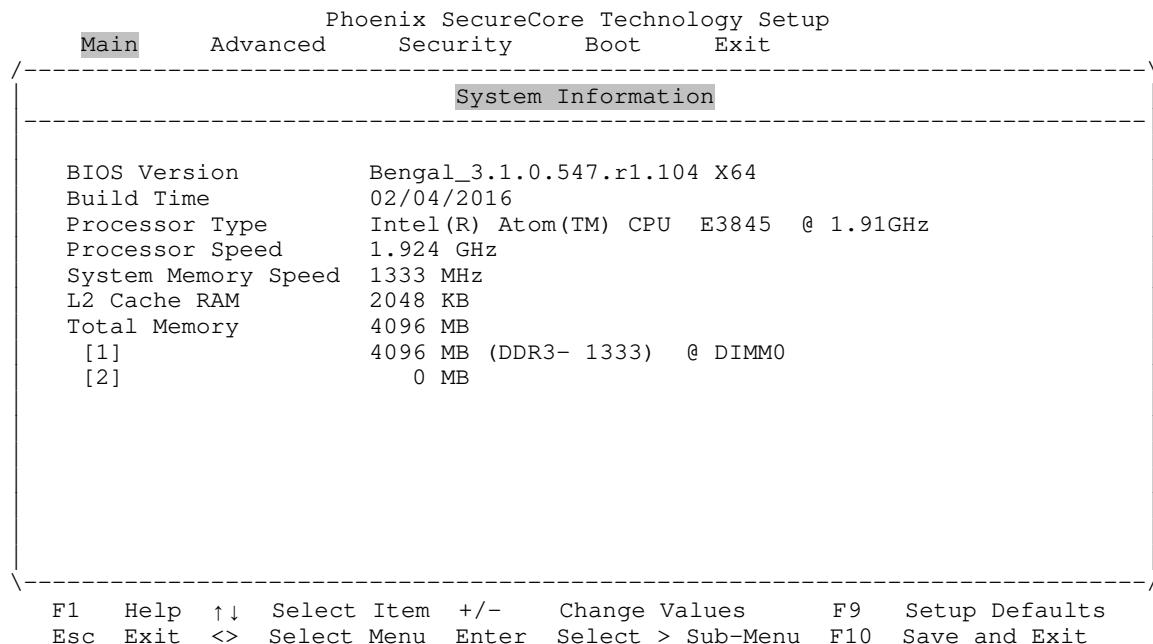


Main → Boot Features


Phoenix SecureCore Technology Setup		
Main	Advanced	Security
Boot	Exit	
Boot Features		Item Specific Help
NumLock:	[On]	^ Selects Power-on state for NumLock.
Timeout	[2]	*
CSM Support	[Yes]	*
Quick Boot	[Disabled]	*
Diagnostic Splash Screen	[Disabled]	*
Diagnostic Summary Screen	[Disabled]	*
BIOS Level USB	[Enabled]	*
Console Redirection	[Disabled]	*
Allow Hotkey in S4 resume	[Enabled]	+
UEFI Boot	[Enabled]	+
Legacy Boot	[Enabled]	v
Boot in Legacy Video Mode	[Disabled]	*
Load OPROM	[On Demand]	v

F1 Help ↑↓ Select Item +/− Change Values F9 Setup Defaults
Esc Exit <> Select Menu Enter Select > Sub-Menu F10 Save and Exit


Main → Boot Features → NumLock

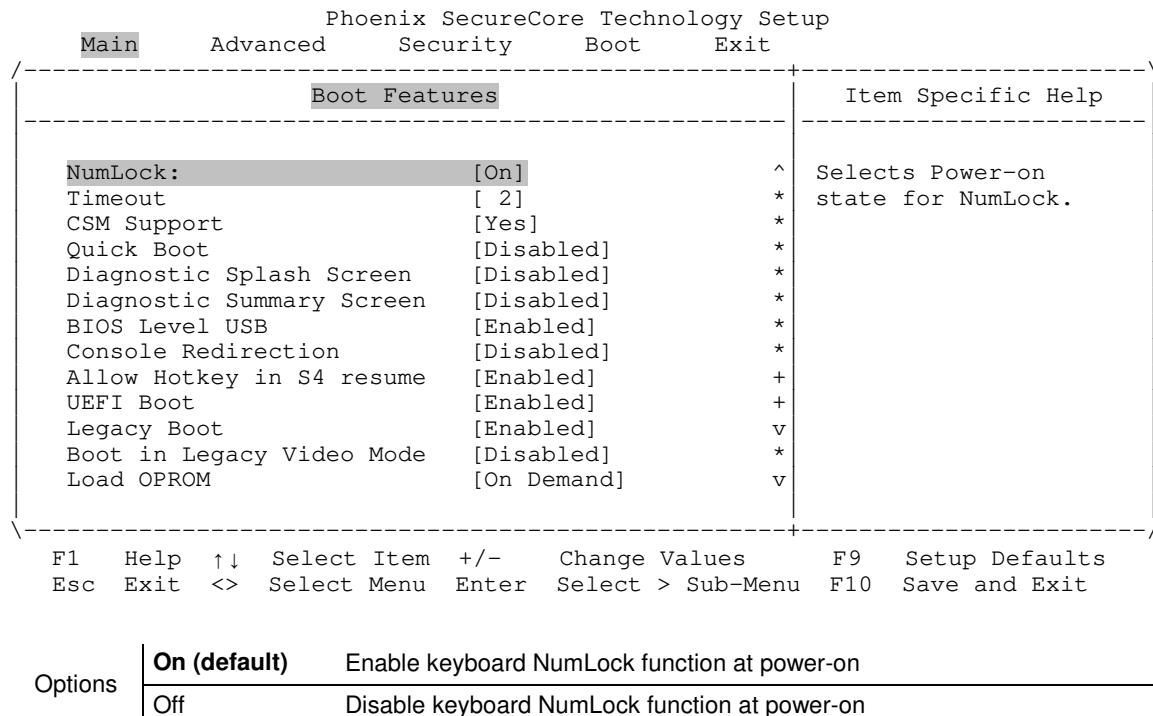


Main → Boot Features → Timeout

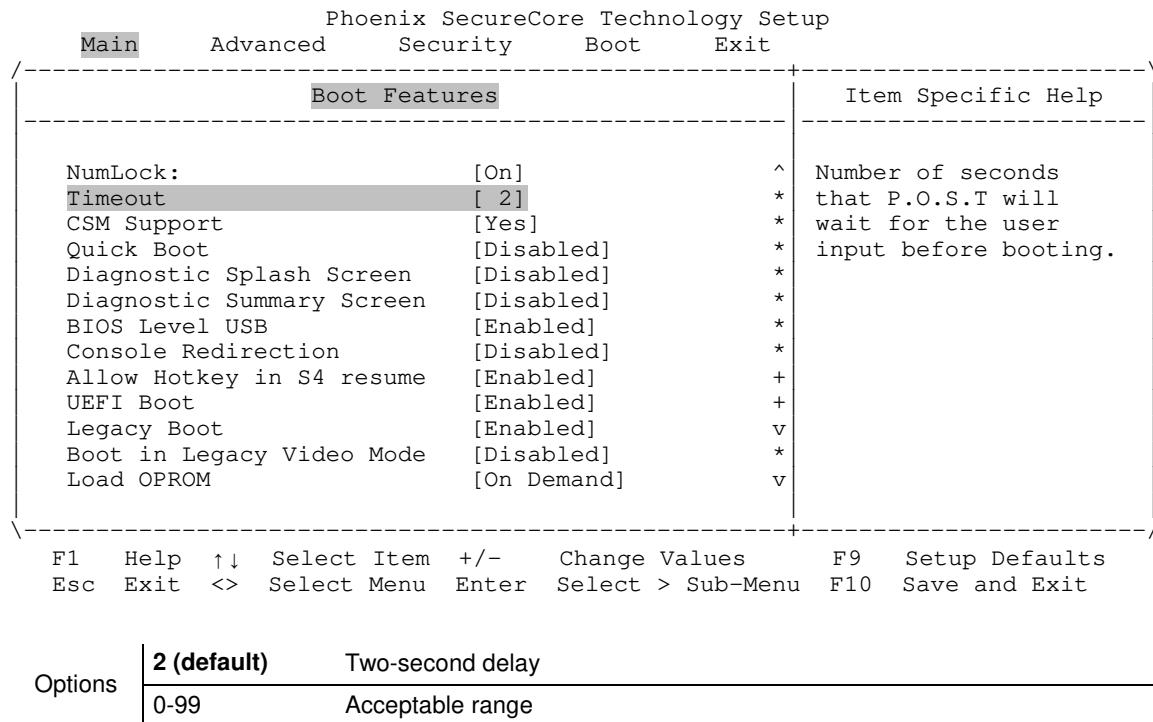


Main → Boot Features → CSM Support

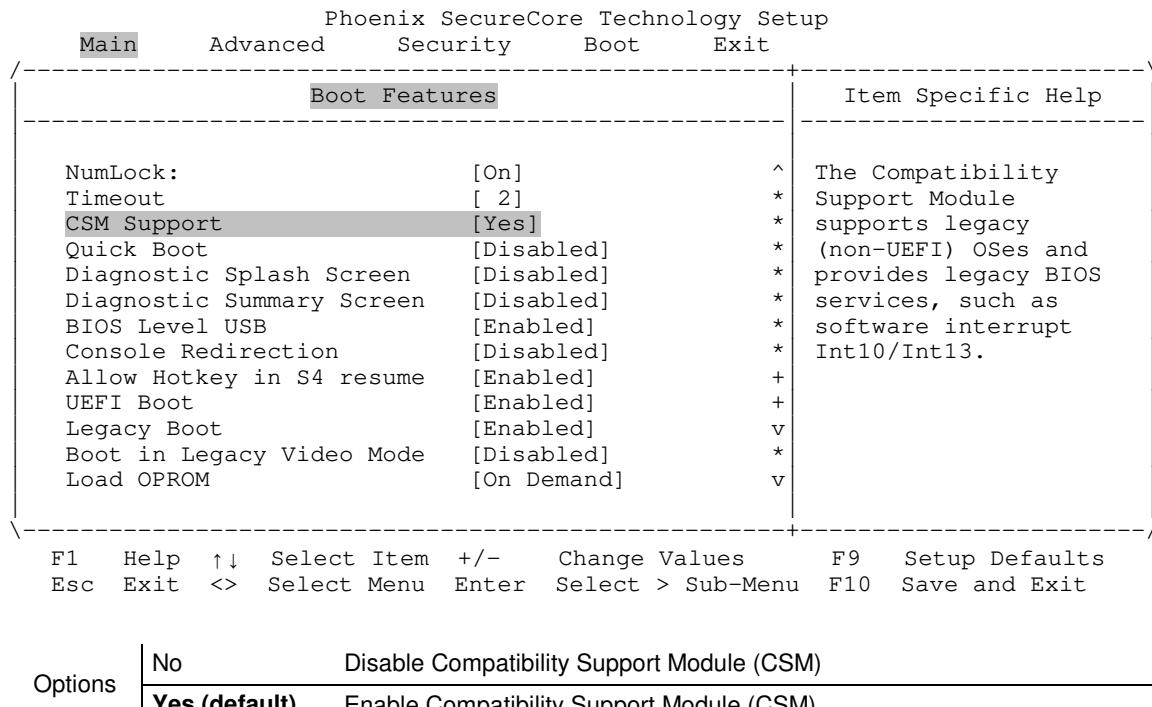


Main → Boot Features → Quick Boot

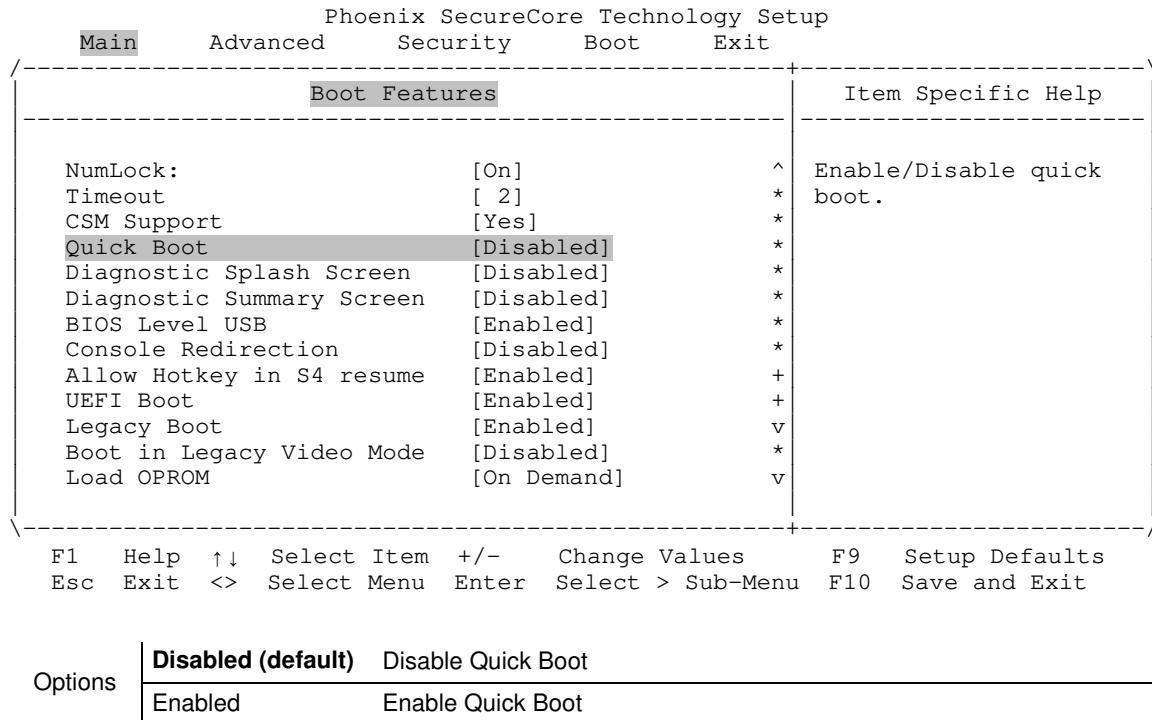


Main → Boot Features → Diagnostic Splash Screen

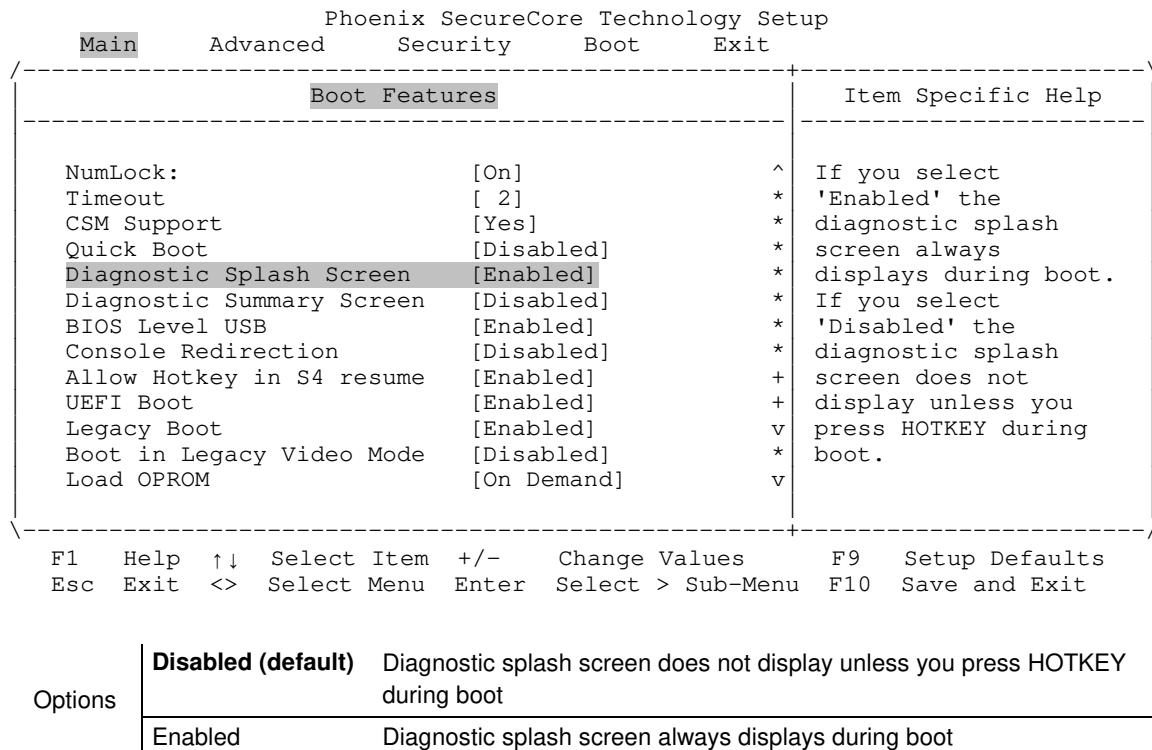


Main → Boot Features → Diagnostic Summary Screen

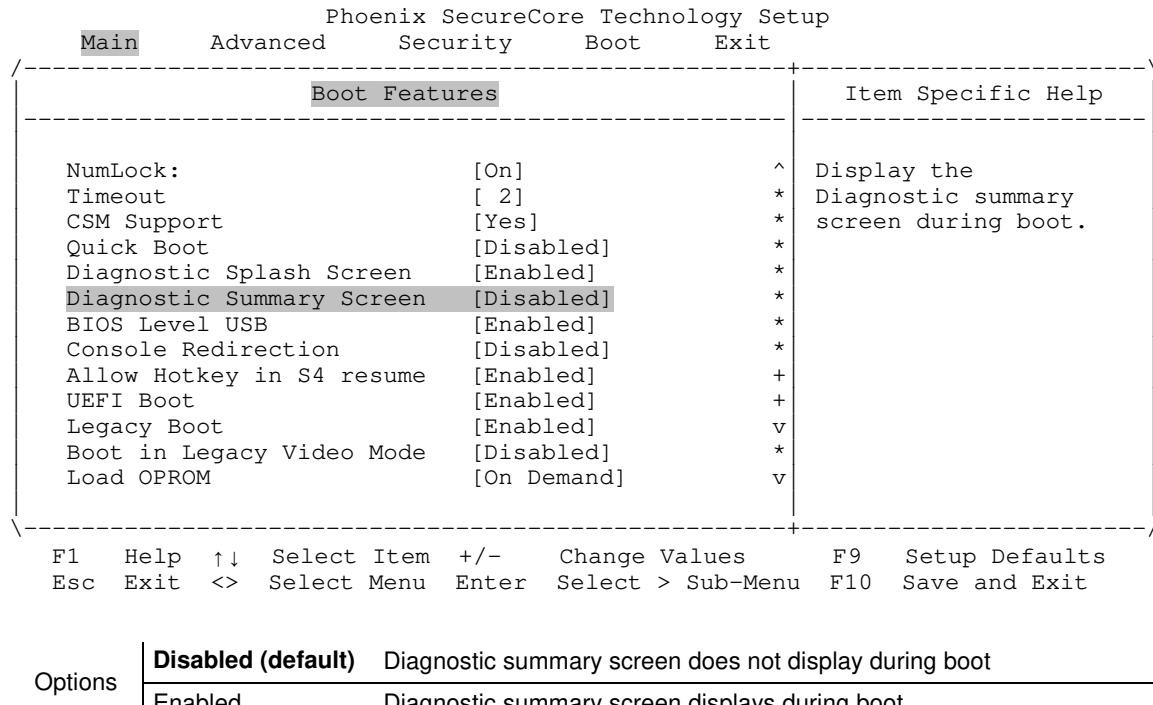

Main → Boot Features → BIOS Level USB

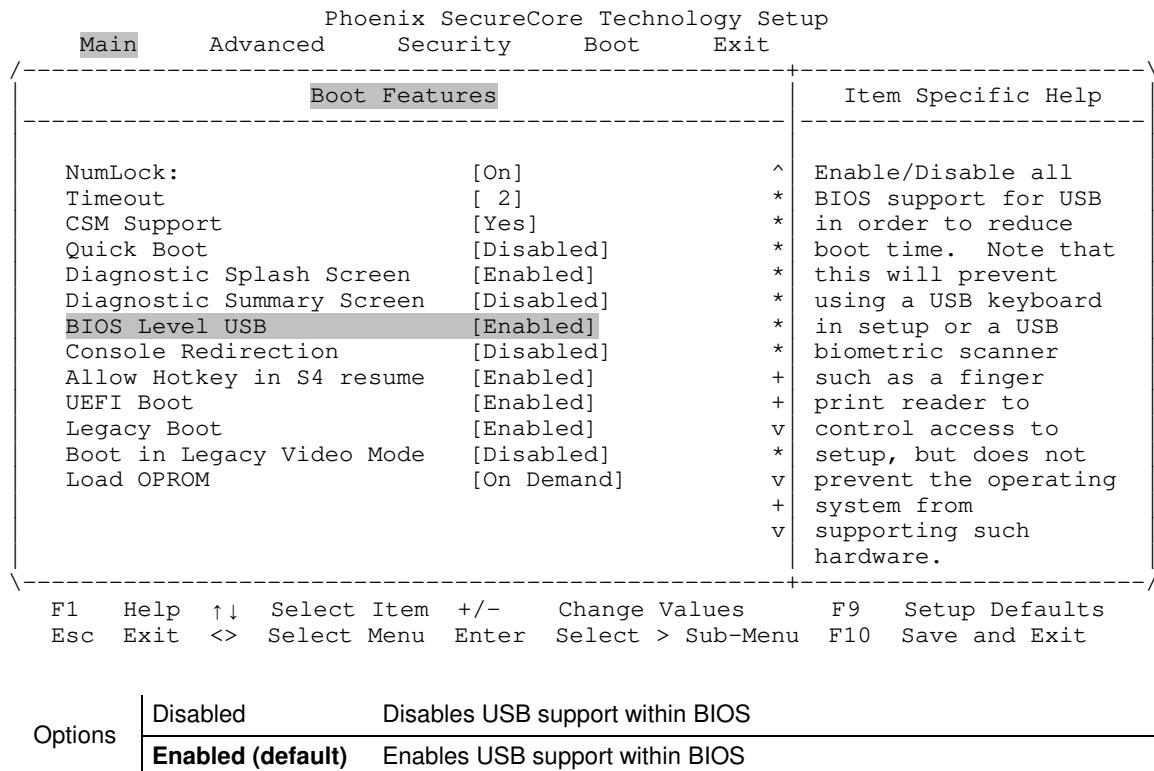


Main → Boot Features → Console Redirection

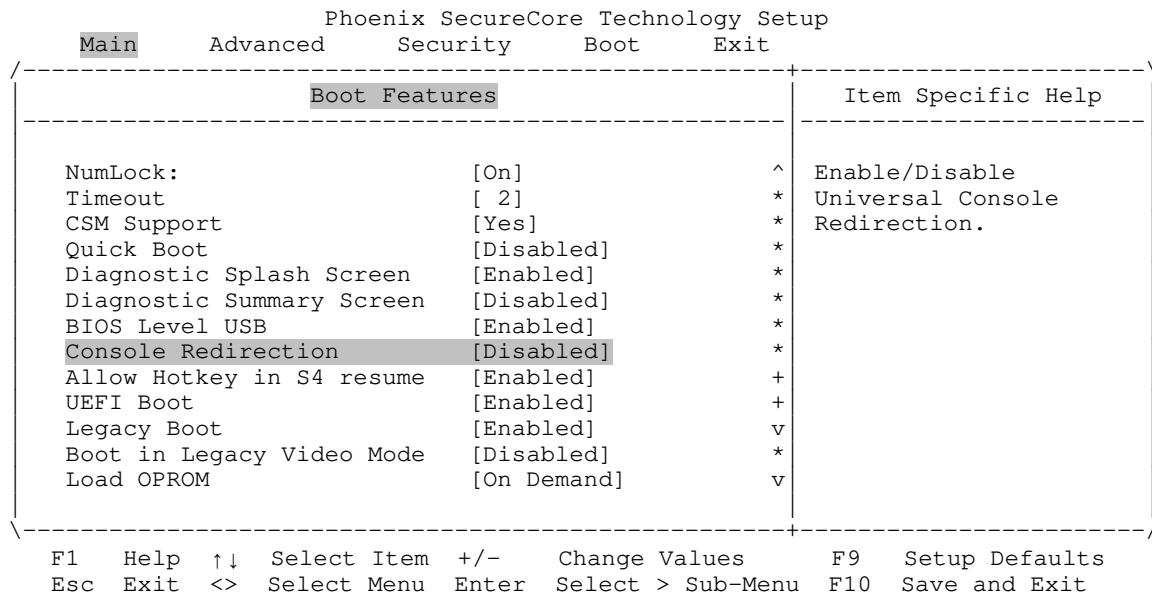

Options	Disabled (default)	Disables Universal Console Redirection (UCR)
	Enabled	Enables Universal Console Redirection (UCR). When enabled, four sub-menus appear for setting console redirection parameters.


Main → Boot Features → Console Redirection → Terminal Type

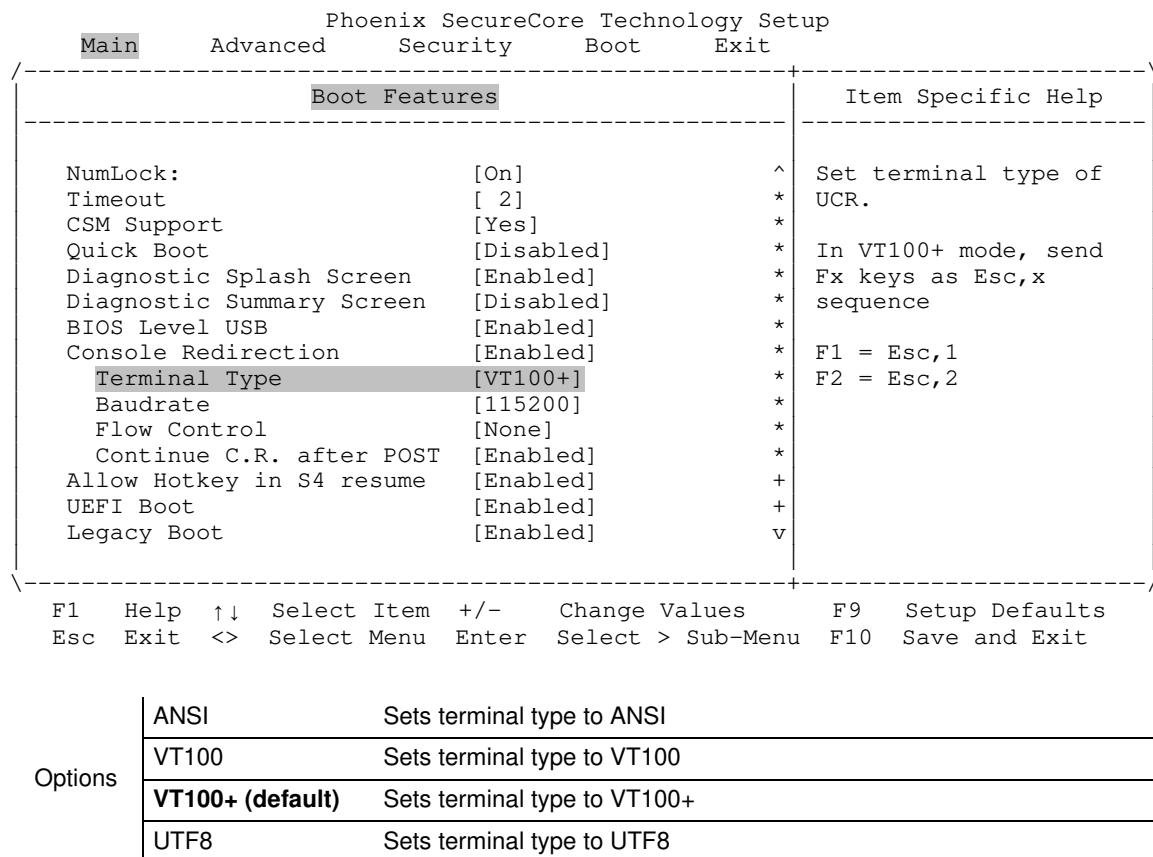


Main → Boot Features → Console Redirection → Baudrate

Phoenix SecureCore Technology Setup			
Main	Advanced	Security	Boot
Boot Features			
CSM Support	[Yes]	^	Set baudrate of UCR.
Quick Boot	[Disabled]	+	
Diagnostic Splash Screen	[Enabled]	+	
Diagnostic Summary Screen	[Disabled]	*	
BIOS Level USB	[Enabled]	*	
Console Redirection	[Enabled]	*	
Terminal Type	[VT100+]	*	
Baudrate	[115200]	*	
Flow Control	[None]	*	
Continue C.R. after POST	[Enabled]	*	
Allow Hotkey in S4 resume	[Enabled]	*	
UEFI Boot	[Enabled]	*	
Legacy Boot	[Enabled]	*	
Boot in Legacy Video Mode	[Disabled]	*	
Load OPROM	[On Demand]	v	

Options	19200 Sets baudrate to 19200
	38400 Sets baudrate to 38400
	57600 Sets baudrate to 57600
	115200 (default) Sets baudrate to 115200

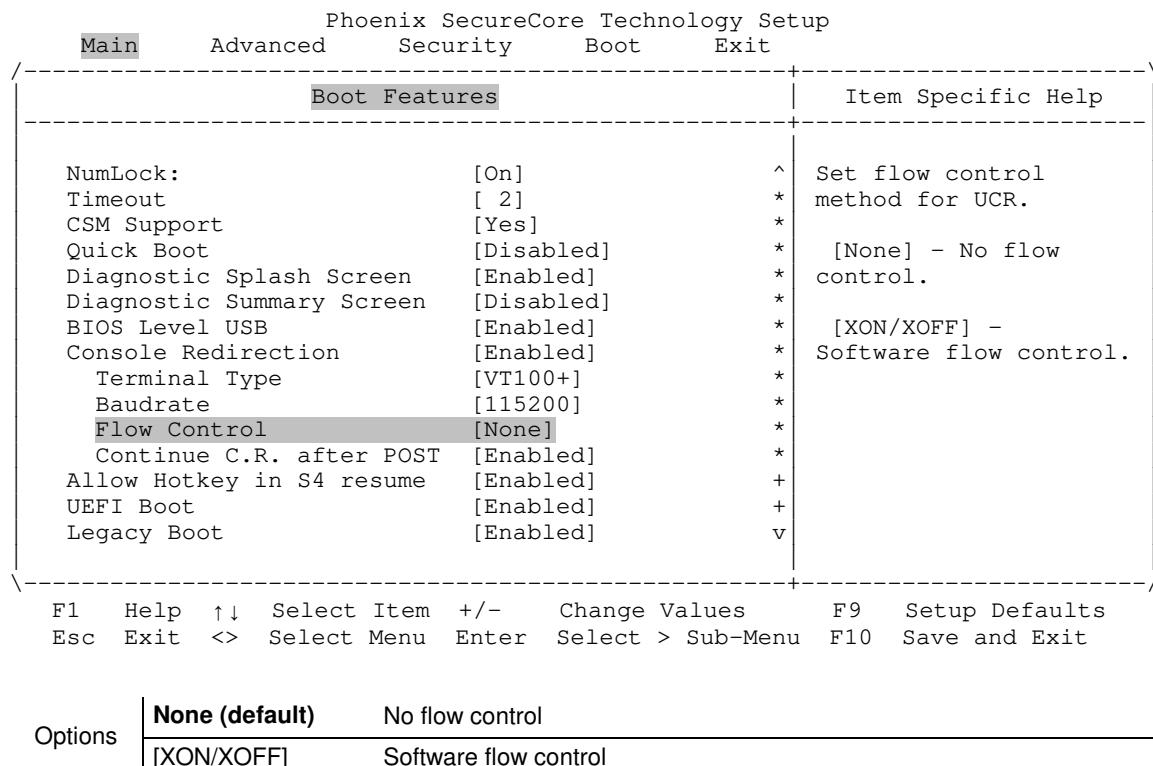Main → Boot Features → Console Redirection → Flow Control

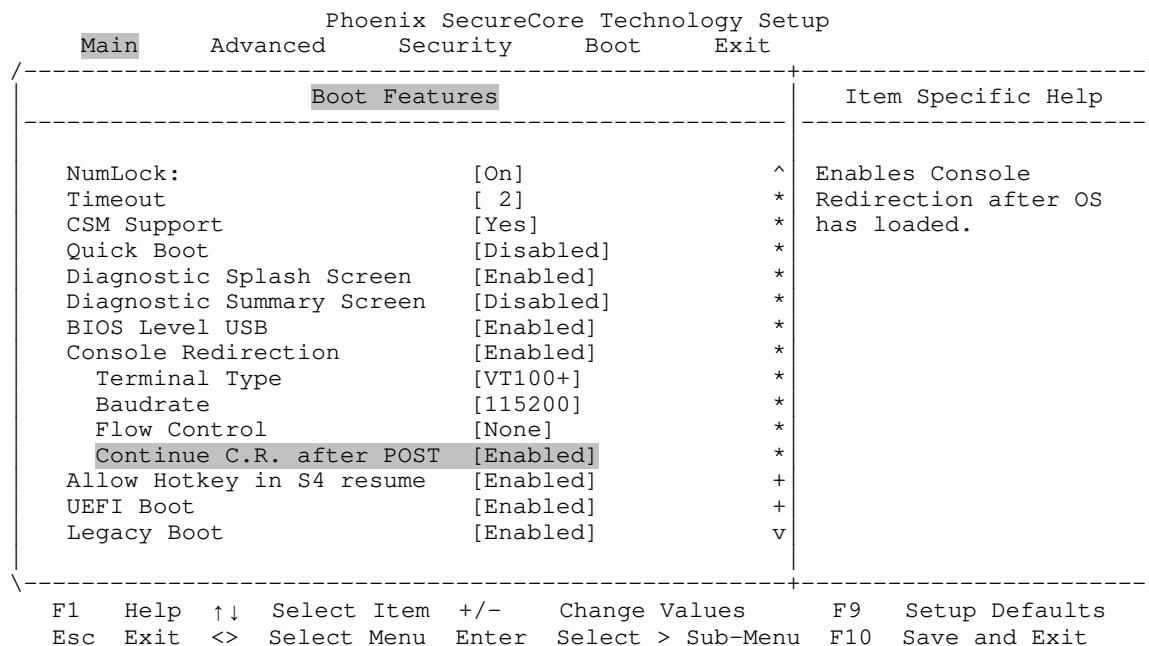Main → Boot Features → Console Redirection →Continue C.R. after POST

Options	Disabled	Disables console redirection after the operating system has loaded
	Enabled (default)	Enables console redirection after the operating system has loaded

Main → Boot Features → Allow Hotkey in S4 Resume

