imall

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832 Email & Skype: info@chipsmall.com Web: www.chipsmall.com Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



Easy-wire Connectors for Industrial Components

XN2

Easy-wire Connectors with *CON* * Specifications; Ideal for Connecting Sensors.


- Use industry-proven spring clamps for wiring.
- No special tools required for easy wiring.
- Rewiring (repairing) is possible.
- Each Connector accepts any wire size from stranded wire AWG28 (0.08 mm²) to AWG20 (0.5 mm²). (External sheath diameter: 1.5 mm max.)
- With the simple tool Jig, assembly can be completed for 4 wires simultaneously, is available.
- Note: *E-con specifications are currently being promoted for standardization by manufacturers of FA components and connectors. Connector specifications are disclosed only for the mating portions.

RoHS Compliant

Wiring Configuration Example



FL (F)

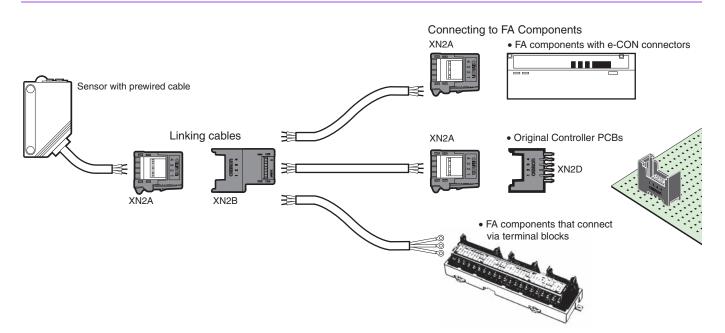

Ordering Information

Туре	Cable Plug Connector	Cable Socket Connector	Single-socket PCB Socket Connector	Four-socket PCB Socket Connector	
Ap- pear- ance	TRANS CONTRACT				
No. of contacts	Model				
3	XN2A-1370	—	XN2D-1371	—	
4	XN2A-1470	XN2B-1470	XN2D-1471	XN2D-4471	
5	XN2A-1570	_	XN2D-1571	_	
6	XN2A-1670	_	XN2D-1671	_	
8	XN2A-1870	— XN2D-1871 —		—	

Ratings and Specifications

Rated current	3 A/pole (Using AWG20 wire) 2 A/pole (Using AWG22 wire) 1 A/pole (Using AWG24 wire) 0.5 A/pole (Using AWG26 or 28 wire)	
Rated voltage	32 VDC	
Contact resistance	$30 \text{ m}\Omega$ max. (20 mVDC max., 100 mA max.)	
Insulation resistance	1000 MΩ min. (at 500 VDC)	
Dielectric strength	1,000 VAC for 60 s (leakage current: 1 mA max.)	
Insertion durability	50 times	
Ambient operating temperature	-30 to 75°C * (with no condensation or icing)	
Applicable wires	Stranded wire 0.08 mm ² (AWG28) to 0.5mm ² (AWG20) The external diameter of the cable sheath is 1.5 mm max.	

 \ast The temperature is limited, however, to the maximum operating temperature for the cables.

Materials and Finish


Item	Cable type	PCB type		
Case	PBT (UL94 V-0)/Black			
Cover	PBT (UL94 V-0)/Black —			
Base	PC (UL94 V-0)/Transparent	—		
Lever	PA (UL94 V-0)/natural	_		
Contact	Copper alloy Mating end : Nickel base, gold plating Contact : Nickel base, tin plating Terminal : Nickel base, tin plating			
Spring	Stainless steel —			
Pin clamp	—	Copper alloy/nickel base with tin plating		

XN2

Dimensions

Cable Plug Connector

XN2A-1□70

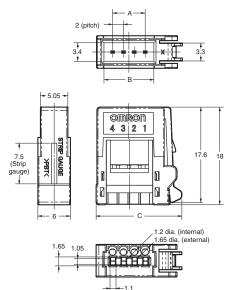



Dimensions

Dimension (mm) No. of contacts	А	В	С
3	4.0	7.2	13.8
4	6.0	9.2	15.8
5	8.0	11.2	17.8
6	10.0	13.2	19.8
8	14.0	17.2	23.8


Cable Socket Connector

 XN2B-1470

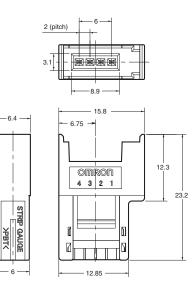




Single-socket PCB Socket Connector XN2D-1

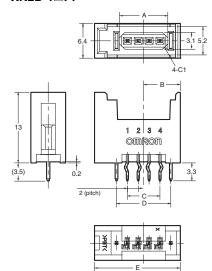

 
Applicable PCB Dimensions (Top View) t=1.6±0.2



Dimensions

Dimension (mm) No. of contacts	А	В	С	D	E
3	6.9	5.8	4.0	8.0	13.8
4	8.9	6.8	6.0	10.0	15.8
5	10.9	7.8	8.0	12.0	17.8
6	12.9	8.8	10.0	14.0	19.8
8	16.9	10.8	14.0	18.0	23.8

Four-socket PCB Socket Connector XN2D-4471

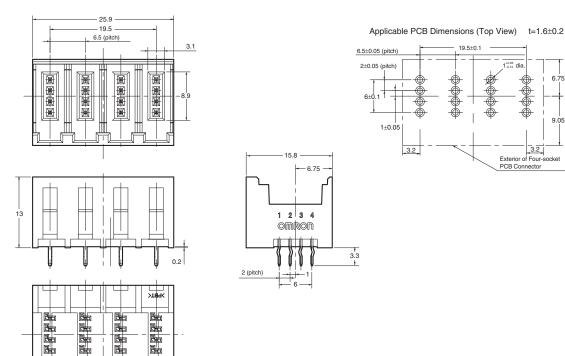

Tool Jig


■

Tool Jig for XN2A-140 (except for those with 3 pins)/ XN2B-1470

With the simple tool Jig, assembly can be completed for 4 wires simultaneously.

 XN2Z-0001






Assembly Instructions


(1) Push in the operating lever at once until it is locked.



 
(2) Insert the 4 wires to insertion hole.



(3) Insert operation jig into lock release slot.

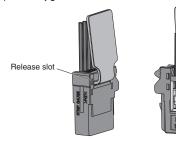

 (4) Move the jig as follows and release operating lever at once.




XN2

Assembly Instructions

Preparing the Cable

 
Align the cable with the guide marked STRIP GAUGE on the side of the Connector, strip 7 to 8 mm of the cable sheath, and then twist the wires several times.




Connecting the Cable to the Connector

(1) Use a flat-blade screw-driver to push down the operating lever inside the operation slot until it locks.

 (2) Insert the wire fully to



the back of the wire Operation slot insertion hole. Make sure that the cable sheath is inserted into the hole, and that the end of the wire has passed through the contact section.

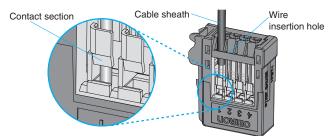


Safety Precautions

Precautions for Safe Use

- Do not pull on the Connectors or cables. Doing so may cause damage to the Connectors or cause the cables to disconnect.
- Install the Connectors in a location where they will not be stepped on, to prevent disconnection of the cables or damage to the Connectors. If the Connectors have to be installed in such a location, use a protective cover.
- Make sure that the Connectors are mated in the correct direction. Mating the Connectors incorrectly will damage to the Connectors.
- Do not use the Connectors if the lock lever is bent or broken. Doing so may cause the Connector to become loose or the device to malfunction.
- Before mounting Connectors to a PCB, make sure that the Connectors are positioned in the correct direction.
- Before bending a cable to connect it to a Connector, check the bending specifications of the cable to be used.
- Do not exceed the rated current of the cable. Always check the rated current of each cable to be used.
- Do not use pliers or other tools to remove the Connectors.
- Hold the Connectors firmly by hand when handling them. Do not use excessive force to push the Connectors. Forcing the Connectors may result in injury.
- These Connectors do not resist water. Do not use Connectors in places where water or oil may be sprayed onto the Connectors.

(3) Insert the screwdriver into the release slot, and gently pull back the lever until a click is heard by resetting the lever.




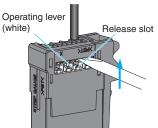

- (4) Make sure that the following operations have been performed.
- Check that the operating lever is reset.
- Check that the procedure in step 2 has been followed. (Pull gently on the cable to make sure that there is resistance, indicating that the Connectors are wired correctly.)

Removing Cables from the Connector

- Press down on the operating lever to lock the lever before removing the cable.
- (2) After removing the cable from the Connector, always reset the operating lever, except when rewiring the Connector. The Connector can be rewired without resetting the operating lever.

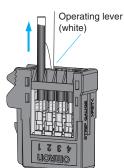

Precautions for Correct Use

Do not use the product in atmospheres or environments that exceed product ratings.

Wiring

- Insert one wire into each insertion hole. Inserting two or more wires into a single hole may cause unexpected problems.
- Make sure that no power is being supplied to a Connector before wiring, inserting, or removing the Connector. Doing so may result in electric shock.
- Follow the wiring diagrams for the device being used when wiring the cables.
- Strip the cables according to the instructions in the applicable operation manual, making sure not to damage the wires.
- Do not use a screwdriver with a tip larger than the specified width when wiring the Connectors.

• Make sure short-circuits are not created, e.g., by protruding wires. Inserting and Removing Connectors

- When connecting or disconnecting Connectors, always hold the case of the Connector.
- When mating Connectors, insert the Connector fully into the back of the socket, and then make sure that the Connector will not become loose by lightly pulling it in the opposite direction.

Recommended Screwdriver

- Use a flat-blade screwdriver with a tip of 2 mm max. Do not use screwdrivers that gradually widen towards the base of the screwdriver.
- Using other screwdrivers may cause damage to the adjacent poles.

Application examples provided in this document are for reference only. In actual applications, confirm equipment functions and safety before using the product.
Consult your OMRON representative before using the product under conditions which are not described in the manual or applying the product to nuclear control systems, railroad systems, aviation systems, vehicles, combustion systems, medical equipment, amusement machines, safety equipment, and other systems or equipment that may have a serious influence on lives and property if used improperty. Make sure that the ratings and performance characteristics of the product provide a margin of safety for the system or equipment, and be sure to provide the system or equipment with double safety mechanisms.

Note: Do not use this document to operate the Unit.

OMRON Corporation Electronic and Mechanical Components Company

Contact: www.omron.com/ecb

Cat. No. G044-E1-03 0315(0412)(O)