



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China





Z8932101ZEM

DSP FAMILY EMULATOR
DEVELOPMENT TOOLS—Z89321

FEATURES

Supported Devices

Packages	Emulation	OTP Programming
40-pin PDIP	Z89321/371 ¹	Z89371
44-pin PLCC	Z89321/371 ¹	Z89371 ^{1,2}
44-pin QFP	Z89321/371 ³	Z89371 ^{1,2}

Notes:

1. With optional, separately-purchased adapter (Z8937101ZAC) from ZiLOG.
2. With optional, separately-purchased adapter (Z8937100ZAC) from ZiLOG.
3. Requires optional, separately purchased emulation adapter, Z080QFP0ZET, from ZiLOG and emulation pod, EPP-080-QF08-W, from Emulation Technology.

- Provides Source-Level Debugging for DSP Codes.
- Symbolic Disassembly in the Debug Window
- Selectable Baud Rates—9600 to 57.6 Kbps
- Windows-Based User Interface
- RS-232 Connector
- ZDS (W/ ZiLOG Macro Cross Assembler)
 - Project Front End Interface (graphical-based)
 - Structured Assembly Code ('C' language-like)
 - Listing, Map, and Linker Control Files
 - ZDS Syntax-Highlighting Editor (Windows 95 Only)
 - ZDS Faster Error Correction (Windows 95 Only)

GENERAL DESCRIPTION

ZiLOG's in-circuit emulators are interactive Windows-oriented development tools that provide a real-time environment for developing and debugging software. Included with each of ZiLOG's emulators is a powerful, full-featured macro cross assembler. When used in conjunction with the Z89321 Emulator, this tool is designed to enhance programmer productivity.

The Emulator provides a hardware platform that is a significant improvement compared to software simulators. The

Emulator is faster in operation than simulators, making it more practical for code development.

The Z89321 Emulator, which supports the Z89321 family of DSP processors listed above, provides essential timing and I/O circuitry to simplify user emulation of the prototype hardware and software product.

The Z89321 Emulator can be connected to the serial port (COM1, COM2, COM3, or COM4) of the host computer, and it uses Graphical User Interface (GUI) software.

SPECIFICATIONS

Operating Conditions	
Operating Temperature:	20°C, ±10°C
Supply Voltage:	9.0 VDC @ 1.2 A wall adapter
Operating Humidity:	10%–90% RH (noncondensing)
Minimum Emulation Speed:	1 MHz
Maximum Emulation Speed:	20 MHz
Power Requirements	@ 0.8A typical, 1.2A maximum
Dimensions	
Width:	7.375 in. (18.733 cm)
Length:	9.75 in. (24.765 cm)
Height:	0.50 in. (1.27 cm)
Serial Interface	RS-232 @ 9600, 19200 (default), 28800, or 57600 Baud
Emulation Memory	DSP = 64 Kwords (maximum)
Number of Breakpoints	DSP = 256 (maximum)

HOST COMPUTER

Minimum Requirements

IBM PC (or 100-percent compatible) 486-based machine

- 33 MHz
- 4 MB RAM
- VGA Video Adapter
- Hard Disk Drive (3.0 MB free space)
- 3.5-inch, High-Density (HD) Floppy Disk Drive
- RS-232 COM Port
- Mouse or Pointing Device
- Microsoft Windows 3.1 (utilized with DSPICE software)

Recommended

The following changes to the Minimum Requirements are recommended for increased performance:

- 486- or Pentium-Based Machine
- 66 MHz (or faster)
- 8 MB of RAM (or more)
- SVGA Video Adapter
- Color Monitor
- Printer
- Microsoft Windows 95

KIT CONTENTS

Quantity	Item
1	Z8932101ZEM Emulator Board
Cables/Pods	
1	RS-232 Serial Cable, 9-pin M-F
1	9 VDC @ 1.2A Wall Adapter
Host Software	
1	DSP GUI diskette
1	ZDS/ZiLOG Macro Cross Assembler diskette
Documentation	
1	Z8932101ZEM Emulator User's Manual
1	ZiLOG Macro Cross Assembler User's Manual
1	Software License and Limited Warranty Agreement

PRECAUTIONS

1. GUI software versions prior to 3.00 are incompatible with hardware containing BOOTROM 3.00. The GUI software may still boot, but will fail at some later point.
 2. When simultaneously running two different GUI versions on two different Communication Ports, the former executed version is used for both emulators. These are typical Windows O/S bugs.
 3. The emulator cannot be operated while performing ESD/EMI testing on the target board.
 4. Executing GUI: The GUI will occasionally continue to indicate "Executing" after a HALT instruction. Pushing the GO button will then result in Executing. (Executing showing at the caption bar of the Debug window.)
 5. Ensure that the target cable is correctly aligned (pin-1 to pin-1) before inserting into the target system. Incorrect alignment may damage the emulator and/or the target system.
 6. Do not start the emulator with an OTP device in the programming socket. This action may cause the emulator to not start up correctly.
 7. A shorted PLCC or DIP OTP can crash the emulator when inserted into the OTP programming socket. If a PLCC part is inserted in such a way as to cause a temporary short, then functionality is lost. An attempt to perform BLANK CHECK on such a part will cause the "hour-glass" to appear continuously. The Windows application must be reset and restarted.
 8. The status color bar in the OTP dialog box will be cleared in the area where a new window opens on top of it.
 9. Do not press the emulator MASTER RESET when the emulator is in the OTP dialog for programming. If MASTER RESET is pressed while the GUI is doing OTP programming, close the OTP dialog box and reopen it to reload the information back to the hardware.
-
- Note:** The emulator is really sitting idle, although the Command Status shows "Processing" after the GUI reestablishes the communication link when "Retry" was selected in the "Out of Synchronization with the Emulator" dialog box.
-
10. When device serialization is enabled in the OTP dialog, the GUI copies the current serial number to code memory immediately before performing a VERIFY operation. If this behavior is undesirable, then device serialization should be disabled prior to invoking the VERIFY operation.
 11. Do not use the OTP operation while in the Debug's trace and/or animation mode.
 12. Option selections for the OTP are not cleared after changing a Device selection.
 13. The Edit|Fill|Memory Decimal radix option will not accept entry of more than 9,999 for the Fill Value. Please use the Hexadecimal radix option when using a fill value of more than 9,999 decimal.

LIMITATIONS

1. Switching ICEBOX emulators without quitting the GUI is not supported and may cause unexpected results.
2. The maximum loadable symbols is 32,768 (provided there is enough system memory).
3. Although version 3.00 or higher of the GUI may support baud rates up to 57.6K baud, the actual maximum usable rate may be less due to limitations of the users hardware and or system software setup. The maximum usable rate is determined by the users tolerance of the frequency of communication errors.
4. The GUI does not recognize the PUSH and POP instructions when entered in the In-Line Assembler (Debug window). As a workaround, use “LD STACK,xxx” for PUSH and “LD xxx,STACK” for POP.
5. The emulator breakpoint hardware cannot distinguish between instruction and data fetches. Consequently, the breakpoint hardware triggers when the address specified matches either an instruction or data fetch.

Example:

```
0000 LD A, #%0006
0002 ADD A, #%0002
0003 LD Y, @A
0004 NOP
0005 NOP
0006 JP %0000
0008 NOP
```

Setting a breakpoint at %0008 and clicking “GO” causes the code to break at %0004 due to the data fetch address match during the prior instruction. This anomaly does not occur during Animate mode because Animate mode does not use hardware breakpoints.

6. The STEP OVER button sets a temporary breakpoint on the next instruction and starts execution of the current instruction. If control does not return to the temporary breakpoint in a fixed amount of time a “ZILOG ICEBOX TARGET PROGRAM EXECUTION ERROR” message occurs. As a workaround, the user should simply set a regular breakpoint on the next instruction, and click on the GO button (perform this action in place of using the STEP OVER function).

Pre-Characterization Product:

The product represented by this CPS is newly introduced and ZiLOG has not completed the full characterization of the product. The CPS states what ZiLOG knows about this product at this time, but additional features or non-conformance with

some aspects of the CPS may be found, either by ZiLOG or its customers in the course of further application and characterization work. In addition, ZiLOG cautions that delivery may be uncertain at times, due to start-up yield issues.

© 1998 by ZiLOG, Inc. All rights reserved. No part of this document may be copied or reproduced in any form or by any means without the prior written consent of ZiLOG, Inc. The information in this document is subject to change without notice. Devices sold by ZiLOG, Inc. are covered by warranty and patent indemnification provisions appearing in ZiLOG, Inc. Terms and Conditions of Sale only.

ZILOG, INC. MAKES NO WARRANTY, EXPRESS, STATUTORY, IMPLIED OR BY DESCRIPTION, REGARDING THE INFORMATION SET FORTH HEREIN OR REGARDING THE FREEDOM OF THE DESCRIBED DEVICES FROM INTELLECTUAL PROPERTY INFRINGEMENT. ZILOG, INC. MAKES NO WARRANTY OF MERCHANTABILITY OR FITNESS FOR ANY PURPOSE.

ZiLOG, Inc. shall not be responsible for any errors that may appear in this document. ZiLOG, Inc. makes no commitment to

update or keep current the information contained in this document.

ZiLOG's products are not authorized for use as critical components in life support devices or systems unless a specific written agreement pertaining to such intended use is executed between the customer and ZiLOG prior to use. Life support devices or systems are those which are intended for surgical implantation into the body, or which sustains life whose failure to perform, when properly used in accordance with instructions for use provided in the labeling, can be reasonably expected to result in significant injury to the user.

ZiLOG, Inc.
910 East Hamilton Avenue, Suite 110
Campbell, CA 95008
Telephone (408) 558-8500
FAX 408 558-8300
Internet: <http://www.zilog.com>
