imall

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832 Email & Skype: info@chipsmall.com Web: www.chipsmall.com Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China





TECH BULLETIN

Title: Weller® Fume Extraction Filter Monitoring / Replacing

Model(s): All

Date: February 10, 2014

Description:

We understand how important filter monitoring is to optimizing the performance of your fume extraction system. Because we want it to be as easy as possible to know when it's time to replace the filter, many of our advanced systems have visual LED notifications and audible warnings. These units either use a pressure differential sensor or a sensor that monitors the unit's turbine speed.

Because older fume extraction systems don't have such external warning mechanisms, you will need to monitor the filter. You can determine when a filter is clogged by assessing the air flow. If there's a reduction in airflow, follow these simple steps to replace the filter:

- First, switch the unit off
- Remove the top cover and check if the unit has a pre-filter. If so, replace it. (*Note: Our WFE2X unit does not have a pre-filter)
- You'll likely replace the pre-filter about 10 times before the main HEPA filter requires replacement
- If vacuum is not restored to normal, it likely means you need a new HEPA filter
- To replace the HEPA filter, turn off the unit and insert the replacement
- Once filters have been replaced, replace the cover and turn on the unit

Questions? We're here for you.