



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China






DC-UPS WALL MOUNTING BRACKET

This accessory is used to mount the DC-UPS UBC10 units on a wall or on a panel without using a DIN-Rail. The bracket can be directly mounted without removing the aluminium brackets and the black plastic slide of the DC-UPS. The total installation depth will increase to 126mm.

PHYSICAL DIMENSIONS AND WEIGHT

Dimensions 123 x 156 x 13mm / 4.84" x 6.14" x 0.51" (WxHxD)

Weight 340g / 0.75lb

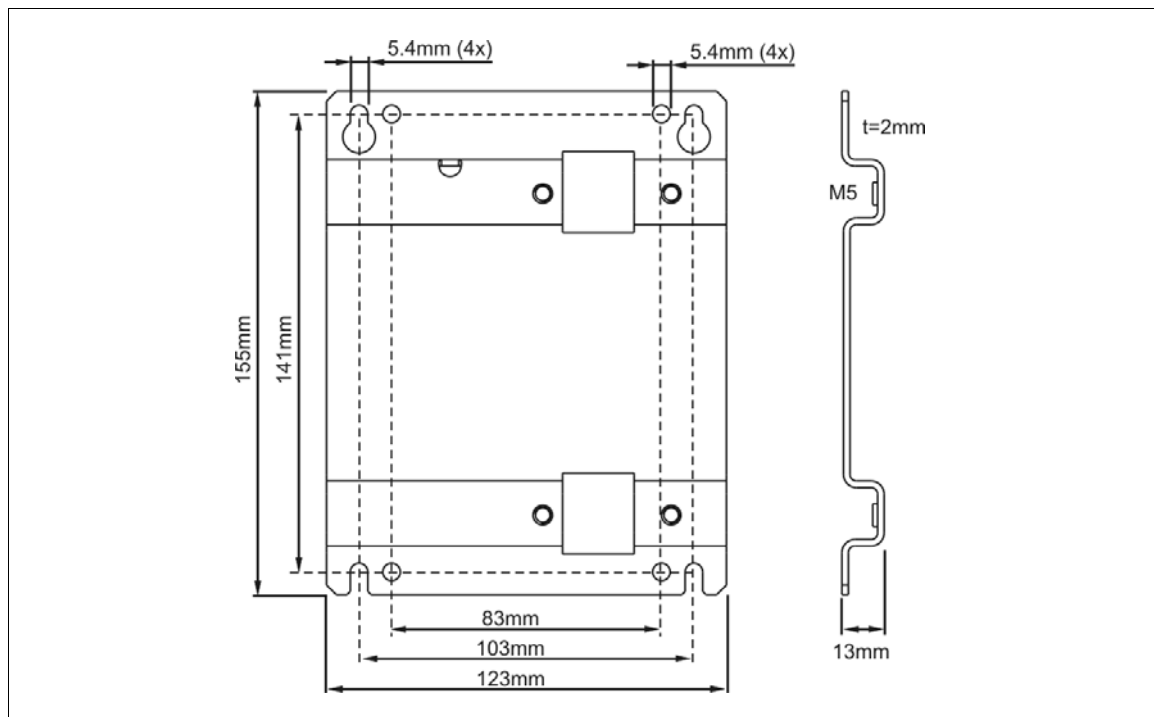


ORDER NUMBER

ZM1.UBC10 The order number consists of a set with one mounting bracket, four mounting screws (M5x8) and four 5mm spring-lock washers.

Jan. 2010 / Rev. 1.0 DS-ZM1.UBC10-EN
All parameters are specified at 25°C ambient unless otherwise noted.

ASSEMBLY AND MOUNTING INSTRUCTION

- Step 1:** Put the unit backwards on a flat surface and remove the fuse before working on the unit.
- Step 2:** Loosen the captive cover screw.
- Step 3:** Open the battery compartment.
- Step 4:** Remove the battery without disconnecting the connection wires.
- Step 5:** Put the ZM1.UBC10 bracket behind the unit.
- Step 6:** Screw the four screws and the four spring-lock washers, which were delivered with the mounting bracket, into the shown areas. Tightening torque: 3 Nm (27 lb inch)
- Step 7:** Return the battery into the housing, close the battery compartment and insert the fuse again.

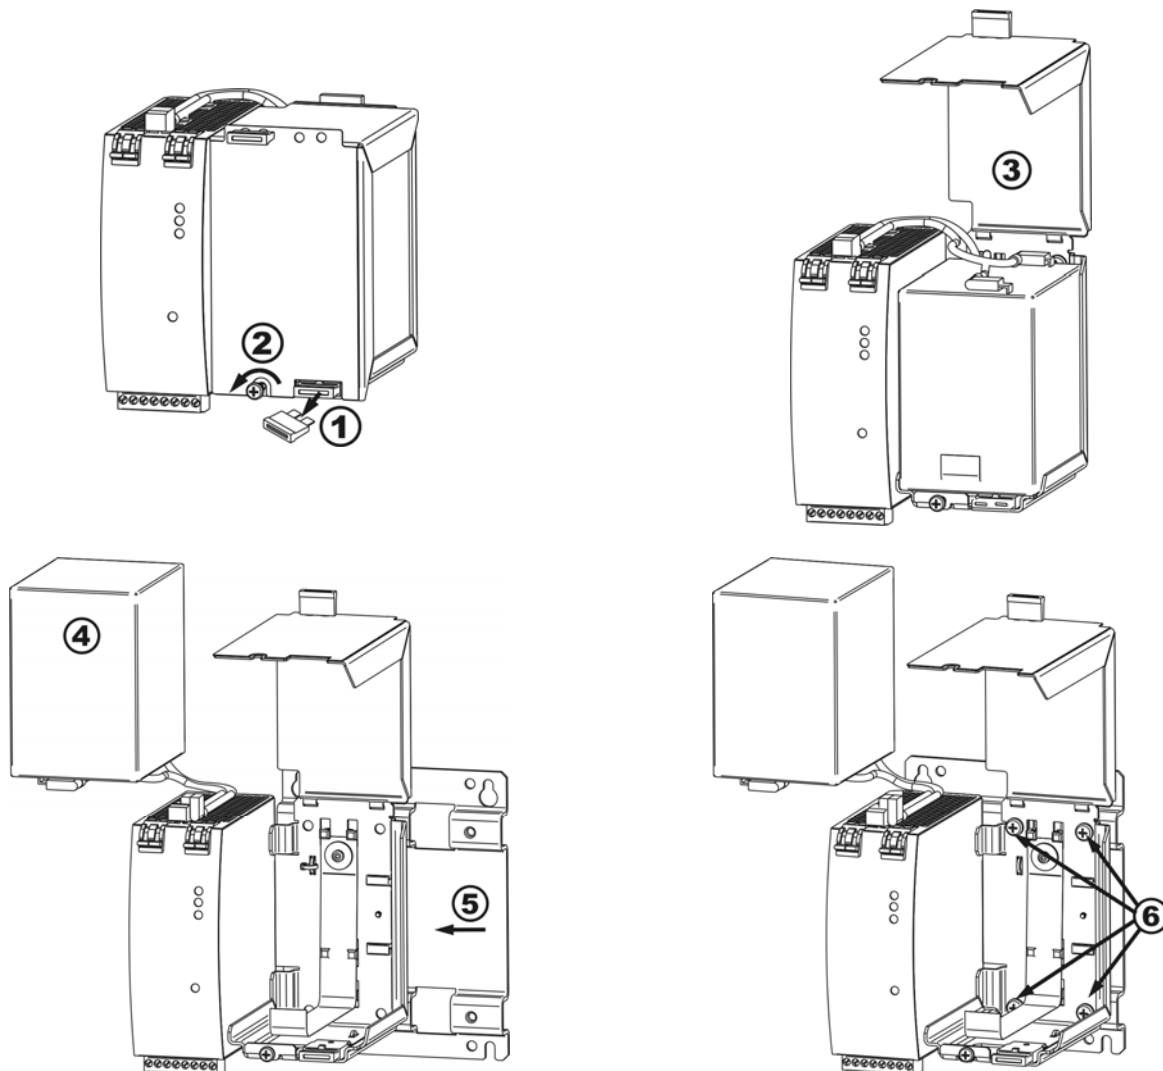

The information presented in this document is believed to be accurate and reliable and may change without notice. No part of this document may be reproduced or utilized in any form without permission in writing from the publisher.