

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



# Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China










## **T2 Terminator Tooling Specification Sheet** Part No. 63857-6000

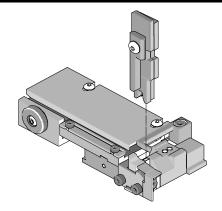


#### **FEATURES**

- It is ideally suited for mid-volume bench operations
- This terminator can be installed in the TM42 and the TM40 press or Base Unit adapter for 3BF press
- Quick punch removal with the push of a button for fast and easy tooling change
- Track adjustment capabilities in the T2 Terminators for improved control of the bell mouth size and cutoff tab
- T2 Terminator has standardized tooling with the Molex FineAdjust Applicator which will reduce your inventory requirements

#### **SCOPE**

Terminal Series No.	Wire Size		Insulation	Diameter	Strip Length		
Terminar Series No.	AWG	mm²	mm	In.	mm	ln.	
35452-9802	16-18	1.31-0.82	3.60 Max	.142 Max	4.80-5.20	.189205	
35453-9802	16-18	1.31-0.82	3.60 Max	.142 Max	4.80-5.20	.189205	

### **DEFINITION OF TERMS**

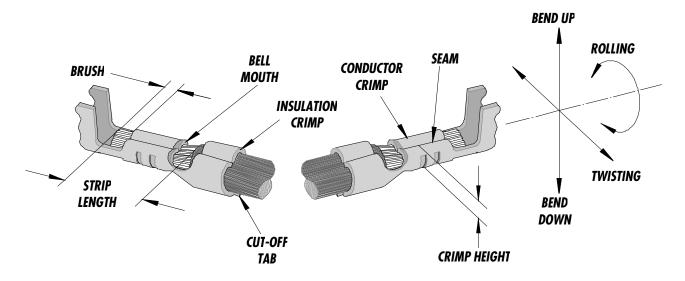

The above terminal drawing is a generic terminal representation. It is not an image of any terminal listed in the scope.

Doc No. 63857-6000 Release Date: 06-09-05 Revision: A Revision Date: 06-09-05

## **CRIMP SPECIFICATION**

Terminal Series No.	Bell r	nouth	Cut-off	Tab Max.	Conductor Brush		
rerininai series No.	mm	In.	mm	In.	mm	ln.	
35452-9802	0.30-0.60	.012024	0.50	.020	0.30-0.80	.012032	
35453-9802	0.30-0.60	.012024	0.50	.020	0.30-0.80	.012032	

		Bend down	Twist	Roll	Punch Width (Ref)				C
Terminal Series No. 35452-9802	Bend up				Conductor		Insulation		Seam Seam shall not be
					mm	In	mm	In	open and no wire
	3 °	3 °	3 °	<b>5</b> °	2.7	.10	4.0	.15	allowed
	3				0	6	0	7	out of the crimping
25452 0000	3 °	3 °	3 °	<b>5</b> °	2.7	.10	4.0	.15	area
35453-9802	3 °	3 °	J °	J *	0	6	0	7	ui eu

After crimping, the crimp profiles should measure the following:

Terminal Series No.	Wire Size		Conductor				Insulation				Pull Force Min.	
			Crimp Height		Crimp Width		Crimp Height Max.		Crimp Width		r on roice win.	
	AWG	mm²	mm	ln.	mm	In.	mm	ln.	mm	ln.	N	Lb.
35452-9802	16	1.31	1.60-1.80	.063071	2.69-2.91	.106115	4.40	.173	4.00	.157	176.4	39.7
35452-9802	18	0.82	1.30-1.50	.051059	2.69-2.91	.106115	4.40	.173	4.00	.157	122.6	27.6
35453-9802	16	1.31	1.60-1.80	.063071	2.69-2.91	.106115	4.40	.173	4.00	.157	176.4	39.7
35453-9802	18	0.82	1.30-1.50	.051059	2.69-2.91	.106115	4.40	.173	4.00	.157	122.6	27.6

## \* Tool Qualification Notes:

- 1. This Terminator was qualified to the above specifications with UL1015 wire.
- 2. Pull Force should be measured with no influence from the insulation crimp.
- 3. The above specifications are guidelines to an optimum crimp.


Doc No. 63857-6000 Release Date: 06-09-05
Revision: A Revision Date: 06-09-05

## **PARTS LIST**

Item	Order No	Engineering No.	Description	Quantity
	63857-6000	63857-6000	T2 Terminator (Fig. 1)	REF
1	63444-2725	63444-2725	Conductor Punch	1 Y
2	63445-2778	63445-2778	Conductor Anvil	1 Y
3	63446-4025	63446-4025	Insulation Punch	1 Y
4	63445-4048	63445-4048	Insulation Anvil	1 Y
5	63443-0035	63443-0035	Cut-Off Plunger Front	1 Y
6	63443-0036	63443-0036	Plunger Retainer Front	1 Y
7	63700-0539	63700-0539	Cut-off Plunger Spring	1
8	63443-3160	63443-3160	Plunger Striker Front	1
9	63443-0021	63443-0021	Lower Tooling Key	1
10	63443-6013	63443-6013	Rear Cover	1
11	11-18-4083	60707-8	Front Cover	1
12	63443-2506	63443-2506	Anvil Mount	1
13	63800-8504	63800-8504	Wire Stop	1
14	63443-0009	63443-0009	Scrap Chute Front	1
15	63800-8800	63800-8800	Wide Track T2 Terminator	1
16	N/A	N/A	M3 by 6Lg. SHCS	<b>2</b> **
17	N/A	N/A	M4 by 6Lg. SHCS	1**
18	N/A	N/A	M4 by 12Lg. BHCS	<b>2</b> **
19	N/A	N/A	M4 by 50Lg. SHCS	<b>2</b> **
20	N/A	N/A	M4 by 12Lg. SHCS	1**
21	N/A	N/A	3MM by 6Lg. Roll Pin	1**
22	N/A	N/A	#10-32 by 3/8"Lg. BHCS	1**
	63857-6070	63857-6070	Tool Kit (All Y Items)	REF

<sup>\*\*</sup> The following purchased parts are available from an Industrial supply company such as MSC (1-800-645-*7270)*.

Doc No. 63857-6000 Release Date: 06-09-05 Revision: A Revision Date: 06-09-05

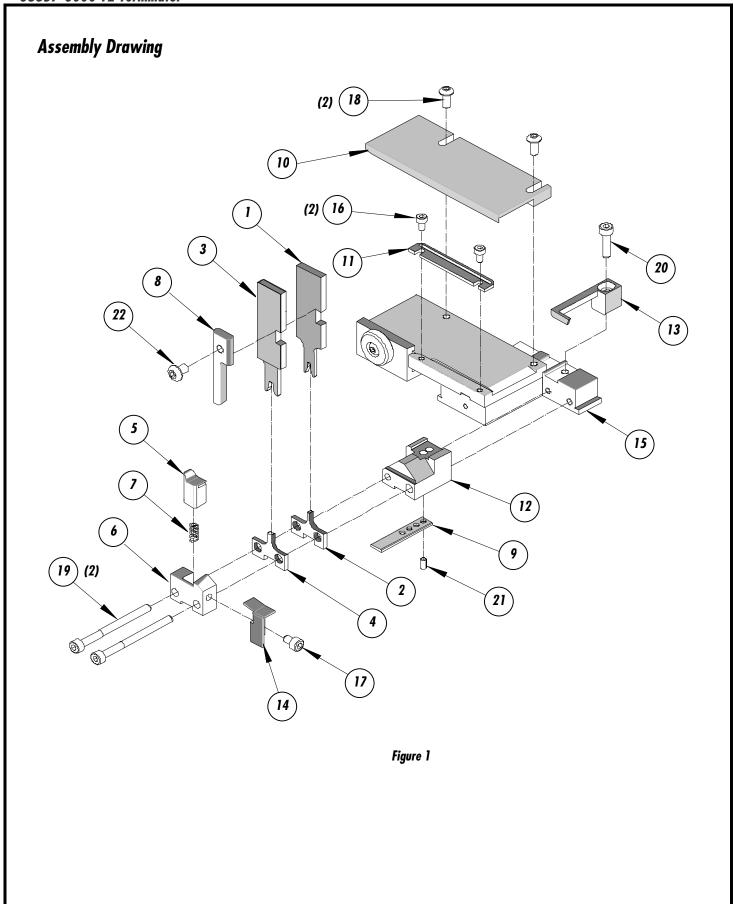

Doc No. 63857-6000 Release Date: 06-09-05
Revision: A Revision Date: 06-09-05

#### **NOTES**

Depending on the press vintage a feed finger assembly is supplied with the T2 Terminator.

- 1. To remove the existing feed finger assembly loosen the M4  $\times$  10 mm set screw in the feed lever.
- 2. Select T2 Feed finger assembly from Terminator box.
- 3. Insert a screwdriver into the slot behind the feed lever and force the feed arm spring to the right.
- 4. Slide the T2 feed finger shaft for TM42 (11-40-5307) or (11-40-0123) for TM40 /Base Unit into the feed lever and to the left of the feed arm spring.
- 5. Release the feed arm spring.
- 6. Position feed finger for selected product. (Refer to Figure 5.1 in the T2 Manual).

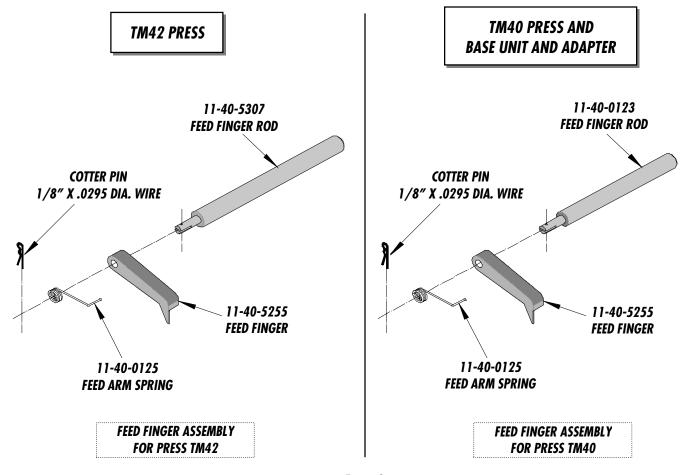


Figure 2

Page 5 of 6

**UNCONTROLLED COPY** Revision: A Revision Date: 06-09-05

#### **NOTES**

- 1. Molex recommends an extra perishable tooling kit be maintained at your facility.
- 2. Verify tooling alignment by manually cycling the press before crimping under power. Check that all screws are tight.
- 3. Slugs, Terminals, Dirt and Oil should be kept clear of work area.
- 4. This Terminator should be only used in a Molex TM42, TM40, or 3BF Press with a Base Unit adaptor.
- 5. Wear safety glasses at all times.
- 6. For recommended maintenance refer to the TM40, TM42 Manual.

CAUTION: To prevent injury never operate this Terminator without the guards supplied with the press or in place. Reference the TM42 press manufacturer's instruction manual.

CAUTION: Molex crimp specifications are valid only when used with Molex terminals, applicators and tooling.

Molex Application Tooling Group 1150 E. Diehl Road Naperville, IL 60563 Tel: (630) 969-4550 Fax: (630) 505-0049

Visit our Web site at http://www.molex.com

Doc No. 63857-6000 Release Date: 06-09-05 UNCONTROLLED COPY Page 6 of 6