imall

Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from, Europe, America and south Asia, supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of "Quality Parts, Customers Priority, Honest Operation, and Considerate Service", our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip, ALPS, ROHM, Xilinx, Pulse, ON, Everlight and Freescale. Main products comprise IC, Modules, Potentiometer, IC Socket, Relay, Connector. Our parts cover such applications as commercial, industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832 Email & Skype: info@chipsmall.com Web: www.chipsmall.com Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China




T2 Terminator

Tooling



Application Tooling Specification Sheet

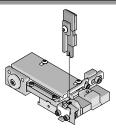

Order No. 63910-9900

FEATURES

- It is ideally suited for mid-volume bench operations
- This terminator can be installed in the TM42 and the TM40 press or Base Unit adapter for 3BF press
- Quick punch removal with the push of a button for fast and easy tooling change
- Track adjustment capabilities in the T2 Terminators for improved control of the bell mouth size and cutoff tab length
- T2 Terminator has standardized tooling with the Molex FineAdjust Applicator which will reduce your inventory requirements

SCOPE


Products: MLX™ Crimp Terminals, 14-20 AWG.

| Terminal | Terminal Order No. | | Wire Size | | | Insulation | Strip Length | | | |
|------------|---|------------|-----------|-----------|-------------------|------------|--------------|---------|--------------|---------|
| Series No. | | | | | IPC/WHMA-A620 (1) | | | | Terminal (2) | |
| Series NO. | | | AWG | mm² | mm | In. | mm | In. | mm | In. |
| | 02-08-2003 | 02-08-2009 | | | | | | | | |
| 42023 | 02-08-2005 | 02-08-2011 | 14-20 | 2.00-0.50 | 2.41-2.95 | .095116 | 1.52-3.30 | .060130 | 3.96-5.54 | .156218 |
| | 02-08-2007 | 02-08-2012 | | | | | | | | |
| 42024 | 02-08-1001 | 02-08-1005 | 14-20 | 2.00-0.50 | 2.41-2.95 | .095116 | 1.52-3.30 | .060130 | 3.96-5.54 | .156218 |
| 42024 | 02-08-1003 | 02-08-1007 | 14-20 | | | | | | | |
| | 1) To achieve optimum IPC-A620 insulation crimps, use this insulation OD range. | | | | | | | | | |

(2) Overall insulation OD specification for terminal.

To achieve optimum IPC-A620 insulation crimps for 2.08-2.50mm (.082-.098") diameter, use Terminator 63910-7500. To achieve optimum IPC-A620 insulation crimps for 2.65-3.30mm (.104-.130") diameter, use Terminator 63910-9800.

DEFINITION OF TERMS

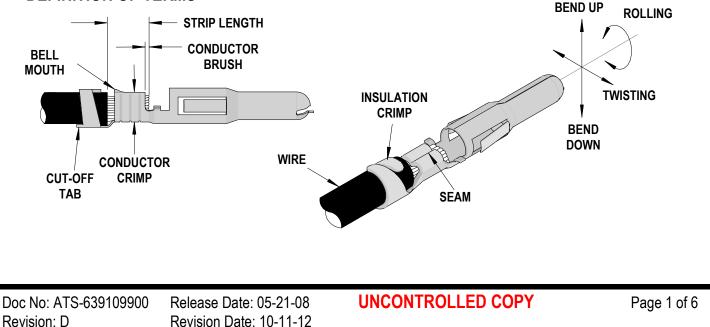

CRIMP SPECIFICATION

| Terminal Series No. | Bell n | nouth | Cut-off Tab | o Maximum | Conductor Brush | | |
|---------------------|-----------|---------|-------------|-----------|-----------------|---------|--|
| Terminal Series No. | mm | In. | mm | ln. | mm | ln. | |
| 42023 | 0.25-0.51 | .010020 | 0.13 | .005 | 0.3870 | .015027 | |
| 42024 | 0.25-0.51 | .010020 | 0.13 | .005 | 0.3870 | .015027 | |

| [| Terminal | Bend up E | Twist | Roll | Punch Width mm (Ref) | | | | C | |
|---|------------|-----------|--------|------|----------------------|------|------------|------|---|-----------------------|
| | Series No. | Dee | Degree | | Conductor | | Insulation | | Seam | |
| | Series NO. | Deg | | | mm | In | mm | In | Seam shall not be open and no wire allowed out | |
| ĺ | 42023 | 3 | 3 | 4 | 8 | 2.30 | .090 | 3.20 | .126 | of the crimping area |
| | 42024 | 3 | 3 | 4 | 8 | 2.30 | .090 | 3.20 | .126 | or the chiliping area |

After crimping, the conductor profile should measure the following.


| | Wire Size | | | Pull Force | | | | |
|---------------------|-----------|-----------------|-----------|------------|-----------|---------|-------|------|
| Terminal Series No. | | | Hei | ght | Wie | Minimum | | |
| | AWG | mm ² | mm | In | mm | In | Ν | Lb. |
| | 14 | 2.00 | 1.70-1.80 | .067071 | 2.33-2.53 | .092100 | 222.4 | 50.0 |
| 42023 | 16 | 1.30 | 1.45-1.55 | .057061 | 2.31-2.51 | .091099 | 200.2 | 45.0 |
| 42025 | 18 | 0.80 | 1.27-1.37 | .050054 | 2.28-2.48 | .090098 | 133.4 | 30.0 |
| | 20 | 0.50 | 1.14-1.24 | .045049 | 2.24-2.44 | .088096 | 62.3 | 14.0 |
| | 14 | 2.00 | 1.70-1.80 | .067071 | 2.33-2.53 | .092100 | 222.4 | 50.0 |
| 42024 | 16 | 1.30 | 1.45-1.55 | .057061 | 2.31-2.51 | .091099 | 200.2 | 45.0 |
| 72024 | 18 | 0.80 | 1.27-1.37 | .050054 | 2.28-2.48 | .090098 | 133.4 | 30.0 |
| | 20 | 0.50 | 1.14-1.24 | .045049 | 2.24-2.44 | .088096 | 62.3 | 14.0 |

Tool Qualification Notes:

- 1. Pull Force should be measured with no influence from the insulation crimp.
- 2. The above specifications are guidelines to an optimum crimp.

PARTS LIST


| T2 Terminator 63910-9900 | | | | | | | | | | |
|--|------------|------------|-----------------------------------|-----|--|--|--|--|--|--|
| ltem | Order No | Quantity | | | | | | | | |
| Perishable Tooling | | | | | | | | | | |
| | 63910-9970 | 63910-9970 | Tool Kit (All "Y" Items) | REF | | | | | | |
| 1 | 63444-2313 | 63444-2313 | Conductor Punch | 1 Y | | | | | | |
| 2 | 63445-2343 | 63445-2343 | Conductor Anvil | 1 Y | | | | | | |
| 3 | 63446-3212 | 63446-3212 | Insulation Punch | 1 Y | | | | | | |
| 4 | 63445-3216 | 63445-3216 | Insulation Anvil | 1 Y | | | | | | |
| 5 | 63443-0002 | 63443-0002 | Front Cut-Off Plunger | 1 Y | | | | | | |
| 6 | 63443-0012 | 63443-0012 | Front Plunger Retainer | 1 Y | | | | | | |
| Other Components | | | | | | | | | | |
| 7 | 11-18-4083 | 60707-8 | Feed Guide | 1 | | | | | | |
| 8 | 11-24-1067 | 4996-4 | Cut-Off Plunger Spring | 1 | | | | | | |
| 9 | 63443-0009 | 63443-0009 | Front Scrap Chute | 1 | | | | | | |
| 10 | 63443-0024 | 63443-0024 | Key | 1 | | | | | | |
| 11 | 63443-0085 | 63443-0085 | Wire Stop L-Bracket | 1 | | | | | | |
| 12 | 63443-0090 | 63443-0090 | Wire Stop | 1 | | | | | | |
| 13 | 63443-1716 | 63443-1716 | Height Spacer (18.60mm) | 1 | | | | | | |
| 14 | 63443-2214 | 63443-2214 | Coarse Spacer (14.00mm) | 1 | | | | | | |
| 15 | 63443-2318 | 63443-2318 | Fine Spacer (3.90mm) | 1 | | | | | | |
| 16 | 63443-2801 | 63443-2801 | Front Plunger Striker | 1 | | | | | | |
| 17 | 63443-2908 | 63443-2908 | Wire Hold Down Plunger | 1 | | | | | | |
| 18 | 63443-6013 | 63443-6013 | Rear Cover | 1 | | | | | | |
| 19 | 63443-7201 | 63443-7201 | Spring Cover | 1 | | | | | | |
| 20 | 63600-1057 | 63600-1057 | Wire Hold Down Spring | 1 | | | | | | |
| 21 | 63600-2972 | 63600-2972 | Collar | 2 | | | | | | |
| | | | Frame | | | | | | | |
| 22 | 63800-8500 | 63800-8500 | T2 Terminator | 1 | | | | | | |
| | | Н | ardware | | | | | | | |
| 23 | N/A | N/A | M3 by 6 Long SHCS | 2** | | | | | | |
| 24 | N/A | N/A | M3 by 6 Long FHCS | 1** | | | | | | |
| 25 | N/A | N/A | M4 by 6 Long SHCS | 2** | | | | | | |
| 26 | N/A | N/A | M4 by 12 Long BHCS | 2** | | | | | | |
| 27 | N/A | N/A | M4 by 14 Long SHCS | 2** | | | | | | |
| 28 | N/A | N/A | M4 by 30 Long SHCS | 2** | | | | | | |
| 29 | N/A | N/A | M4 by 50 Long SHCS | 2** | | | | | | |
| 30 | N/A | N/A | M5 by 12 Long SHCS | 1** | | | | | | |
| 31 | N/A | N/A | #10-32 by 5/8"Long Flat Point SSS | 1** | | | | | | |
| 32 | N/A | N/A | #10-32 Hex Jam Nut | 1** | | | | | | |
| ** Available from an industrial supply company such as MSC (1-800-645-7270). | | | | | | | | | | |

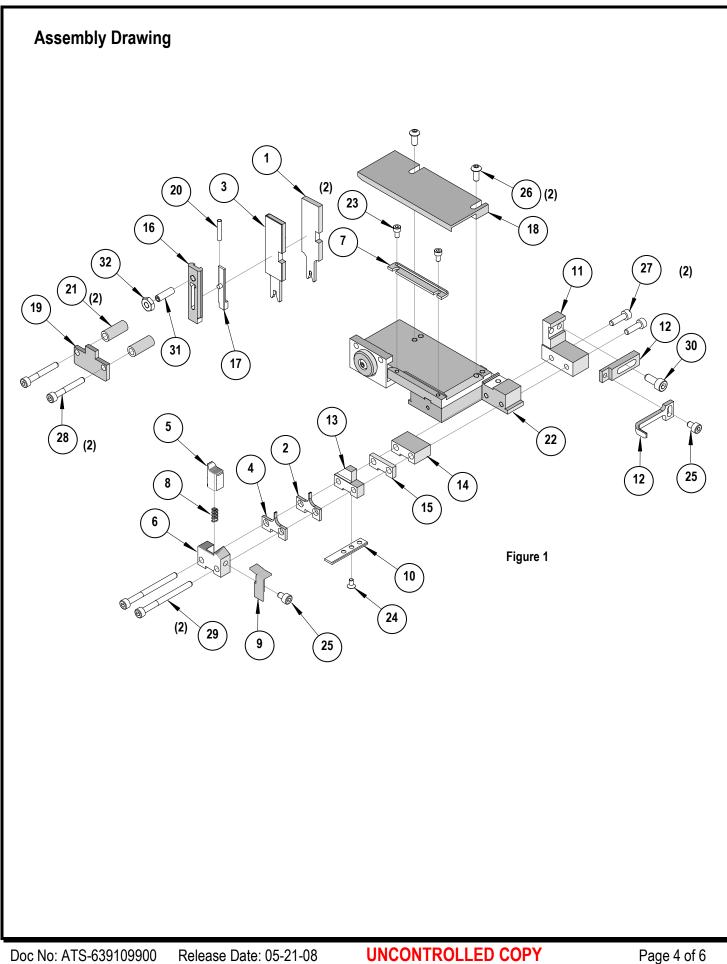

NOTES

Depending on the press vintage a feed finger assembly is supplied with the T2 Terminator.

- 1. To remove the existing feed finger assembly loosens the M4 x 10 mm set screw in the feed lever.
- 2. Select T2 Feed finger assembly from Terminator box.
- 3. Insert a screwdriver into the slot behind the feed lever and force the feed arm spring to the right.
- 4. Slide the T2 feed finger shaft for TM42 (11-40-5307) or (11-40-0123) for TM40 /Base Unit into the feed lever and to the left of the feed arm spring.
- 5. Release the feed arm spring.
- 6. Position feed finger for selected product. (Refer to Figure 5.1 in the T2 Manual).

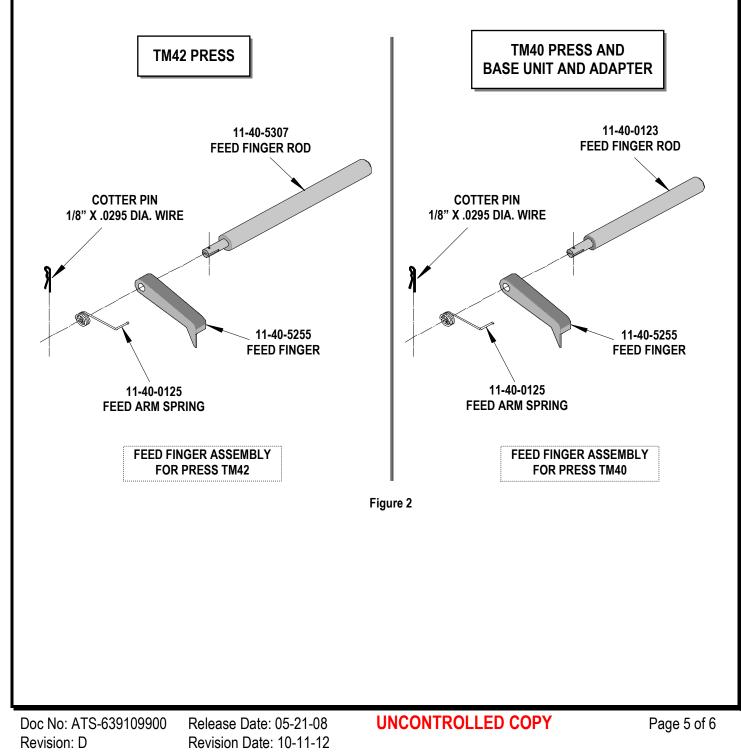

NOTES

- 1. Molex recommends an extra perishable tooling kit be maintained at your facility.
- 2. Verify tooling alignment by manually cycling the press before crimping under power. Check that all screws are tight.
- 3. Slugs, Terminals, Dirt and Oil should be kept clear of work area.
- 4. This Terminator should be only used in a Molex TM42, TM40, or 3BF Press with a Base Unit adaptor.
- 5. Wear safety glasses at all times.
- 6. For recommended maintenance refer to the TM40, TM42 Manual.

CAUTION: To prevent injury never operate this Terminator without the guards supplied with the press or in place. Reference the TM42 press manufacturer's instruction manual.

CAUTION: Molex crimp specifications are valid only when used with Molex terminals, applicators and tooling.

Visit our Web site at http://www.molex.com

Release Date: 05-21-08 Revision Date: 10-11-12