



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



Contact us


Tel: +86-755-8981 8866 Fax: +86-755-8427 6832

Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



Seeeduino v4.2

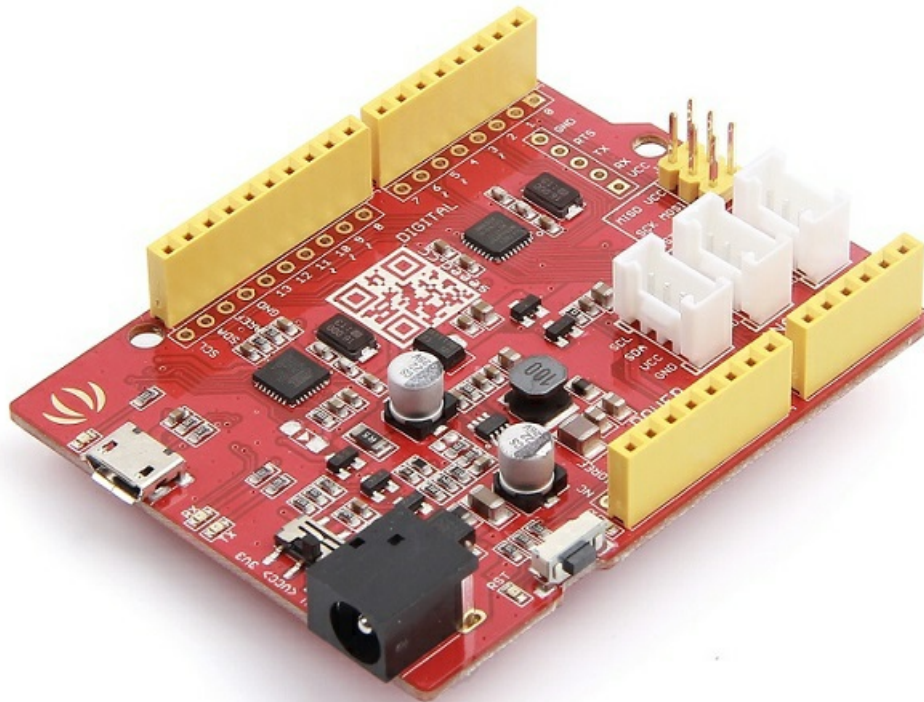

Seeeduino v4.2 is an Open Source, Arduino-compatible ATmega328 MCU development board. We think Seeeduino v4.2 is one of the best Arduino derivatives/compatibles available. Seeeduino v4.2 is feature rich, much more stable, easy-to-use and even good looking.

Seeeduino v4.2 is based the Arduino UNO bootloader, an ATmega16U2 as a UART-to-USB converter (basically work like an FTDI USB2UART chip). The board comes with an additional set of through-hole pads for all pins. These pads are aligned to 0.1" grid. This makes it easy to solder additional pin-headers to plug into breadboard or create your own attachment/shield with 0.1" dot-matrix general purpose PCBs.

You can program the board via a micro-USB cable. Also, you can power the board via a DC Jack input (7 to 15V DC) is acceptable. There is a switch to choose the system's supply voltage either 3.3V or 5V, which is very useful if you want to set the system to 3.3V to interact with low voltage sensors.

Finally, the three on-board Grove interfaces can make your board connect to Grove modules easily. Want to make something awesome, maybe just a Seeeduino v4.2 and some Groves is enough.

[Get One Now !\[\]\(a870788d6ed9b8fd294b7654a8c8526b_img.jpg\)](#)

Version

Product Version	Changes	Released Date
Seeeduino V4.0	Initial	Aug 15, 2014
Seeeduino V4.2	<ol style="list-style-type: none">1.Cancel some pad on the top left corner.2.Change the usb location to middle3.Improve DCDC circuit to get a better performance4.Add an I2C Grove connector5.Change some silkscreen and part location	Aug 24, 2015

Features

- Fully compatible with Arduino UNO
- ATmega328 microcontroller
- 14 Digital I/O Pins (6 PWM outputs)
- 6 Analog Inputs
- ISP Header


- Arduino UNO-R3 Shield Compatible
- Micro USB programming and power supply
- On-board Grove connectors
- 3.3/5V system operation power switch
- Additional pads aligned to 0.1" grid

Specification

Parameter	Value/Range
DC Jack Input	7-12V
DC Output Current-5V Pin	With Micro USB 500mA Max
	With DC Jack Power 2000mA Max
DC Output Current-3V3 Pin	500mA Max
DC Current per I/O Pin	40mA
Flash Memory	32 KB
RAM	2 KB
EEPROM	1 KB
Clock Speed	16 MHz
Dimension	68.6mm x 53.4mm
Weight	26g

Hardware Overview

The images below show an overview of Seeeduino v4.2 hardware features. The pin-out and alternate functions of various pins of Seeeduino v4.2 are shown in the pin-out diagram. This could be used as a quick reference.

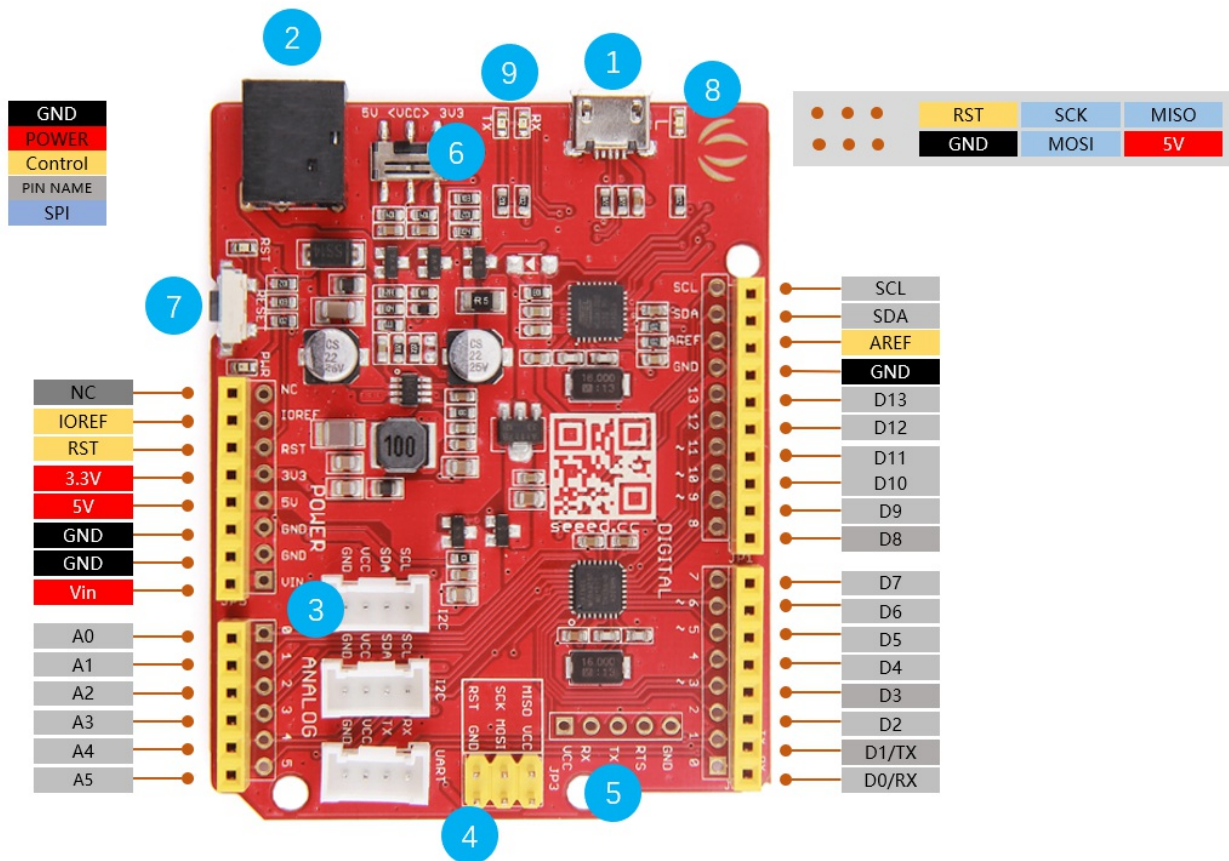

- 1 USB Input:**
USB Port is used to connect the board to your PC for programming and for powering up.
- 2 DC Input:**
The DC power jack allows your Seeeduino board to be powered from a wall adapter so that you can supply more power to your project if needed. For example, when using DC motors or other high power devices. The DC input can be 7V-15V.
- 3 Grove Connectors:**
SeeedStudio has a variety of sensors/devices that can make use of this I2C or UART connection. In addition, we sell independent Grove connectors to help you make our own sensor connections. The I2C Grove connector is also connected to analog pin A4 and A5 for SDA and SCL respectively if you would like to use those pins instead. The UART Grove connector is connected to digital pins 0 and 1 for RX and TX respectively.
- 4 ICSP:**
This is the ICSP connection for the ATmega328P; it is located in the standard ICSP/SPI position for Arduino Uno, Due, Mega, and Leonardo compatible hardware (e.g. shields) that may use this connector. The SPI pins in this port: MISO, SCK, and MOSI, are also connected to digital pins 12, 13, and 11 respectively just like those of the Arduino Uno.
- 5 USB 2-Uart:**
Pinout of USB-2-Uart. These pads can be used to interact with other UART devices by putting the on-board ATmega328 in reset mode. This makes Seeeduino V4.2 to be used as a USB2UART utility board.
- 6 System Power Switch:**
Slide switch is used to change the logic level and operating voltage of the board to either 5V or 3.3V.
- 7 Reset:**
This button is conveniently placed on the side to allow you to reset the Seeeduino board even when a shield is placed on top. This is not the case in other Arduino boards where the button is placed on top making it hard to access.
- 8 LED-D13:**
The LED is connected to D13 pin of the board. This can be used as an on-board LED indicator for programs/sketches.

- **9 RX/TX Indicator:**

The TX and RX LED indicators are connected to TX and RX of USB-to-UART chip. They work automatically, they let you know when the board is sending or receiving data respectively.

!!!Warning

Please plug the USB cable gently, otherwise you may damage the interface


Getting Started

!!!Note

If this is your first time using Arduino, please refer to [Getting Started with Arduino](#).

Hardware

- Step 1. Prepare a Seeeduino V4.2 and a Micro-USB cable.
- Step 2. Connect the Seeeduino V4.2 to your computer with the Micro-USB Cable.

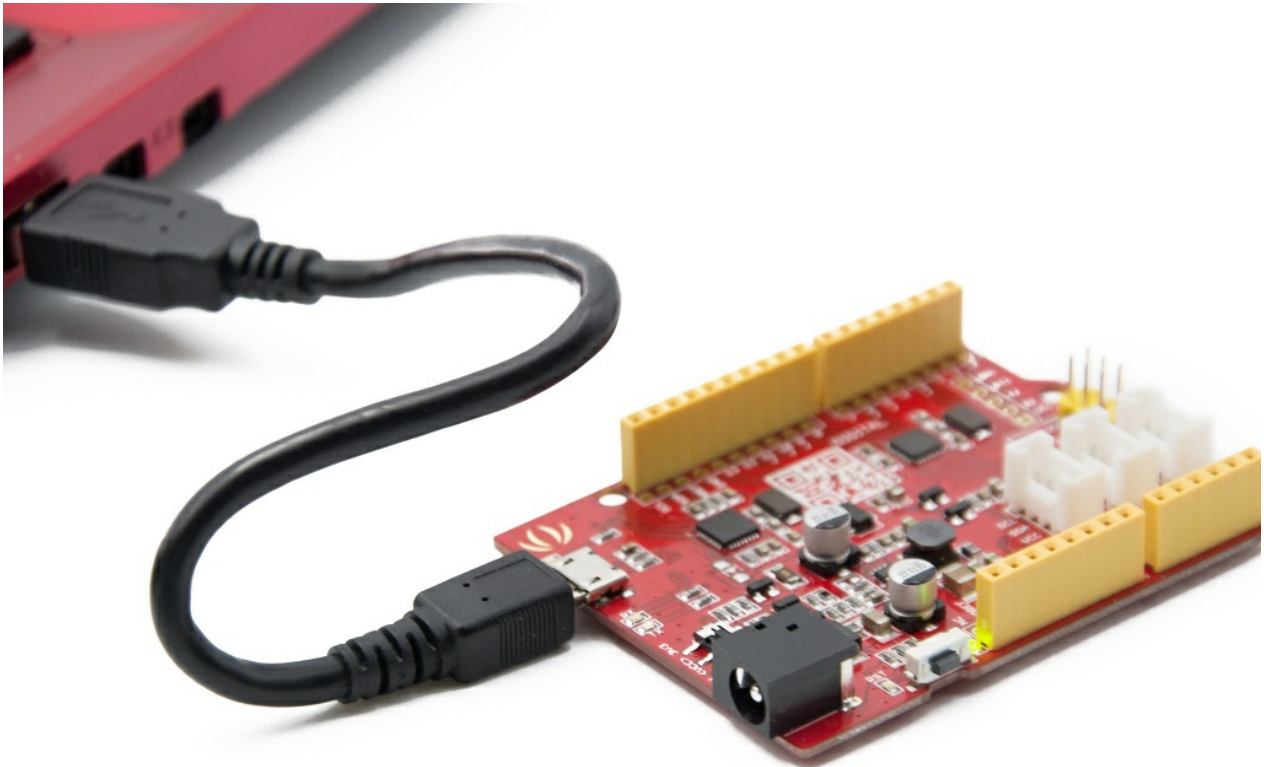

Then the green power LED (labeled PWR) should go on.

!!!Note

Please use the USB cable with 4 wires inside, the 2 wires cable can't transfer data. If you are not sure about the wire you have, you can click [here](#) to buy

Software

Step 1. Install the Driver for Seeeduino V4.2.

For Windows

!!!Note

This driver is available for Windows XP, Windows Vista, Windows 7, Windows 8/8.1 and Windows 10.

[Download Driver for Seeeduino V4](#)

- Plug in your board and wait for Windows to begin its driver installation process. After a few moments, the process will fail, despite best efforts.
- Click on the Start Menu, and open up the Control Panel.
- While in the Control Panel, navigate to System and Security. Next, click on System. Once the System window is up, open the **Device Manager**.
- Look under Ports (COM & LPT). You should find an open port named "Seeeduino v4.2". If there is no COM & LPT section, look under "Other Devices" for "Unknown Device".
- Right click on the "Seeeduino v4.2" port and choose the "Update Driver Software" option.
- Next, choose the "Browse my computer for Driver software" option.
- Finally, navigate to and select the driver file named "seeed_usb_serial.inf"
- Windows will finish up the driver installation from there.

For Mac OSX and Linux

You don't need to install any drivers.

Step 2. Launch the Arduino application.

Double-click the Arduino application (arduino.exe) you have previously installed.

!!!Note

If the Arduino Software loads in a different language, you can change it in the preferences dialog. See the [Arduino Software \(IDE\) page](#) for details.

Step 3. Open the Blink example.

Find the LED blink example sketch: **File > Examples >01.Basics > Blink**.


```

10  This example code is in the public domain.
11
12  modified 8 May 2014
13  by Scott Fitzgerald
14  */
15
16
17  // the setup function runs once when you press reset or power the board
18  void setup() {
19    // initialize digital pin 13 as an output.
20    pinMode(13, OUTPUT);
21  }
22
23  // the loop function runs over and over again forever
24  void loop() {
25    digitalWrite(13, HIGH); // turn the LED on (HIGH is the voltage level)
26    delay(1000); // wait for a second
27    digitalWrite(13, LOW); // turn the LED off by making the voltage LOW
28    delay(1000); // wait for a second
29  }

```


Step 4. Select your board.

You'll need to select the entry in the **Tools > Board** menu that corresponds to your Arduino. Select the **Seeeduino v4.2**.

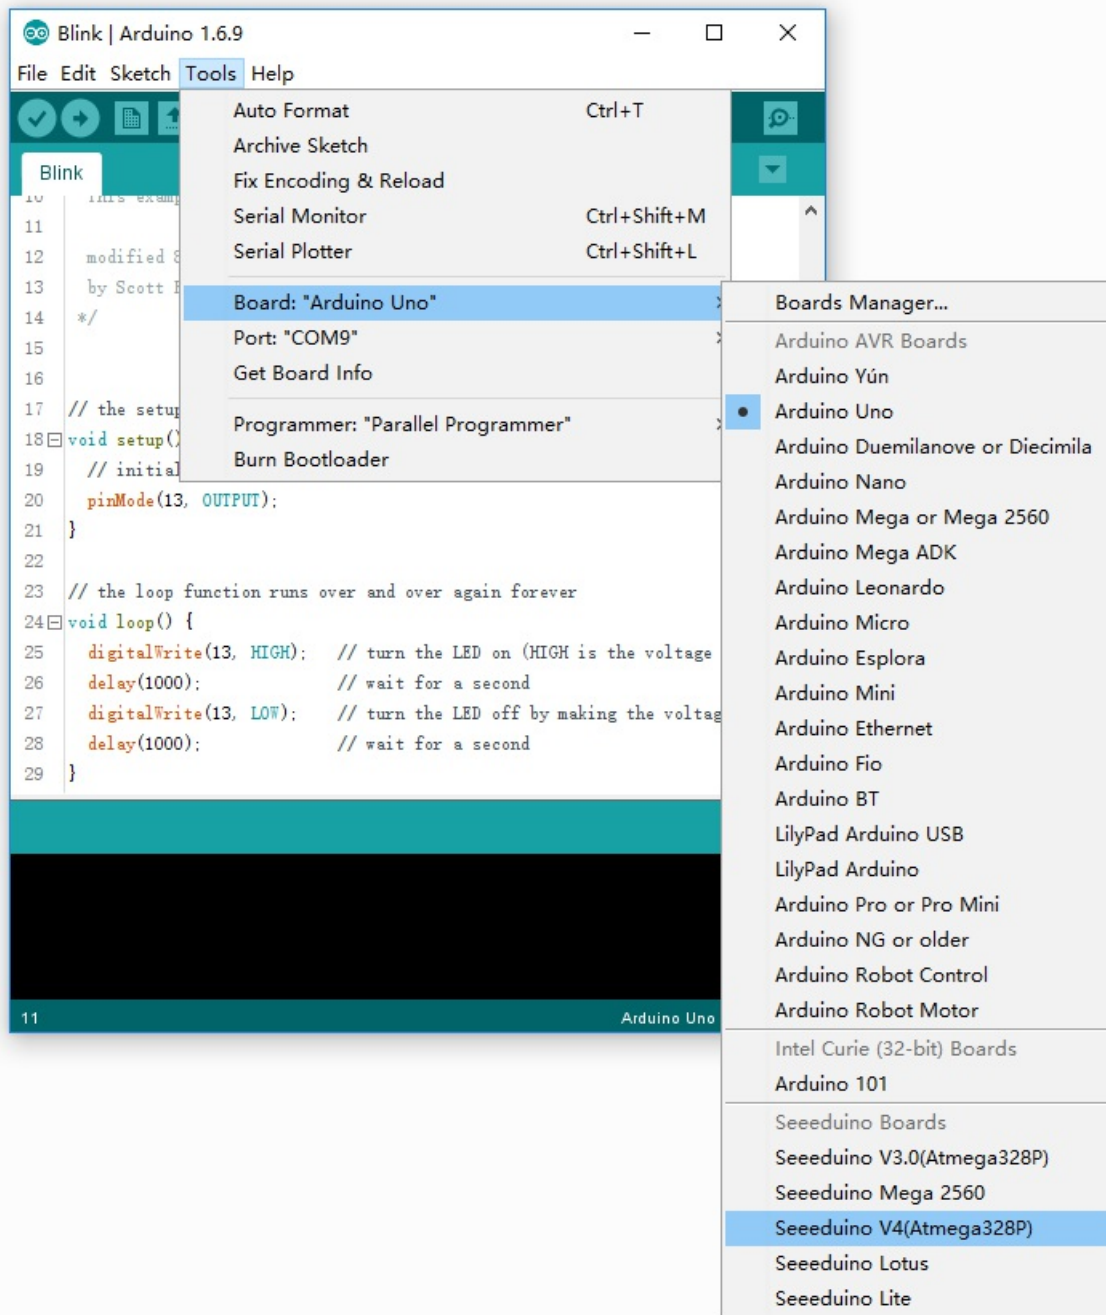

Step 5. Select your serial port.

Select the serial device of the Arduino board from the Tools | Serial Port menu. This is likely to be COM3 or higher (COM1 and COM2 are usually reserved for hardware serial ports). To find out, you can disconnect your Arduino board and re-open the menu; the entry that disappears should be the Arduino board. Reconnect the board and select that serial port.

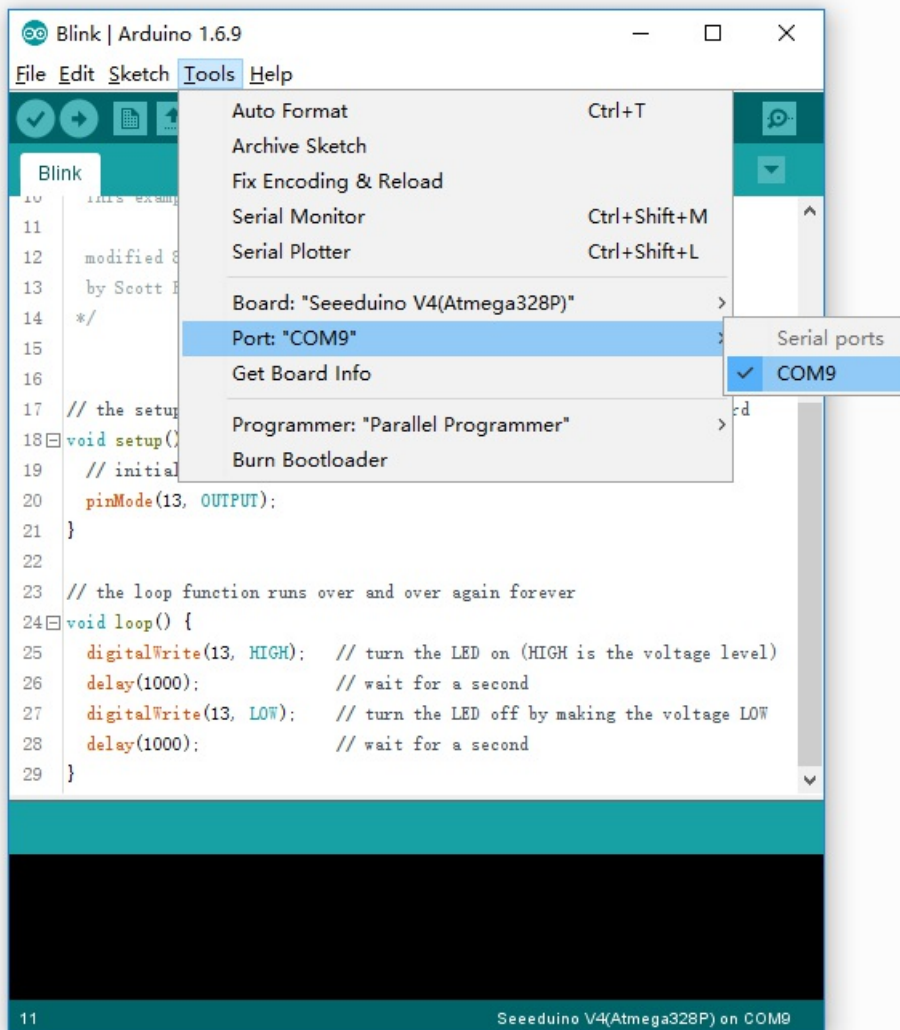


!!!Note

On the Mac or Linux, this should be something with `/dev/tty.USBmodem`.

Step 6. Upload the program.

Now, simply click the "Upload" button in the environment. Wait a few seconds - you should see the RX and TX LED indicators on the board flashing. If the upload is successful, the message "Done uploading."

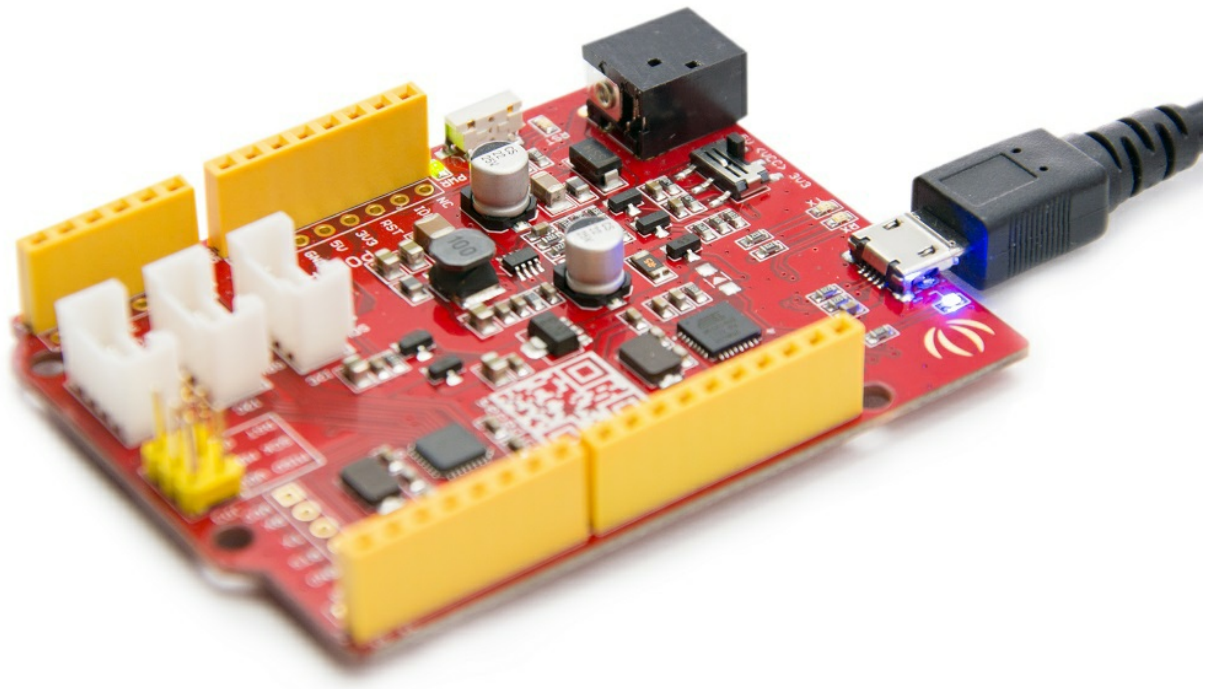


A few seconds after the upload finishes, you should see the pin 13 (L) LED on the board start to blink (in orange). If it does, congratulations! You've gotten Arduino up-and-running. If you have problems, please see the troubleshooting suggestions.



Application Ideas

- DIY
- IoT and Smart Home
- Robot
- Learning

Here is some funny project for your reference.

<p style="text-align: center;">Paper Man</p>  <p style="text-align: center;">Make it Now</p>	<p style="text-align: center;">Fingerprint Lock</p>  <p style="text-align: center;">Make it Now</p>	<p style="text-align: center;">Monitor Stand</p>  <p style="text-align: center;">Make it Now</p>
<p style="text-align: center;">Desk Promo</p>	<p style="text-align: center;">Tiger Machine</p>	<p style="text-align: center;">Colorful Pyramid</p>



[Make it Now](#)



[Make it Now](#)



[Make it Now](#)

Resources

- [PDF] [Download Wiki PDF](#)
- [Eagle] [Seeeduino V4.2 in EAGLE file](#)
- [PDF] [Seeeduino V4.2 in PDF](#)
- [Eagle] [Seeeduino V4.0 in EAGLE file](#)
- [PDF] [Seeeduino V4.0 in PDF](#)
- [Data sheet] [ATmega328P](#)
- [Data sheet] [ATmega16U2](#)
- [References] [Getting Started with Arduino](#)
- [References] [Arduino Language Reference](#)
- [References] [Download the Arduino Software\(IDE\)](#)
- [References] [Arduino FAQ](#)
- [References] [Arduino Introduction](#)
- [References] [Wikipedia page for Arduino](#)
- [References] [How to fit RF Explorer 3G+ IoT modules on Seeeduino](#)

FAQs

Please click [here](#) to see all Seeeduino V4.2 FAQs.