



Chipsmall Limited consists of a professional team with an average of over 10 year of expertise in the distribution of electronic components. Based in Hongkong, we have already established firm and mutual-benefit business relationships with customers from,Europe,America and south Asia,supplying obsolete and hard-to-find components to meet their specific needs.

With the principle of “Quality Parts,Customers Priority,Honest Operation,and Considerate Service”,our business mainly focus on the distribution of electronic components. Line cards we deal with include Microchip,ALPS,ROHM,Xilinx,Pulse,ON,Everlight and Freescale. Main products comprise IC,Modules,Potentiometer,IC Socket,Relay,Connector.Our parts cover such applications as commercial,industrial, and automotives areas.

We are looking forward to setting up business relationship with you and hope to provide you with the best service and solution. Let us make a better world for our industry!



## Contact us

Tel: +86-755-8981 8866 Fax: +86-755-8427 6832


Email & Skype: info@chipsmall.com Web: www.chipsmall.com

Address: A1208, Overseas Decoration Building, #122 Zhenhua RD., Futian, Shenzhen, China



### Assembly Instructions & general Information

1. **Mechanical Mounting:** Attach the backplane through the mounting holes in at least every second connector position at top and bottom using M2,5 screws and isolating washers.
2. **Chassis GND:** If noise reduction shall be achieved by connecting digital GND to Chassis GND, use conductive washers instead of isolating ones. Spring washers are recommended instead of flat washers. Creepage and clearance between screw and GND are in accordance with EN60950. It is maintained by means of layout when using isolating washers.
3. **VI/O:** Check VI/O coding (blue/yellow keys on connector P1 from front) and VI/O (power) bridge on rear side, default assembly is +5V (blue key at connector P1). If VI/O shall be set to 3,3V, use conversion kit (order# 21101-658, included keys and tool) to change keys and move the bridge on rear. For position of the bridge see drawing #1. The 2- and 3- slot backplanes use a V I/O cable on fastons at the side of the backplane instead of the V I/O bridge.
4. **Geographical Addressing (GA)** is set by default to start from number one from left (upper) position within the chassis. If more than one backplane shall be assembled, change of geographical addresses can be made. Cut copper links in between SMD pads to open, apply zero Ohm resistors to close. Package size shall be 0603. Position is labelled "nGA[x]" where "n" stands for slot# , and "x" for address#, see drawing #1.
5. **M66MHz Operation:** Schroff CPCI backplanes are designed in accordance with the requirements of CPCI Core Specification, Revision 3.0 (PICMG 2.0 R3.0). Up to 5 Slots 66MHz operation is possible, signal M66 is HIGH (open). Backplanes of higher slot count also fulfil the 66MHz operation requirements in terms of clock trace length and skew, but M66 is tied to GND to disable 66MHz operation by default. This link is made by a removable copper link. For test purposes it can be opened and closed again by using a zero Ohm resistor of size 0603. For position of the link see drawing #1.
6. **Hot Swap:** Schroff CPCI backplanes fulfil the requirements for Basic Hot Swap of the Hot Swap Specification PICMG 2.1 R2.0. The signal BD\_SEL# is tied to GND by a removable copper link. It can be replaced by a resistor-capacitor combination, both of package size 0603. Position is labelled "nB" where "n" stands for slot# , see drawing #1.
7. **Bridging & Termination:** Backplanes of slot numbers between 4 to 7 can be bridged. Schroff has developed a very flat bridge that fits underneath rear I/O boards. In case of a 64-bit 8 slot backplane the same connectors can be used to assemble a termination board. Termination is recommended in some very few cases if strong buffers are used and only the system and adjacent slots are occupied and all others are empty. For more information pl. see Schroff Technical Note "When should 8 Slot Backplanes terminated", downloadable from [www.schroff.de](http://www.schroff.de), "one click: 23006-868".
8. **Assembling of Power Cables:** M4 cable lugs should be used to connect the cables from the PSU to the powerbugs on the backplane. Maximum 2 cables are recommended per power bug. Please assemble the cable lugs with the flat side to the power bug to ensure the correct isolation distance between unisolated part of the power cable and unisolated parts of the backplane.

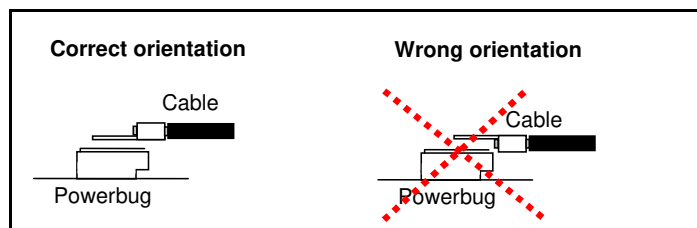

**Utility / SENSE Connector pinout**

	A	B			
6	○	○	6	nc	nc.
5	○	○	5	nc	-12V
4	○	○	4	+12V	3,3V
3	○	○	3	GND	+5V
2	○	○	2	FAL#	DEG#
1	○	○	1	nc	PRST#

**Sense**  
Voltage rails +5V; 3.3V; +12V and GND of these connectors are used for sense purposes. They should be connected to the backplane. Some Power Supplies need at least a connection to GND, otherwise the outputs overrun

**FAL#:** Signal driven by intelligent PSU's, at least one output has failed (is out of range)

**DEG#:** Signal driven by intelligent PSU's, PSU indicates that the supply is beginning to derate its power output

Cable assy (350mm):  
Schroff 23204 - 115



